

**Philips ProTouch
Stand Steamer**

Max 6 bar pump pressure

Up to 90g steam boost
No descaling needed
OptimalTEMP heated plate



GC625/26

Great results in just one stroke, no wet spots

with innovative Dual Heating Technology

Thanks to the innovative Dual Heating technology, the new PerfectCare garment steamer ensures powerful steam performance with no wet spots for great results effortlessly.

Ultimate convenience

- Maintenance free engine, no descaling needed*
- Wheels for easy transportation
- Easy steam selection (3 settings+ ECO) on handle

Reliable

- PVC free hose
- Steam refreshes garments and kills 99.9% of bacteria*
- Automatically switches to standby mode for peace of mind

Fast de-wrinkling for great results

- OptimalTEMP heated plate, guaranteed no burns*
- Triple precision tips on steam plate for challenging areas
- Dual Heating Technology
- Powerful & continuous steam
- Stable tilting board with quick dry cover

PHILIPS

Highlights

Dual Heating Technology



The innovative Dual Heating technology generates steam instantly at the base and reheats at the steamer head, for powerful penetrating steam, giving great results with no wet spots

OptimalTEMP heated steam plate



Steamer plate is actively heated to provide better de-wrinkling results with no wet spots. With OptimalTEMP technology, it guarantees no burns on all ironable fabrics.

Powerful & continuous steam




90g powerful steam boost penetrates deep into garments while 35g/min of continuous steam enables effortless wrinkle removal, for great de-wrinkling results.

Triple precision tips



The triple precision tips on the steamer head enable you to reach the challenging areas, such as the collar, the shoulder, and the in-between buttons, giving you precise results.

Tilting board & quick dry cover

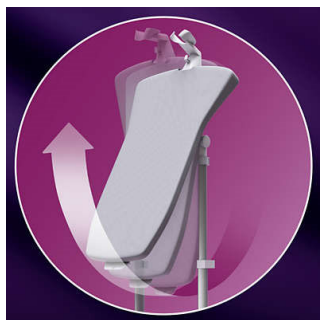

It can be tilted 30°, giving stable and comfortable support to make pleats and achieve crisp results. The shoulder shape board provides a better fit for garments. Board comes with a quick dry cover with enhanced steam permeability and breathability. It is durable with high heat resistance.

Maintenance free engine



Steamers need to be descaled regularly to ensure steam performance. Our new

innovative engine prevents scale from building up, for long lasting steam performance.

Easy steam selection on handle



By pressing the steam selection button on the handle, you can easily change steam level for different fabrics - no need to bend down! Set your preferred steam level for optimal results on different fabrics. Use low steam for thinner fabrics and a more powerful setting for thicker fabrics and coats. Use ECO mode to save energy consumption.

Wheels for easy transportation



Wheels for easy transportation

Wheels enable user to tilt and drag the stand steamer from one place to another easily.

Auto shut off

The steamer automatically switches to standby mode when the water tank is empty, so you have peace of mind even if you forget to switch it off.

Specifications

Easy to use

- Water tank capacity: 2000 ml
- Detachable water tank
- Refill any time during use
- Tap water suitable
- Power cord length: 1.8 m
- Precision steam tip
- Select steam level from handle
- Special water inlet: For extra hygiene
- Auto shut off
- Safe on all fabrics: Even delicates like silk
- PVC Free Hose

Technology

- OptimalTEMP technology
- For all ironable fabrics
- No burns

Accessories included

- Adjustable pole
- Glove for extra protection

Fast crease removal

- Power: 2200 W
- Steam boost: up to 90 g
- Continuous steam: 35 g/min
- Vertical steam
- Voltage: 220-240 V
- Ready to use: 2 minute(s)
- Variable steam: 3 levels

- Steam-on-demand
- Pressure Bar: Max 6 bar pump

Storage

- Integrated wheels: For easy transportation

Size and weight

- Packaging dimensions (WxHxL): 46.5 x 51 x 61.5 cm
- Board size (WxHxL): 41 x 74.5 x 5.1 cm
- Weight of iron: 0.69 kg
- Product dimensions (WxHxL): Base dimensions : 32 x 45.2 x 34 cm
- Cover size (WxHxL): 42.2 x 75.7 x 6.3 cm
- Weight of board: 1.7 kg
- Foam layer thickness: Cover thickness : 6 mm mm
- Total weight with packaging: 11.5 kg
- Ironing surface: 56.4 cm
- Weight of iron + base: 6.78 kg
- Pole dimensions extended: Height from ground to shoulder tip of Hanger : 155 cm

Green efficiency

- Energy saving mode
- Product packaging: 100% recycable
- User manual: 100% recycled paper

Guarantee

- 2 year worldwide guarantee



Issue date 2022-10-07

Version: 1.1.2

EAN: 08 71010 39251 32

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* On all ironable fabrics
* tested to IEC protocol with hard water for 500 hours to simulate 5 years of usage.
* tested by third party institute for bacteria types Escherichia coli 8099, Staphylococcus aureus ATCC 6538, Candida albicans ATCC 10231 with 1 minute steaming time (Technical Standard For Disinfection 2002-2.1.5)