

# PHILIPS

## NORELCO



Wet & dry electric  
shaver

Shaver 5000X series

SkinGlide Protective Coating

360° Flexing Heads

Anti-Corrosion Shaving System

PowerCut Blades



X5006/85

## Close shave. Extra skin protection\*

### With Skin Protect technology

Minimize skin irritation to look and feel your best every day. Philips 5000X Series with Skin Protect technology is made to give you a close shave with extra skin protection. Clinically tested on sensitive skin.

#### A close shave

- Gives a close, smooth and even shave

#### Convenience

- Flips open for easy cleaning
- Choose a convenient dry or refreshing wet shave
- Shave confidently with ergonomic anti-slip grip
- Fully washable and showerproof
- Complete your look with the precision trimmer.
- Travel with peace of mind
- 1-hour charging for 50 minutes shaving, 5-min quick charge

#### Sustainability

- USB-A charging, adapter not included. Plastic-free pack.

#### Skin Protect technology

- Glides smoothly for less irritation
- Keeps optimal skin contact even in difficult areas

## Shaver 5000X series

Wet & dry electric shaver

X5006/85

# Highlights

### SkinGlide Protective Coating



Shave with comfort. The SkinGlide Protective Coating with 100.000 micro-beads per square centimeter improves gliding by 20%\*\* to minimize skin irritation.

### 360° Flexing Head



The fully flexible shaving head turns 360 to give you optimal skin contact even in difficult areas and catch hairs avoiding excessive pressure peaks to minimize irritation.

### Anti-Corrosion Shaving System



Our shaver's blades are made from surgical-grade European steel that resists corrosion and prevents the blades from impurities. Hypoallergenic steel is skin friendly.

### ComfortCut Blades



Enjoy the long-lasting performance with the 27 self-sharpening ComfortCut blades from stainless steel. With 55.000 cutting actions per minute you cut each hair effectively and get a close shave and smooth, even finish every time.

### Anti-slip Grip




Take control of your shave. The rounded grip pattern is specially designed so you can hold the shaver in any position without slipping, even under the shower.

### Wet&Dry use



Adapt your shaving routine to your needs. With Wet & Dry, you can go for a comfortable dry shave or a refreshing wet shave. You can shave with gel or foam even under the shower.

### Showerproof

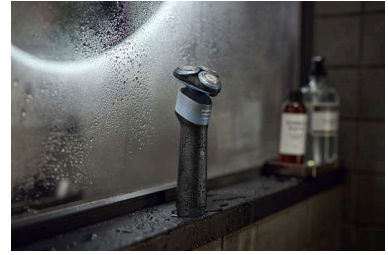

Shave under the shower without worry. The shaver is designed to be fully washable and showerproof

### Accessories



Refine and define your mustache and sideburns with the click-on precision trimmer—and complete your look with ease.

### One-Touch open



Just press the One-Touch button to open the shaver head, rinse and go.


## Shaver 5000X series

Wet & dry electric shaver

X5006/85

# Highlights

### Travel Lock

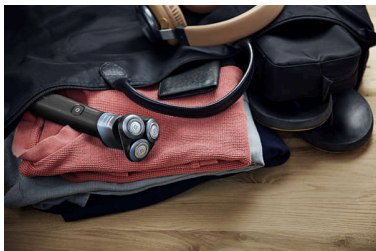


Ensure your shaver doesn't run out of battery unexpectedly. Press and hold the on/off LED button for 3 seconds to lock the shaver for travel, so it can't accidentally turn on and drain the battery.

### Charging & Shaving time



Get 50 minutes of shaving time from a 1-hour charge, or plug in for instant continuous power. In a hurry? Just 5 minutes of charging gives you enough power for one full shave.

### USB-A cable. Plastic-free pack

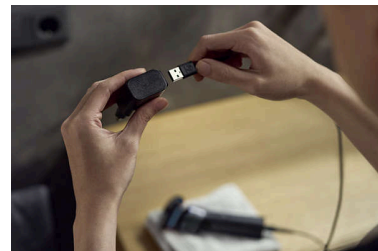

At Philips, we drive sustainability in all aspects of product creation. This packaging is recyclable and comes without any plastic parts. Our ambition is to reduce waste and minimize the number of USB adaptors we put in the market. Should you need an adaptor, please contact us via Consumer Care Center: [www.philips.com/support](http://www.philips.com/support)

## Shaver 5000X series

Wet & dry electric shaver

X5006/85

# Specifications

### Accessories

Precision trimmer

Travel and storage: Protective cap, Travel case

### Power

Charging: 1 hour full charge, 5 min quick charge

Run time: 50 minutes

Automatic voltage: 100-240 V

Battery type: Li-ion

Input voltage: 5 V

Maximum power consumption: 4.5 W

### Design

Color: Blue

Handle: Ergonomic standing grip

Shaving heads: Rounded

### Service

Replacement head: Replace every 2 yrs with SH30

2-year warranty

### Shaving Performance

ComfortCut: 27 blades, 55.000 cuts/minute

### Ease of use

Cleaning: One-touch open, Fully washable

Display: Battery level indicator, Travel lock

Wet & Dry: Waterproof IPX7, Showerproof

### Skin Protect technology

Skin Protection: SkinGlide Protective Coating,

Anti-corrosion Shaving System

Contour following: 360° Flexing head

