

PHILIPS

Wet & Dry electric shaver

Shaver Series 5000

SteelPrecision blades

Power Adapt sensor

360-D Flexing heads

Integrated pop-up trimmer



S5898/17



Powerful shave, gentle on skin with SkinIQ Technology

The Philips Series 5000 delivers a powerful shave, cutting now even more hair per stroke*. Equipped with advanced SkinIQ technology, the shaver senses and adapts to your hair density, for improved skin comfort.

A powerful shave

- Powerful performance in every pass
- Engineered for precision and cutting efficiency
- Flexible heads follow your facial contours

SkinIQ technology

- Adjusts to your beard for effortless shaving

For a convenient shave

- Up to 60 minutes of cordless shaving when fully charged
- 1-hour charging time and 5-min quick charge
- LED display with icons to use the shaver intuitively
- One-touch open for easy cleaning
- Shave wet, dry and even under the shower
- Precision trimmer integrated in the handle

Sustainability

- Convenient charging

Highlights

SteelPrecision blades



With up to 90.000 cutting actions per minute, the SteelPrecision blades shave close, cutting more hair per stroke*. The 45 high-performance blades are self-sharpening and made in Europe.

Power Adapt sensor



The intelligent facial-hair sensor reads hair density 250 times per second. The technology dynamically auto-adapts cutting power for an effortless and gentle shave.

360-D Flexing heads



Fully flexible heads turn 360° to follow your facial contours. Experience optimal skin contact for a thorough and comfortable shave.

Hair-Guide Precision heads




The new shape of the shaving heads is engineered for precision. The surface is enhanced with hair guiding channels, designed to move hair into an effective cutting position.

One-touch open



Clean the shaver with ease. At the touch of a button, flip open the shaver head and rinse with water.

Wet & Dry

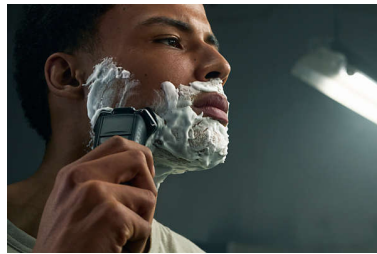

Adapt your shaving routine to your needs. With Wet & Dry, you can go for a comfortable dry shave or a refreshing wet shave. You can shave with gel or foam even under the shower.

Pop-up trimmer



Complete your look using the shaver's pop-up precision trimmer. Integrated into the shaver's body, it's the perfect way to maintain a mustache and trim sideburns.

60 minutes of cordless shaving



Shave cordlessly for up to 60 minutes after one full battery charge.

1-hour charging time



Charge your shaver fully in just 1 hour with the powerful and energy efficient lithium-ion battery. In a hurry? Plug in your shaver for 5 minutes and get enough power for 1 full shave.

Specifications

Accessories

Maintenance: Cleaning brush

Attachments: Beard styler

Integrated pop-up trimmer

Travel and storage: Soft pouch, Protective cap

USB-A cable included: Power adapter not included

Power

Battery Type: Li-ion

Automatic voltage: 5 V

Charging: 1 hour full charge, 5 min quick charge

Run time: 60 minutes

Stand-by power: 0.04 W

Max power consumption: 9 W

Design

Color: Deep Black

Handle: Rubber grip

Shaving heads: Angular

Consumer Trade Item

Height: 24.5 cm

Width: 16.2 cm

Length: 9.2 cm

Net weight: 0.339 kg

Gross weight: 0.554 kg

GTIN: 8720689008389

Country of origin: CN

Outer Carton

Height: 25.5 cm

Width: 33.8 cm

Length: 19.3 cm

Net weight: 1.356 kg

Gross weight: 2.488 kg

GTIN: 18720689008928

Service

2-year warranty

Replacement head SH71: Replace every 2 yrs with SH71

Other

Height: 79.8 cm

Width: 77.2 cm

Length: 86.7 cm

GTIN: 68720689008381

Shaving Performance

Shaving system: SteelPrecision blades

Contour following: 360-D Flexing heads

SkinIQ technology: Power Adapt sensor

Ease of use

Charging: USB-A Charging

Wet & Dry: Wet and dry use

Cleaning: One-touch open, Fully washable

Display: LED display, Battery level indicator, Travel lock

