

PHILIPS

Mobile projector

PicoPix MaxTV

120" in True FULL HD 1080p

Xtreme sound and portability

Android TV experience

Bluetooth boombox function



PPX720



Xtreme Brightness, Xtreme Sound and Portability

Based on Android TV, the PicoPix MaxTV projects images up to 120" in True Full HD. Thanks to multiple image corrections, automatic brightness, a battery lasting up to 4 h and a boombox function, you'll wonder how you ever lived without it!

Xtreme sound, brightness and portability

- Cinematic Experience in 1080p
- Mind-blowing sound
- Xtreme portability

Bespoke image correction

- Supercharged Image
- Smart Autofocus
- Automatic Brightness
- TI DLP technology / REC709

Android TV experience

- Android TV Experience
- ChromeCast Built-in

Connected and Protected

- Fully connected

Highlights

Smart Autofocus



One-click auto-focus eliminates the hassle and burden of a manual set-up. The high-resolution camera and AI-driven autofocus, will always ensure you get the clearest image, automatically.

Xtreme portability




An ultra-compact PicoPix Max TV projector packed with everything you need. Make the most of a 4 hour battery in projection mode or 10 hours in Bluetooth Speaker mode. The Powerbank function will also charge all your devices via the USB-C or USB-A port.

TI DLP technology / REC709



Texas Instruments DLP technology, used in 9 out of 10 cinemas worldwide, delivers vivid pictures, deep contrast and a bright image in any conditions. You can expect an unrivalled visual experience with vibrant colours that deliver 100% of the REC709 signal.

Android TV Experience

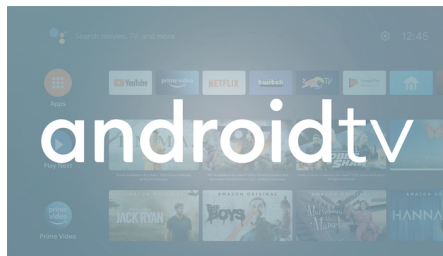

Your Philips Android TV Projector gives you the content you want when you want it. You can customise the home screen to display your favourite apps, making it effortless to start streaming the films and shows you love or pick up where you left off. Our OSD has a new intuitive UI design, which makes it a breeze to navigate and find your way around. Powered by the fastest AMLOGIC CPU, it provides a smooth, best in class Android TV experience.

Automatic Brightness



With the Auto Brightness feature, you won't even need to adjust the projector if the room becomes brighter or darker! The light sensor analyses the room light in real time and automatically tunes the brightness of the PicoPix Max TV.

ChromeCast Built-in



Chromecast built-in is a piece of technology that allows you to stream your favourite entertainment and apps from your phone, tablet or laptop right to your TV or speakers. Your phone acts as a simple, powerful remote. Just open the mobile apps you already know and love to quickly access your TV shows and

playlists. No new logins or downloads required. You can use your phone to search, browse, queue and control the projector from anywhere in the home, and keep using it without disrupting what's playing or draining your battery.

Supercharged Image



Place the projector wherever you wish! Auto keystone and four-corner correction help to eliminate crooked and distorted images for a perfectly proportioned picture, even if the device is not straight in front of the wall. It also gives users an optimal image from virtually any angle and eliminates many of the hassles of an optimal setup. Big space, small wall? No worries! The digital zoom can maximise the image size even if your projector is far away from the wall. Thanks to the 1.2 throw ratio, small spaces get a bigger picture. Max TV requires as little as 3.2 m to project stunning 120'' picture

Cinematic Experience in 1080p



Native 1080p Full HD resolution from such a compact product means you no longer have to choose between a portable or high-resolution projector. With the PicoPix MaxTV, you can watch all your favourite films and TV shows, or play games on a massive 120'' view with best-in-class resolution and HDR10. The completely re-designed cooling system and 4 LED channels deliver incredible brightness, which is 15% superior to Max and dramatically improves the contrast and avoiding washed-out images.

Specifications

Technology

Display technology: DLP
LED light sources: Last over 30,000 hours
Resolution: 1920 x 1080 pixels
Resolution supported: 4K
Aspect ratio: 16:9
Throw ratio: 1.2:1
Contrast ratio: 1000:1
Focus adjustment: Auto
Keystone correction: Auto
4 corner correction
Digital Zoom
Light sensor: auto brightness adjustment
Screen size (diagonal): 76 cm-305 cm/30"-120"

Screen distance: 27 cm–319 cm / 10"–126"
Integrated media player
Operating system: Android TV

Connection

Wi-Fi: 802.11a/b/g/n/ac 2.4+5GHz,
ChromeCast Built-in
Bluetooth: Bluetooth 5.0, Connect external speaker
USB: USB 2.0, USB Type-C
HDMI: x 1
Audio out: 3.5 mm jack
SPDIF

Sound

Internal speaker: 2 x 12 W

Standard package includes

Projector: PicoPix projector
Remote control: Airmote control
Travel pouch
Warranty card
Quick start guide
Power adapter: EU UK US CH

Dimensions

Weight: 1.96 kg
Unpacked (W x D x H): 158 x 150 x 119 mm

