

# User Manual



Register your product and get support at www.philips.com/support

# **Table of contents**

Introduction3
Dear customer3
About this user manual3
What's in the box3
Product highlights3
1 General safety information4
Setting up the product4
Repairs4
Power supply5
2 Overview5
Top view5
Front view6
Side view6
Rear view 6
Remote control6
Access home menu7
3 Initial operation7
Placing projector7
Changing screen size8
Connecting power supply8
Preparing the remote control9
Power on and setup9
4 Connect to playback devices10
Connecting to devices through HDMI10
Connecting to a computer through VGA10
Connecting to external speakers or headphones11

•	Wireless projection with Android devices	11
ŝ	Wireless projection with	
	iOS devices	12
7	Connect to wireless speaker	13
3	Media playback	13
Иc	ovie playback	13
Λι	ısic playback	14
Ph	oto playback	14
9	Change settings	15
Pic	ture settings	15
Νi	Fi settings	15
3lı	uetooth settings	15
aı	nguage settings	15
٩d	vanced settings	15
Re	store default settings	15
0	Service	16
Σl∈	eaning	16
Jp	date software	16
Γrc	publeshooting	16
1	Appendix	19
Гес	chnical data	19

# Introduction

#### Dear customer

Thank you for purchasing this projector.

We hope you enjoy this product and the many functions it offers!

#### About this user manual

The quick start guide supplied with this product allows you to start using this product quickly and easily. Detailed descriptions can be found in the following sections of this user manual.

Read the entire user manual carefully. Follow all safety instructions in order to ensure proper operation of this product (see General safety information, page 4). The manufacturer accepts no liability if these instructions are not followed.

#### Symbols used

#### Notice



#### **Troubleshooting**

This symbol indicates tips that will help you in using this product more effectively and easily.

#### DANGER!



#### Danger of personal injury!

This symbol gives warning of danger of personal injury. Physical injury or damage can result from improper handling.

#### **CAUTION!**




#### Damage to the product or loss of data!

This symbol gives warning of damage to the product and possible loss of data. Damage can result from improper handling.

#### What's in the box

- (1) NeoPix Prime One projector (NPX535/INT)
- (2) Remote control with 2 AAA batteries
- 3 A/C power adapter
- (4) Lens cover
- Ouick Start Guide
- (6) AC power cable with plug x 4

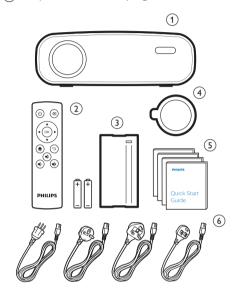

# **Product highlights**

#### Connecting to devices with HDMI output

With an HDMI cable, you can connect the projector to a playback device (see Connecting to devices through HDMI, page 10).

#### Wireless Screen Mirroring (Android and iOS)

With the Wireless Screen Mirroring function, you can share the screen of your smartphone without a cable. In order to allow screen mirroring, your smartphone must support the screen mirroring feature. This projector works with Miracast-compatible Android phones and iPhones with iOS 7/8/9/10 and 11.

Introduction 3

# 1 General safety information

Take note of all warning and safety notes indicated. Do not make any changes or settings that are not described in this user manual. Incorrect operation, and improper handling can lead to physical injury, damage to the product or loss of data.

# Setting up the product

This product is for indoor use only. Place the product securely on a stable, flat surface. To help avoid possible injuries to persons or damage to the product itself, position all cables in such a way that no one will trip over them.

Do not operate the product in damp rooms. Never touch the mains cable or the mains connection with wet hands.

Never operate the product immediately after moving it from a cold location to a hot location. When the product is exposed to such a change in temperature, moisture may condense on the crucial internal parts.

The product must have sufficient ventilation and must not be covered. Do not put the product in closed cabinets, boxes, or other enclosures when in use.

Protect the product from direct sunlight, heat, intense temperature fluctuations and moisture. Do not place the product in the vicinity of heaters or air conditioners. Observe the information on temperature listed in the technical data (see Technical data, page 19).

Prolonged operation of the product causes the surface to become hot. In case of overheating, the product automatically switches to standby mode.

Do not allow liquids to leak into the product. Turn off the product and disconnect it from the mains supply if liquids or foreign substances leaked into the product. Have the product inspected by an authorised service centre.

Always handle the product with care. Avoid touching the lens. Never place heavy or sharp objects on the product or on the power cable.

If the product gets too hot or emits smoke, shut it down immediately and unplug the power cable. Have your product checked by an authorised service centre. Keep the product away from open flames (e.g. candles).

#### DANGER!



Risk of explosion with incorrect type of batteries!

There is a risk of explosion if the wrong battery type is used.

Do not expose the batteries (battery pack or embedded batteries) to excessive heat such as sunshine, or open fire.

Under the following conditions, a layer of moisture can appear inside the product which can lead to malfunctions:

- if the product is moved from a cold to a warm area:
- after a cold room is heated;
- when the product is placed in a damp room.

Proceed as follows to avoid any moisture buildup:

- Seal the product in a plastic bag before moving it to another room, in order for it to adapt to room conditions.
- 2 Wait one to two hours before you take the product out of the plastic bag.

The product should not be used in a very dusty environment. Dust particles and other foreign objects may damage the product.

Do not expose the product to extreme vibrations. This may damage the internal components.

Do not allow children to handle the product without supervision. The packing materials should be kept out of the hands of children.

For your own safety, do not use the product during thunderstorms with lightning.

## Repairs

Do not repair the product yourself. Improper maintenance can result in injuries or damage to the product. The product must be repaired by an authorised service centre.

Please find the details of authorised service centres on the warranty card supplied with this product.

Do not remove the type label from this product, as this will void the warranty.

# **Power supply**

Use only a power adapter which is certified for this product (see Technical data, page 19). Check whether the mains voltage of the power supply matches the mains voltage available at the setup location. This product complies with the voltage type specified on the product.

The power outlet shall be installed near the product and shall be easily accessible.

#### **CAUTION!**



Always use the () button to turn the projector off.

Turn off the product and unplug from the power outlet before cleaning the surface (see Cleaning, page 16). Use a soft, lint-free cloth. Never use liquid, gaseous or easily flammable cleaners (sprays, abrasives, polishes, alcohol). Do not allow any moisture to reach the interior of the product.

#### DANGER!




#### Risk of eye irritation!

This product is equipped with a high power LED (Light Emitting Diode), which emits very bright light. Do not look directly into the projector lens during operation. This could cause eye irritation or damage.

# 2 Overview

## Top view

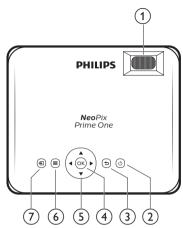

- (1) Focus adjustment knob
  - Adjust image sharpness.
- ② (J)
  - Switch the projector on or off.
  - When the projector is switched on, the LED turns white. When the projector is off, the LED turns red.
- ③ →
  - Return to a previous menu screen.
- (4) OK

Confirm a selection or entry.

- (5) Navigation buttons
  - · Navigate menu options.
  - Press  $\blacktriangleleft/\triangleright$  to change a selection.
- (6) **=**


Access the settings menu.

7) 🗗

Access the home menu


Overview 5

### Front view



- 1 Projection lens
- (2) Front IR sensor

#### Side view




- 1
  - 3.5 mm audio output; connect to external speakers or headphones.
- 2 AUX
  - 3.5 mm audio input; works only through VGA connection.
- 3 MicroSD card slot

Connect to a MicroSD card for media play.

- (4) HDMI1
  - Connect to the HDMI output on a playback device.
- (5) **HDMI2** 
  - Connect to the HDMI output on a playback device.
- (6) USB port
  - Connect to a USB storage device for media play.
- (7) DC

Connect to the power supply.

#### Rear view




1) VGA port

Connect to the VGA port on a computer.

(2) Rear IR sensor

#### Remote control

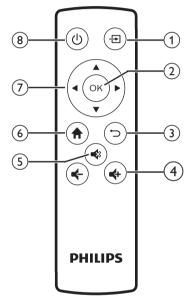

1 7

Access the home menu.

(2) OK

Confirm a selection or entry.

3 ←

Return to a previous menu screen.

(4) **4**+/**4**-

Increase or decrease volume.

5) **4**8

Mute or restore volume.

6 🛖

Access the home menu.

#### (7) Navigation buttons

- Navigate menu options.
- Press **◄/▶** to change a selection.
- ® (J)
  - · Switch the projector on or off.
  - When the projector is switched on, the LED turns white. When the projector is off. the LED turns red.

# Access home menu

The home menu provides easy access to connected devices, setup and other useful features in the projector.

- 1 Press  $\hat{\mathbf{n}}$ . The home menu is displayed.
- 2 Press the Navigation buttons and OK to select the following.



- EZCast: Start wireless connection to an iPhone for Screen Mirroring.
- EZMirror: Start wireless connection to an Android device for Screen Mirroring.
- VGA: Select the digital device connected to VGA on the projector.
- Media: Access media playback from USB or Micro SD card.
- HDMI 1: Select the digital device connected to HDMI 1 on the projector.
- HDMI 2: Select the digital device connected to HDMI 2 on the projector.
- Settings: Access menus to change picture, WiFi, Bluetooth and other settings.

# 3 Initial operation

# Placing projector

You can install the projector in 3 different configurations. Follow the guidelines below for different projector placement.

#### Notice




For overhead mounting on ceiling, purchase a projector mount recommended by an installation professional and follow the instructions that come with the mount.

Before mounting on the ceiling, make sure the ceiling can support the weight of the projector and mounting kit.

For ceiling installation, this product must be securely attached to the ceiling in accordance with the installation instructions. An improper ceiling installation may result in accident, injury or damage.


#### Front table

Place the projector on a table in front of the projection screen. This is the most common way to position the projector for quick setup and portability.



#### Front ceiling

Mount the projector on the ceiling with upside up in front of the projection screen. A projector mount is required to mount the projector on ceiling.



Initial operation 7


#### Rear table

Place the projector on a table behind the projection screen. A special rear projection screen is required.



#### Rear ceiling

Mount the projector on ceiling with upside up behind the projection screen. To mount the projector on ceiling behind the screen, a projector mount and a special rear projection screen is required.



# Changing screen size

The projection screen size (or size of images) is determined by the distance between the lens of the projector and the projection surface.

- The projection image size is to up to 80" (203 cm).
- The projection distance is 80 cm -200 cm/24" - 60".


# **Connecting power supply**



#### **CAUTION!**

Always use the () button to turn the projector on and off.

- Select a supplied power cable with an appropriate power plug (EU, UK, US, CH).
- 2 Connect the power adapter with the power cable to the DC socket on the projector, and then to the wall outlet.
  - The LED on the projector turns red.

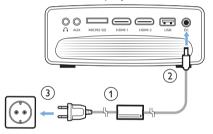

# Preparing the remote control

#### **CAUTION!**



The improper use of batteries can lead to overheating, explosion, risk of fire and injury. Leaking batteries can possibly damage the remote control.


Never expose the remote control to direct sunlight.

Avoid deforming, dismantling or charging the batteries.

Avoid exposure to open fire and water.

Replace empty batteries immediately. Remove the batteries from the remote control if not in use for long periods of time


- 1 Open the battery compartment.
- 2 Insert the supplied batteries (type AAA) with correct polarity (+/-) indicated.
- 3 Close the battery compartment.

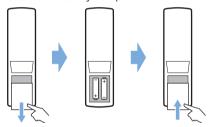


 When using the remote control, point the remote control at the IR sensor on the projector, and make sure there is no obstacle between the remote control and the IR sensor.

## Power on and setup

- 1 Press (1) to turn on the projector. The LED on the projector turns from red to white.
  - To turn off the projector, press () again.
     The LED on the projector turns from white to red.
  - The distance between the projector and the screen determines the actual size of the image.
- 2 To adjust the screen height when placing the projector on the table, turn the angle adjustment knob located on the bottom of the projector.

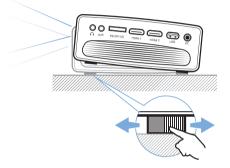

3 To adjust image focus, turn the focus knob on the top of the projector.

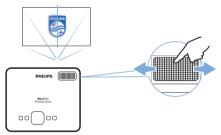

Initial operation 9

# 4 Connect to playback devices

#### Notice




Make sure all devices are disconnected from the power outlet before establishing or changing any connections.

# Connecting to devices through HDMI

Connect a playback device (e.g. a Blu-ray player, gaming console, camcorder, digital camera or PC) to the projector through HDMI connection. With this connection, images are shown on the projection screen, and audio is played on the projector.

1 Using an HDMI cable, connect the HDMI 1 or HDMI 2 connector on the projector to the HDMI output on the playback device.

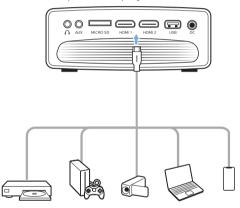

2 Access the home menu and select HDMI 1 or HDMI 2 input source.

# Connecting to a computer through VGA

Connect a computer (e.g. a desktop or laptop) to the projector. With this connection, images are shown on the projection screen.

#### Notice



Many laptops do not activate the external video output automatically when you connect a second display such as a projector. Check your laptop user manual to find out how to activate the external video output.

 Using a VGA cable, connect the VGA connector on the projector to the VGA output on a computer.



On your computer, adjust the screen resolution of the computer to the correct setting and switch the VGA signal to an external monitor. The following resolutions are supported:

	Resolution	Image refresh rate
VGA	640 x 480	60 Hz
SVGA	800 x 600	60 Hz
XGA	1024 x 768	60 Hz
WXGA	1280 x 768	60 Hz
HD	1280 x 720	60 Hz
FULL HD	1920 x 1080	60 Hz

- 3 Access the home menu and select VGA input source. Images are shown on the projection screen.
- 4 You can output audio from the computer to the projector after the VGA connection is made.
- Using a 3.5 mm audio cable, connect the AUX connector (3.5 mm) on the projector to the analogue audio output (3.5 mm jack, or red and white jacks) on the computer.



#### Notice



AUX connection only works through VGA connection.

# Connecting to external speakers or headphones

Connect external speakers or headphones to the projector. With this connection, audio from the projector is played through the external speakers or headphones.

#### DANGER!



#### Danger of hearing damage!

hearing damage.

Before connecting the headphones, turn down the volume on the projector. Do not use the projector over a longer time at high volume — especially when using headphones. This could lead to

- 1 Using a 3.5 mm audio cable, connect the ∩ connector on the projector to the analogue audio input (3.5 mm jack, or red and white jacks) on the external speakers. Or connect the ∩ connector on the projector to headphones.
  - The speakers of the projector are deactivated automatically when the external speakers or headphones are connected to the projector.



When connecting to the headphones, use the volume control on the remote control to adjust the volume to a comfortable level.

# 5 Wireless projection with Android devices

#### What you need

- An Android device which supports Miracast (or Screen Mirroring). The feature name can be also known as Screencast, Screen Sharing, WiFi Direct, and Wireless Display, etc. Not all Android devices have this feature. Refer to your device user manual for details.
- · Turn on WiFi on your Android device.
- Turn on WiFi on the projector (press ↑ and select Settings – WiFi Settings – Enable WiFi – On).
- 1 Press  $\emptyset$  to turn on the projector. The home menu is displayed.
  - Or when the projector is in operation, press  $\uparrow$  to display the home menu.
- 2 Use the Navigation buttons to select EZMirror, and then press OK to enter EZMirror mode.
  - The message window is displayed to prompt you to connect your Android device to the projector. The projector name shown in the WiFi network is given in the message.



- 3 On your Android device, access the WiFi settings, and select the 'Wireless Display' option. Then select the projector name under 'Wireless Display' to connect your Android device to the projector.
- 4 After successful connection, the screen content of your Android device is casted to the projection surface.

# 6 Wireless projection with iOS devices

#### What you need

- Turn on WiFi on your iPhone.
- Turn on WiFi on the projector (press ♠ and select Settings - WiFi Settings - Enable WiFi - On).
- 1 Press  $\Theta$  to turn on the projector. The home menu is displayed.
  - Or when the projector is in operation, press  $\uparrow$  to display the home menu.
- 2 Use the **Navigation buttons** to select *EZCast*, and then press **OK** to enter *EZCast* mode



- 3 The message window is displayed to prompt you to connect your iPhone to the WiFi network which is named after the projector name. The WiFi network name and the password are given in the message.
  - By default, the projector name is 'NeoPixPrimeone-XXXXXXX' ('X' indicates a letter or digit), and the password is 12345678.

  - To change the password, press and select Settings - WiFi Settings - Screen Mirroring Settings - Password, then use the pop-up virtual keyboard to input letters and digits.
- 4 On your iPhone, access the WiFi settings and select the WiFi network of the projector to connect your iPhone to the network.
- 5 On your iPhone, access 'Control Center' by sliding the screen up, and select the 'Screen Mirroring' option. Then select the projector name under 'Screen Mirroring' to connect your iPhone to the projector.

6 After successful connection, the screen content of your iPhone is casted to the projection surface.

#### Casting online video

You can stream online video from your iPhone to be played on the full projection screen.

- 1 Connect the projector to the Internet. Press ★ and select Settings - WiFi Settings -Screen Mirroring Settings - Internet, then select your WiFi network name and use the pop-up virtual keyboard to input WiFi network password.
- 2 Select Mirror + Stream for video casting. Press ★ and select Settings - WiFi Settings - Screen Mirroring Settings - Default Mode, then press ▲/▼ to select Mirror + Stream.
  - Mirror only is used to mirror the screen content of your iPhone to the projection screen
- 3 Connect your iPhone to the projector for screen mirroring. Repeat the steps described in the section of "Wireless projection with iOS devices".
- 4 View online video on your iPhone, and tap the TV icon on the video picture to access Apple TV mode. The video is now cast and played on the full projection screen.

#### Trademark notice

Apple, AirPlay and the AirPlay logo are trademarks or registered trademarks of Apple, Inc. in the US and other countries.

Google, Android and the Android logo are trademarks or registered trademarks of Google, Inc. in the US and other countries.

# 7 Connect to wireless speaker

Through Bluetooth, you can stream music wirelessly from the projector to a Bluetooth speaker.

#### Notice



The projector cannot be connected to a smartphone or tablet for music streaming through Bluetooth.

- 1 Turn on Bluetooth on the projector. Press ★ and select Settings - Bluetooth Settings - Enable Bluetooth - On.
- On your Bluetooth speaker, turn on Bluetooth (see your device manual for details)
- 3 On the projector, initialize Bluetooth searching and connecting of your speaker. Press ★ and select Settings - Bluetooth Settings - Bluetooth Settings.
- 4 If your Bluetooth speaker is connected to the projector, the name of your Bluetooth speaker is displayed on the Bluetooth device list of the projector. Select your Bluetooth speaker from the device list for connection.
  - After successful connection, you can stream music wirelessly from the projector to your Bluetooth speaker.







# 8 Media playback

This section helps you use the projector to play media from a wide range of sources.

#### Notice




The projector supports a USB storage device that is formatted for FAT16 or FAT32 file systems.

# Movie playback

#### Supported file formats

The following file formats are supported: MP4, RMVB, AVI, RM, MKV

- Connect a USB storage device to the USB port on the projector.
  - Or connect a Micro SD card to the MICRO SD slot on the projector.



- 2 Press \(\frac{1}{2}\) to display the home menu on the projection screen.
- 3 Press the Navigation buttons and OK to select Media. The media format options are displayed.
- 4 Select USB or Card as a media format.
- 5 The media player screen is displayed.



- Music: access and play audio files only.
- · Video: access and play video files only.
- Photo: access and play photo files only.
- 6 Select Video to activate video media player and access video files.
  - If video media player is selected, only the playable video files can be displayed.

- 7 Select a video file and press **OK** to play video.
- 8 During video playback, press **OK**. The playback control icons are displayed at the bottom of the projection screen. You can access the following playback functions.
  - · Select a previous or next video file
  - · Fast search backward or forward
  - Pause or resume play
  - Stop play
  - Select a play mode: play only the current file/repeat all/repeat one
- 9 Select a control function and press **OK** to trigger the control.

# Music playback

#### Supported file formats

The following file formats are supported: MP3, WMA, OGG, AAC, FLAC, APE, WAV

1 Repeat step 1 to 4 in 'Movie playback', and the media player screen is displayed.




- · Music: access and play audio files only.
- · Video: access and play video files only.
- Photo: access and play photo files only.
- 2 Select Music to activate music media player and access music files.
  - If music media player is selected, only the playable music files can be displayed.
- 3 Select a music file and press **OK** to play music.
- 4 During music playback, press **OK**. The playback control icons are displayed at the bottom of the projection screen. You can access the following playback functions.
  - · Select a previous or next music file
  - · Fast search backward or forward
  - Pause or resume play
  - · Stop play
  - Select a play mode: play only the current file/repeat all/repeat one
- 5 Select a control function and press **OK** to trigger the control.

# Photo playback

#### Supported file formats

The following file formats are supported: BMP. PNG. JPEG

1 Repeat step 1 to 4 in 'Movie playback', and the media player screen is displayed.



- Music: access and play audio files only.
- Video: access and play video files only.
- Photo: access and play photo files only.
- 2 Select *Photo* to activate photo media player and access photo files.
  - If photo media player is selected, only the playable photo files can be displayed.
- 3 Select a photo file and press **OK** to display a photo.
- 4 When a photo is displayed, press OK. The playback control icons are displayed at the bottom of the projection screen. You can access the following playback functions.
  - Rotate a photo clockwise or anticlockwise
  - Start slide show
  - Restore the photo to its original state
  - · Access current file information.
- 5 Select a control function and press **OK** to trigger the control.

# 9 Change settings

This section helps you change the settings of the projector.

## **Picture settings**

- 1 Press 🛖.
- 2 Select Settings, and then press OK.
- 3 Select Picture Settings, and then press **OK**.
- 4 Select a picture option, and then press **◄/**► to change:
  - · Brightness: Set color brightness.
  - Contrast: Set color contrast.
  - Saturation: Set color saturation
  - · Sharpness: Set image sharpness.

# WiFi settings

- 1 Press 🛖.
- 2 Select Settings, and then press OK.
- 3 Select WiFi Settings, and then press OK.
- 4 Through the WiFi settings, you can make the following changes:
  - Turn WiFi on or off on the projector.
  - Connect the projector to the Internet.
     Use the pop-up virtual keyboard to input letters and digits.
  - Change the password of the WiFi network created by the projector. Use the pop-up virtual keyboard to input letters and digits.
  - Change the name of the projector shown in the WiFi network. Use the pop-up virtual keyboard to input letters and digits.

# **Bluetooth settings**

- 1 Press A.
- 2 Select Settings, and then press OK.
- 3 Select *Bluetooth Settings*, and then press **OK**.
- 4 Through the Bluetooth settings, you can make the following changes:
  - Turn Bluetooth on or off on the projector.
  - Enable Bluetooth searching and connection of a Bluetooth speaker for music streaming.

#### Notice



The projector cannot connect to a smartphone or tablet for streaming music through Bluetooth.

# Language settings

- 1 Press A.
- 2 Select Settings, and then press **OK**.
- 3 Select Language, and then press 

  √ to select your desired language for on-screen menu.

# **Advanced settings**

- 1 Press 🛖.
- 2 Select Settings, and then press OK.
- 3 Select *Advanced Settings*, and then press **OK**
- 4 Through the Advanced Settings, you can make the following changes:
  - Vertical Keystone: You can manually correct keystone or distorted images in the vertical orientation. Press ◀/▶ to adjust the image shape.
  - Change firmware upgrade method: Online or USB.
  - Check the projector's information including model name, brand, and firmware version.

# Restore default settings

- 1 Press A.
- 2 Select Settings, and then press **OK**.
- 3 Select Reset All, and then press **OK**.
- 4 Follow the on-screen instructions to start or cancel resetting.

Change settings 15

# 10 Service

# Cleaning

#### DANGER!



#### Instructions for cleaning!

Use a soft, lint-free cloth. Never use liquid or easily flammable cleansers (sprays, abrasives, polishes, alcohol, etc.). Do not allow any moisture to reach the interior of the projector. Do not spray the projector with any cleaning fluids.

Wipe over the surfaces gently. Be careful that you do not scratch the surfaces

#### Cleaning the lens

Use a soft brush or lens cleaning paper for cleaning the lens of the projector.

#### DANGER!



#### Do not use any liquid cleaning agents!

Do not use any liquid cleaning agents for cleaning the lens, to avoid damaging the coating film on the lens.

# **Update software**

The latest software of the projector can be found on www.philips.com/support for you to get the best features and support from the projector.

Before you update the software of the projector, check the current software version:

Press 
 <sup>1</sup>
 <sup>2</sup>
 <sup>2</sup>

#### CAUTION!



Do not turn off the projector or remove the USB flash drive during the update.

# **Update SW through Internet**

- 1 Connect the projector to the Internet. Press ♠, and then select Settings - WiFi Settings - Screen Mirroring Settings -Internet.
  - Use the pop-up virtual keyboard to input letters and digits for wireless router connection.
- 2 Press ♠, and then select Settings -Advanced Settings - Firmware Upgrade -Online.
  - If an upgrade media is detected, you are prompted to start or cancel the update.
- 3 Follow the on-screen instructions to complete the update.

### **Update SW through USB**

- Check the latest software version on www.philips.com/support. Find your product (model number: NPX535/INT), and locate 'Software and drivers'.
- 2 Download the software into the USB flash drive. Unzip the downloaded software file and save it in the root directory of the USB flash drive.
  - After unzipping, make sure "ACTUPGRADE.gz" file is included.
- 3 Connect the USB flash drive to the projector.
- 4 Press ♠, and then select Settings -Advanced Settings - Firmware Upgrade -USB.
- 5 Follow the on-screen instructions to complete the update.

# **Troubleshooting**

## Power cycling

If a problem occurs that cannot be corrected with the instructions in this user manual, follow the steps given here.

- 1 Turn the projector off by pressing ().
- 2 Wait at least ten seconds.
- 3 Turn the projector on by pressing (1) once.
- 4 If the problem persists, please contact our technical service centre or your dealer.

Problems	Solutions
The projector cannot be turned on.	Disconnect and reconnect the power cable, and try to turn the projector on again.
The projector cannot be turned off.	• Press and hold $0$ longer than ten seconds. If this does not work, disconnect the power cable.
No image from the external HDMI device.	<ul> <li>Check if the correct HDMI input is selected (HDMI 1 or HDMI 2).</li> <li>Disconnect the HDMI cable or switch off the HDMI device.</li> <li>Wait three seconds.</li> <li>Reconnect the HDMI cable or switch on the HDMI device again.</li> </ul>
No sound from the external connected device.	<ul> <li>Check the cables to the external device.</li> <li>Check that the sound is activated on the external device.</li> <li>Only the original cables from the device manufacturer may function.</li> </ul>
No sound from external HDMI output device.	On the HDMI output device, set the audio setting to Multichannel (Raw data) & Stereo (PCM).
No sound when you connect your computer via HDMI cable.	Check that the sound is activated on the computer.
Only the home menu appears and not the image from the external device.	Check if the cables are connected to the correct sockets.
	Check that the external device is turned on.
	Check if the video output of the external device is turned on.
Only the home menu appears and not the image from the connected computer.	Check that the VGA output of the computer is turned on.
	Check if the resolution of the computer is set to 1920*1080 (for VGA connection) or 1080P (for HDMI connection).
The projector turns itself off.	When the projector is running for a long period of time, the surface becomes hot.
	Check that the power cable is connected correctly.
The projector cannot read the USB stick.	The projector does not support the exFAT file system.
	Format the USB stick in FAT format, then use it.
The projector does not react to remote control commands.	Check the batteries of the remote control.
Measures to take if Screen Mirroring does not work anymore after a firmware update of an Android or iOS device?	We recommend checking regularly for new firmware of your projector (see Update software, page 16).

Service 17

Problems	Solutions
Screen mirroring does not work with the available Android device.	<ul> <li>In order to allow screen mirroring, your device must support Miracast. Not all Android devices support this function. The function name can be also known as Screencast, Screen Sharing, WiFi Direct, Wireless Display, etc</li> <li>Please refer to the user manual of your Android device to check if this function is supported and how it can be enabled.</li> </ul>
When I view videos, the sound or the picture is sometimes distorted or the sound is not synchronized to the picture.	The available WiFi bandwidth is insufficient for sending the video flawlessly from the smartphone to the projector. This can happen if one or more WiFi networks operate in the same frequency range nearby. Certain IoT devices (e.g. ZigBee enabled devices) also operate in this frequency range.  Your smartphone is not fast enough to compress the screen data and send it simultaneously over WiFi.  Your smartphone may maintain parallel connections to your home network and the projector. This will reduce the available bandwidth. Disabling temporarily the connection to your home network may help.
The temperature of the projector's surface is warm.	For this projector it is normal to generate moderate heat during operation.
What to do if the projector does not work when connecting to a notebook PC?	<ul> <li>Check that the HDMI cable is plugged in correctly.</li> <li>Make sure that the notebook PC has been switched to projector display.</li> </ul>

# 11 Appendix

# Technical data

#### Technology/optical

Display technology	LCD
Light source	LED
Resolution	1280 × 720 pixel
LED lifetime	up to 30,000 h
Contrast ratio	3000:1
Aspect ratio	16:9
Throw ratio	1.4:1
Projection image size (diagon	
Projection distance	
80 cm -	
Keystone correction Projection modes	manual
front, rear,	front&rear ceiling
Focus adjustment	
Frame rate	
3D technology converts 2D	in 3D, supports at 3D modes
Image lag time	
Image response time	
Sound	
	2
Built-in speakers Output power	
Output povici	Z X J VV

#### Connection

Wireless standard	802.11b/g/n
O	perated frequency band 2.4 G (13 channels)
	2400 - 2483.5 MHz from the projector to external speaker via Bluetooth
	2 x HDMI, VGA, USB (2.0), SD card slot, AUX in (3.5 mm), headphone out (3.5 mm)

#### Power source

Power consumption	operating: 100 W
	Standby: 0.3 W
Power supply	power adapter
Input: 100 - 240 V~	, 50/60 Hz, 1.5 A (max)
	Output: DC 24 V. 4.15 A

#### Supported devices

Android	Miracast support required
OS	7/8/9/10/11

#### Product details

Toduct details	
Dimensions (W × D × H)	220 x 170 x 90 mm
Veight	1.2 kg
Operating temperature	< 40 °C
Storage temperature	< 60 °C

#### Package content

NeoPix Prime One projector, remote control with 2 AAA batteries, AC adapter, power cables (EU, UK, US, CH), lens cover, Quick Start Guide

Appendix 19



The CE marking certifies, that the product meets the main requirements of the European Parliament and Council directives EMC directive 2014/30/EU, LVD directive 2014/35/EU, EN 55032:2015, EN 55035:2017, EN 61000-3-2:2014, EN 61000-3-3:2013, EN 60065:2014+A11:2017 on information technology equipment, regarding safety and health of users and regarding electromagnetic interference.

The Declaration of Compliance can be consulted on the site www.philips.com/projection.

Preservation of the environment as part of a sustainable development plan is an essential concern of Screeneo Innovation SA. The desire of Screeneo Innovation SA is to operate systems respecting the environment and consequently it has decided to integrate environmental performances in the life cycle of these products, from manufacturing to commissioning use and elimination.



Federal Communications Commission (FCC) Statement: You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Adjust or relocate the receiving antenna.

- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1 this device may not cause harmful interference:
- 2 this device must accept any interference received, including interference that may cause undesired operation.

#### FCC RF Radiation Exposure Statement:

This transmitter must not be in co-location or operating in conjunction with any other antenna or transmitter. This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This device should be installed and operated with a minimum distance of 20 centimetres between the device and your body.

FCC ID: 2ASRT-NPX535

#### Canada Regulatory Compliance

This device complies with Industry Canada CAN ICES-3 (B)/NMB-3(B)

**RSS-Gen & RSS-247 statement:** This device complies with Industry Canada RSS standard(s).

Operation is subject to the following two conditions:

- 1 This device may not cause interference, and
- 2 This device must accept any interference, including interference that may cause undesired operation of the device.

**RF Radiation Exposure statement:** The device meets the exemption from the routine evaluation limits in section 2.5 of RSS102 and users can obtain Canadian information on RF exposure and compliance.

This device should be installed and operated with a minimum distance of 7.8 inches (20 centimetres) between the device and your body.



**Packaging:** The presence of the logo (green edot) means that a contribution is paid to an approved national organisation to improve package recovery and recycling infrastructures. Please respect the sorting rules set up locally for this kind of waste.

**Batteries**: If your product contains batteries, they must be disposed of at an appropriate collection point.



**Product:** The crossed-out waste bin symbol on the product means that the product belongs to the family of electrical and electronic equipment. In this respect, the European regulations ask you to dispose of it selectively:

- At sales points in the event of the purchase of similar equipment.
- At the collection points made available to you locally (drop-off centre, selective collection, etc.).

In this way you can participate in the reuse and upgrading of Electrical and Electronic Equipment Waste, which can have an effect on the environment and human health.

The paper and cardboard packaging used can be disposed of as recyclable paper. Have the plastic wrapping recycled or dispose of it in the non-recyclable waste, depending on the requirements in your country.

Trademarks: The mentioned references in this manual are trademarks of the respective companies. The lack of the trademarks ® and ™ does not justify the assumption that these dedicated terminologies are free trademarks. Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Screeneo Innovation SA disclaims any and all rights in those marks.

Neither Screeneo Innovation SA nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expense s incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorised modifications, repairs, or alterations to this product, or failure to strictly comply with Screeneo Innovation SA

operating and maintenance instructions.

Screeneo Innovation SA shall not be liable for any damages or problems arising from the use of any option s or any consumable materials other than those designated as original Screeneo Innovation SA/PHILIPS products or Screeneo Innovation SA/PHILIPS approve d products.

Screeneo Innovation SA shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Screeneo Innovation SA/PHILIPS products.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Screeneo Innovation SA. The information contained herein is designed only for use with this product. Screeneo Innovation SA. is not responsible for any use of this information as applied to other devices.

This user manual is a document that does not represent a contract.

Errors, printing errors and changes are reserved. Copyright © 2022 Screeneo Innovation SA.

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Appendix 21



#### Screeneo Innovation SA

Route de Lully 5C, 1131 Tolochenaz

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. used under license. Screeneo Innovation SA is the warrantor in relation to the product with which this booklet was packaged.

**NeoPix Prime One**