

PHILIPS

Mobile projector

PicoPix Max

Up to 120" in Full HD

Up to 3 hours of battery life

Wi-Fi and Bluetooth

Built-in stereo speakers

PPX620



Pico size. Mobile experience

Up to 120" with 3 hours battery

The smart & fully wireless native Full HD projector with ultra-vivid picture made for use anywhere. Built-in battery, Android OS, invisible top touchpad, Wi-Fi, Bluetooth and USB-C connectivity to play, work and mirror all your apps.

Life like pictures

- Project videos and images up to 120" in Full HD
- Bespoke images

Play, connect, repeat

- Smart Android OS for apps and more!
- Built-in Media Player for unlimited binge watching
- Fully Connected (HDMI, Micro SD, USB, USB Type-C)
- Wi-Fi screen mirroring for smart sharing

Portable

- Built-in 3 hours battery for cable-free projection
- Your portable desktop and gaming projector
- Built-in touchpad

Sound everywhere

- Sound that seems like you are there
- Connects to external bluetooth speakers

Highlights

Bespoke images



Auto focus, digital zoom and auto keystone correction to keep the best image wherever you place it! The PicoPix Max automatically straightens for a clear, perfectly-angled project no matter the surface it is on.

Built-in Media Player




Pop your essentials in your hand with the integrated Media Player: Browse, watch all your videos, listen to your music or share your latest holidays pictures.

Fully Connected (USB type C)




Play all your videos, pictures and audio files from the HDMI, USB or micro SD. Two USB type-C port are also there for a quick connection, display and charging

Smart Android OS for apps

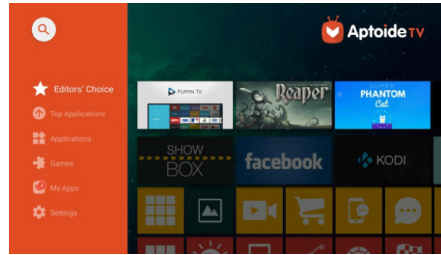

Take full advantage of an endless entertainment with Android OS. All your favorite apps are pre-installed, out of the box. Enjoy Youtube, Netflix and more!

Wi-Fi screen mirroring

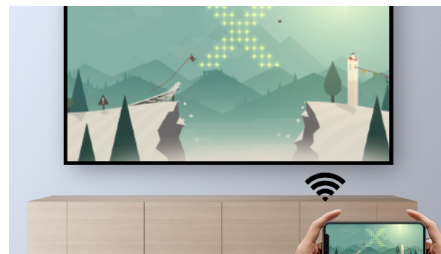

Connect your mobile devices such as a tablets, smartphones or even computers wirelessly to mirror and share all your contents. Videos on your phones? No worries, just cast it through Wi-Fi! (IOS, Android, Mac and PC)

Built-in 3 hours battery



Get entertainment on the go with the built-in battery providing up to 3 hours of projection.

Built-in touchpad



Easily navigate into the user interface, browse the internet or play games with the discreet built-in navigation top touch-pad

Your portable desktop gaming



Connect any bluetooth keyboard and mouse to work directly on a big screen! (Keyboard and Mouse not provided). Play your favorite games directly from the projector! Just plug any bluetooth gamepad to enjoy a crazy big gaming experience. (Games and gamepad not provided)

Connects to external bluetooth



Connect wirelessly your projector to external boomboxes or soundbars to bring life to your movies and gaming sessions.

Specifications

Technology

Display technology: DLP
LED light sources: Last over 30.000 hours
Resolution: 1920 x 1080 pixel
Resolution supported: 4K
Aspect ratio: 16:9
Throw ratio: 1,2:1
Contrast ratio: 10,000:1
Focus adjustment: Auto
Keystone correction: Auto
4 corners correction
Screen size (diagonal): 76cm-305cm / 30"-120"
Screen distance: 78cm-320cm / 31"-126"
Integrated media player
Internal memory: 16 GB

Built-in touchpad

Operating system: Android
LED lifetime: Up to 30.000h

Connection

Wi-Fi: 802.11a/b/g/n/ac 2,4+5GHz, Airplay, Miracast
Bluetooth: Bluetooth 5.0, Connect external speaker
USB: USB Type-C: 2x power and video
HDMI: x1
Micro SD: x1
Audio out: 3.5 mm jack

Sound

Internal speaker: 2x4W

Standard package includes

Projector: PicoPix projector
Remote control: Airmote control
Travel pouch
Tripod
Warranty card
Quick start guide
Power adapter: EU UK US CH

Dimensions

packed (WxDxH): 136x134x47,5mm / 5.35x5.28x1.87 inch
Weight: 0.85 kg

