

# PHILIPS

Mobile projector

PicoPix Micro+

Ultra-portable

Images up to 70"

Connect devices with mini HDMI

Built-in speaker & 3h battery



PPX325



## Big image, pocket friendly

Projecting an image of up to 70", the PicoPix Micro+ delivers true portability with a conveniently small size of 76x74mm and up to 3h of entertainment! Pocket friendly and easy-to-use, this is your perfect smartphone buddy to travel with!

### Ultra portable

- Take it anywhere
- Versatile stand

### Small Size, Big Image

- 70" image in your pocket
- Advanced LED Light Source
- DLP Texas Instrument Cinema

### Connect devices with mini HDMI


- Connection

### Sound and battery

- Long-lasting, PowerBank Ready!
- Sound everywhere

# Highlights

## Advanced LED Light Source

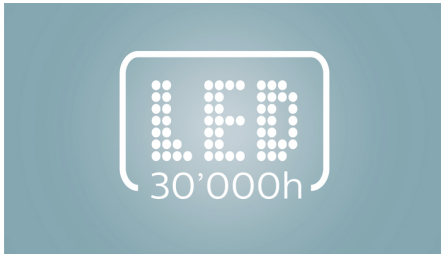


The powerful LED light source displays rich, vivid colors and will last up to 30,000 hours. You won't need to replace it since it lasts 20 years with an average usage of 4 hours per day! Additionally, the power consumption is far lower than a regular lamp based projector, which means you benefit from a bigger screen and fully immersive experience, all through an eco friendly device!

## Connection



Connect all your favorite devices like smart dongle or box, a video game console, smartphones, and more, via HDMI. Want to show something to your friends too? You can easily connect the projector to your phone or tablet in seconds and share your screen on a massive 70" display.

## Long-lasting, PowerBank Ready!

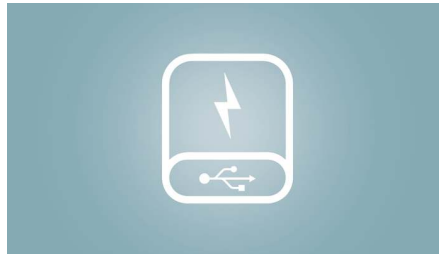

Thanks to the micro USB port, you can connect any power bank and extend the projector's battery life wherever you go!

## Sound everywhere




No need for extra sound systems thanks to the built-in speaker with unrivalled performance even in such a small package.

## Take it anywhere



The PicoPix Micro+ is a pocket-sized, ultra-portable DLP projector delivering true portability and hours of entertainment without needing a power cord. Lightweight and measuring only 76x74mm, this conveniently small projector can be placed in your purse, backpack, or back pocket, making it perfect for entertainment on the go, in or outdoor!

## Versatile stand

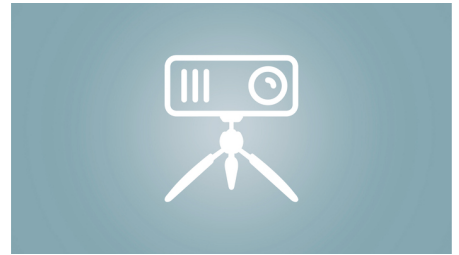

The tripod screw allows for dynamic visual orientation and projection (purchase the tripod separately). You can project a range of entertainment on the ceiling, wall, or mount it on your laptop.

## 70" image in your pocket



With the PicoPix Micro+ projector, you have a massive 70" display in your pocket on top of a TI DLP LED light source that lasts over 20,000 hours. You can easily connect it to your phone, laptop or game console to enjoy all the entertainment you like in any room

## DLP Texas Instrument Cinema



Texas Instrument cinema technology delivers vivid pictures, deep contrast and a bright image in any conditions.

# Specifications

**Technology**

**Display technology:** DLP  
**LED light sources:** Last over 30.000 hours  
**Resolution:** 854 x 480 pixel  
**Resolution supported:** 1920 x 1080 pixel  
**Screen distance:** 80cm-200cm  
**Aspect ratio:** 16:9  
**Throw ratio:** 1,2:1  
**Contrast ratio:** 600:1  
**Focus adjustment:** Manual  
**Operating system:** Linux  
**Recommended usage:** 70" max in dark room

**Sound**

**Internal speaker:** 3W

**Connection**

**micro-USB**  
**Mini HDMI:** x1  
**Audio out:** 3.5 mm jack

**Power source**

**Internal battery:** 3,000mAh  
**Battery lifetime:** up to 3 hours  
**USB powered**  
**Power supply:** 5V 2A

**Standard package includes**

**Projector:** PicoPix projector  
**Remote control**  
**Quick start guide**

**Dimensions**

**Unpacked (W x D x H):** 76x74x34mm  
**Weight:** 0.21 kg

