

# PHILIPS

Home projector

NeoPix Ultra

LED LCD

Up to 120"

Wi-Fi and Bluetooth

Built-in stereo speakers

NPX640



## Don't be afraid of the dark

with the ultra accessible projector

Get a super 120" Full HD picture, enjoy a comfortable image, stereo sound, Wi-Fi screen mirroring, Bluetooth and all the connectivity you need for streaming your favorite contents.

### **Incredible images**

- Project images up to 120" in HD
- Customize your projection
- Advanced LED Light Source

### **Wireless screen share**

- Wi-Fi screen mirroring for smart sharing
- TV shows streaming directly from your smartphone

### **Sound everywhere**


- Built-in stereo speakers for crystal clear sound
- External bluetooth speakers connection

### **Play, connect, repeat**

- Built-in Media Player for unlimited binge watching
- Make It smart!
- Fully Connected (HDMI, USB, VGA or MicroSD)

# Highlights

## Advanced LED Light Source

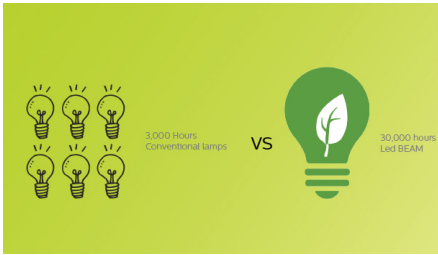

The powerful LED light source displays rich, vivid colors and will last up to 30,000 hours. You won't need to replace it since it lasts 20 years with an average usage of 4 hours per day! Additionally, the power consumption is far lower than a regular lamp based projector, which means you benefit from a bigger screen and fully immersive experience, all through an eco friendly device!

## Customize your projection



Place the product where ever you want! The keystone correction combined with the focus technology allow you to fine-tune images to your needs and place your projector at any distance.

## Project images up to 120" HD




Project images and videos up to 120" (300cm) in HD 720p for detailed and clear images.

## Built-in Media Player



Pop your essentials in your hand with the integrated Media Player: Browse, watch all your videos, listen to your music or share your latest holidays pictures.

## Built-in stereo speakers

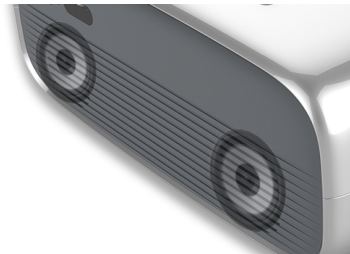

No need for extra sound system, the built-in stereo speakers produce deep room-filling sound perfect for movies at home.

## External bluetooth speakers



Connect wirelessly your projector to external boomboxes or soundbars to bring life to your movies and gaming sessions.

## Fully Connected




Connect any multimedia devices such as set top boxes, PC, MAC, gaming consoles, and streaming devices like Fire Stick or Apple TV with the USB, HDMI or MicroSD ports.

## Make it smart!



Access to unlimited content by connecting to any smart gaming console or TV boxes like Fire Stick or Apple TV.

## TV shows streaming

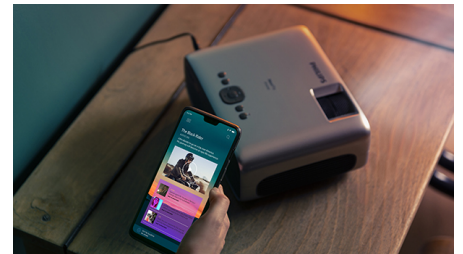

Stream any TV shows or movies via Wi-Fi from your smart devices.

# Specifications

## Technology

Display technology: LCD

Light source: LED

LED lifetime: Up to 20.000h

Resolution: 1920 x 1080 pixel

Resolution supported: 1920 x 1080 pixel

Projection image size: up to 120" (300cm)

Projection distance: 80 cm - 200 cm / 24"-60"

Aspect ratio: 16:9

Throw ratio: 1,31:1

Contrast ratio: 3000:1

Focus adjustment: Manual

Keystone correction: Manual

Integrated media player

## Sound

Stereo Speaker: 2x3W

Bluetooth speaker connection

## Connection

Wi-Fi: Wireless screen mirroring

Bluetooth: Connect external speaker

USB: x1

HDMI: x2

Micro SD: x1

VGA: x1

Audio out: 3.5 mm jack

AV in: 3,5mm jack

DC-IN: DC jack

## Power source

DC-in: 24V, 4A (AC 100-240V)

Power consumption: Operation: 100W, Stand by <0.5W

## Dimensions

unpacked (WxDxH): 315x235x120 mm / 12.4x9.2x4.7 inch

Weight: 5.3lbs / 2.4 kg

