

# PHILIPS

## Mobile projector

### GoPix 1

Ultra Slim and Premium

Up to 75" display

Easy USB-C connections

Built-in speaker & 2h battery



GPX1100



## Your Ultimate Smartphone Companion

Ultra slim, premium, and engineered with aluminum, the Philips GoPix 1 easily connects to all USB-C and HDMI devices such as laptops, tablets, or smartphones to project an image of up to 75" in True 480p resolution for up to 2 hours.

### Ultra slim and premium

- Ultimate design
- Versatile stand, Auto Keystone

### Small Size, Big Image

- 75" image in your pocket
- Advanced LED Light Source
- TI DLP technology

### Easy Connection

- Ready for the road

### Sound and battery

- Speaker
- Long-lasting, PowerBank Ready!

# Highlights

## Advanced LED Light Source




The powerful LED light source displays rich, vivid colors and will last up to 30,000 hours. You won't need to replace it since it lasts 20 years with an average usage of 4 hours per day! Additionally, the power consumption is far lower than a regular lamp based projector, which means you benefit from a bigger screen and fully immersive experience, all through an eco friendly device!

## 75" image in your pocket



GoPix 1 is the smallest and brightest projector out there projecting a massive 75" display pocket. It is equipped with the latest TI DLP LED light source that lasts over 30,000 hours. You can easily connect it to your phone, laptop or game console to enjoy all the entertainment you like in any room and position! The GoPix 1 is so small that you can carry it in your suit pocket.

## Long-lasting, PowerBank Ready!

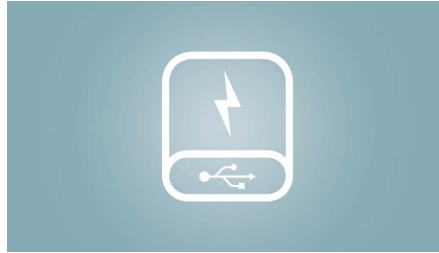

Thanks to the micro USB port, you can connect any power bank and extend the projector's battery life wherever you go!

## Ready for the road



The USB-C video port lets you connect to all your smart devices including laptops, smartphones, or tablets to watch all your favorite content. You can also use the USB-C charge with any PD charger so you won't need to bring extras in your bag. There is also a versatile HDMI port that gives you the freedom to connect all your other devices.

## Speaker




No need for extra sound systems, the built-in speaker delivers the performance you need in a small package.

## Ultimate design



A super slim 18mm projector featuring premium dark grey metal finish with glass protection lens. The cabinet design has been engineered to create a passive heat dissipation. Moreover, both the cabinet vent system and speaker moulding have been designed for improved rigidity.

## Versatile stand, Auto Keystone

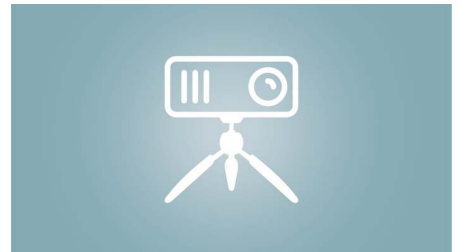

The tripod screw allows for dynamic visual orientation and projection. You can project a range of entertainment on the ceiling, wall, or mount it on your laptop and always get a straight image thanks to the auto keystone.

## TI DLP technology



Texas Instruments DLP technology, used in 9 out of 10 cinemas worldwide, delivers vivid pictures, deep contrast, and a bright image in any conditions.

# Specifications

## Technology

**Display technology:** DLP  
**LED light sources:** Last over 30.000 hours  
**Resolution:** 854 x 480 pixel  
**Resolution supported:** 1920 x 1080 pixel  
**Screen distance:** 27cm - 199cm / 10'' - 78''  
**Recommended usage:** 75'' max in dark room  
**Aspect ratio:** 16:9  
**Throw ratio:** 1,2:1  
**Contrast ratio:** 600:1  
**Focus adjustment:** Manual  
**Auto rotate**  
**Keystone correction:** Manual, Auto

## Sound

**Internal speaker:** 3W

## Connection

**Mini HDMI:** x1  
**USB:** USB Type-C: 2x power and video

## Power source

**Internal battery:** 3,600 mAh  
**Battery lifetime:** Up to 2 hours  
**USB powered:** Yes 12V 1.5A

## Standard package includes

Remote control  
USB-C cable (charge & video)  
Mini-HDMI to HDMI cable  
Tripod  
User guide  
Warranty card

## Dimensions

**Unpacked (W x D x H):** 78.2 x120 x 18 mm  
**Weight:** 0.25 kg

