

PHILIPS

Home projector

NeoPix 320

80" in True FULL HD 1080p

Smart OS system with apps

Powerful 2.1 Sound System

Super Silent

NPX320



A Silent, Compact, Smart HD experience.

NeoPix 320 offers a stunning 80" 1080p True Full HD picture! Pre-loaded key streaming applications. Automatic keystone and 4 corner correction along with digital zoom. Built-in media player, 2.1 speakers, Dual band Wi-Fi and Bluetooth.

Amazing Images

- NeoPix 320 in True Full HD 1080p
- Advanced picture correction
- Advanced LED Light Source

Pre loaded apps

- Smart OS for apps and more

Ultra connected


- NeoPix 320 connection
- Wi-Fi screen mirroring for smart sharing
- Wireless Sound

Deep silence and punchy sound

- 2.1 Powerful sound system
- Super silent

Highlights

Advanced LED Light Source

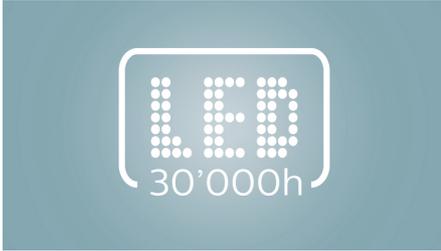


The powerful LED light source displays rich, vivid colors and will last up to 30,000 hours. You won't need to replace it since it lasts 20 years with an average usage of 4 hours per day! Additionally, the power consumption is far lower than a regular lamp based projector, which means you benefit from a bigger screen and fully immersive experience, all through an eco friendly device!

2.1 Powerful sound system



Thanks to its 2.1 audio system (two speakers and a subwoofer), immerse yourself in an exceptional sound sensation. Thanks to its 3.5mm jack output, connect your earphones or even bigger sound with speakers.

Advanced picture correction

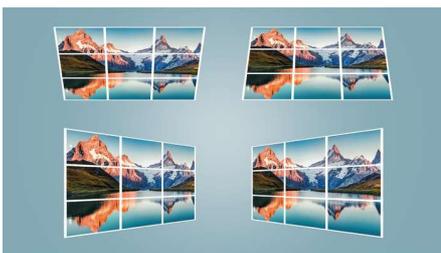


Advanced picture correction

NeoPix 320 in True Full HD 108



Watch movies and more in True Full HD 1080p high-definition sharpness, full of the fine detail that can be lost at lower resolutions. The picture remains lifelike and text is crystal-clear when displayed.

Smart OS for apps and more

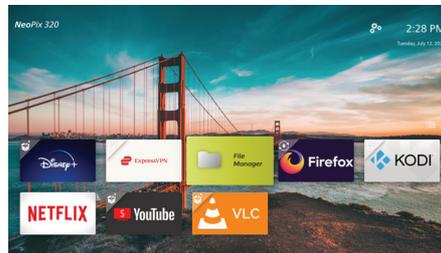

Take full advantage of endless entertainment directly out of the box with all your favorite pre-installed apps. Enjoy Netflix, Amazon Prime, Youtube, Disney+ and more!

Super silent



Fully engineered to improve airflow and heat dissipation while maintaining a compact design. Enhanced by the use of high-performance fans, it offers an unprecedented silence.

Wi-Fi screen mirroring



Connect your mobile devices such as a tablets, smartphones or even computers wirelessly to mirror and share all your contents. Videos on your phones? No worries, just cast it through Wi-Fi! (IOS, Android, Mac and PC)

Wireless Sound



Have wireless speakers, mouse, keyboard, or other remote controls? No worries, thanks to its Bluetooth functionality, you can easily connect to any of these accessories.

NeoPix 320 connection



Connect all your multimedia devices thanks to its dual HDMI (smartphone, tablet, laptop, gaming console, and more), and play all your videos, pictures, and audio files from a USB, thanks to the built-in multimedia player. The dual band Wi-Fi technology is ideal for online gaming or watching Full HD movies.

Specifications

Technology

Display technology: LCD
Light source: LED
LED lifetime: Up to 30.000h
Resolution: 1920 x 1080 pixel
Projection distance: 80"@96" distance (244cm)
Aspect ratio: 16:9
Throw ratio: 1,4:1
Contrast ratio: 3000:1
Focus adjustment: Manual
Keystone correction: Digital

Integrated media player

Recommended usage: 80" max in dark room
Brightness: up to 250 lumens*

Sound

2.1
Internal speaker: 2x5 Watts with bass boost
Surround mode, Equalization

Connection

Wi-Fi: Wireless screen mirroring
Bluetooth: Connect external speaker
USB: x1

HDMI: x1

Audio out: 3.5 mm jack
DC-IN: DC jack

Power source

DC-in: 24V, 4A (AC 100-240V)
Power consumption: Operation: 100W, Stand by <0.5W

Dimensions

unpacked (WxDxH): 216x246x93 mm
/8.5x9.69x3.66 inch
Weight: 2.64 lbs / 1.2 kg

