

PHILIPS

Mobile projector

PicoPix Micro 2TV

Up to 80"

Android TV experience

Stereo speakers & 4h battery

USB-C video and HDMI



PPX360



Streaming everywhere, gaming anywhere

The PicoPix Micro 2TV is our smallest but super bright Android TV based projector with USB type C video port and HDMI. Enjoy a full Android TV experience, built-in speakers and long lasting battery projecting up to 4h of your TV shows!

Super Bright and compact

- Project images up to 80"
- Customize the perfect image
- Advanced LED Light Source
- Super Compact

Android TV experience

- Built-in Android TV
- Smart remote for many controls

Sound and Mobility

- Stereo speakers for captivating sound
- Tripod mount
- built-in 4 hours battery for cable-free projection

Play, connect, repeat

- ARC and CEC

Highlights

Advanced LED Light Source




The powerful LED light source displays rich, vivid colors and will last up to 30,000 hours. You won't need to replace it since it lasts 20 years with an average usage of 4 hours per day! Additionally, the power consumption is far lower than a regular lamp based projector, which means you benefit from a bigger screen and fully immersive experience, all through an eco friendly device!

ARC and CEC



Control your HDMI connected devices with only 1 remote control thanks to CEC. ARC allows you to connect the projector to your AV receiver via HDMI for a truly immersive sound

Built-in Android TV

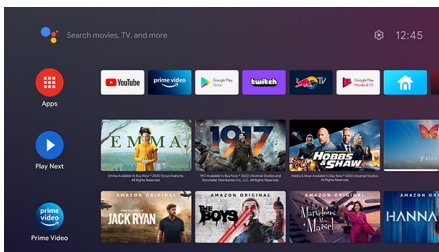

Get the full Android TV experience thanks to the built-in Android TV dongle. All your favorite apps are there, Google Cast and more!

Customize the perfect image



Place the product where ever you want! The auto keystone and auto rotation corrections combined with the focus technology allow you to fine-tune images to your needs and place your projector at any distance.

Project images up to 80"



Project images and videos up to 80" (200cm) from less than 2 meters from the wall.

Smart remote for many controls



Our convenient remote control lets you easily browse content and option. Just ask Google Assistant to play, pause, search and more!

Stereo speakers



Integrated stereo speakers with equalization and surround sound.

Tripod mount




Built-in tripod mount to project straight in front of you or project on the ceiling for a comfortable view from your bed!

Super Compact



Compact, powerful, and Apple ready: take it everywhere, project anywhere. This is your perfect travel companion.

built-in 4 hours battery for c

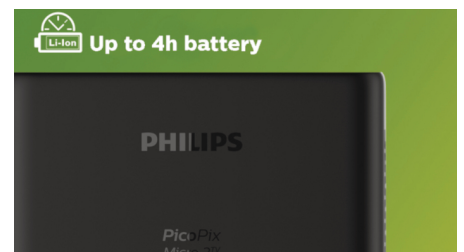

Get entertainment on the go with the built-in battery providing up to 4h of projection.

Specifications

Technology

Display technology: DLP

LED light sources: Last over 30.000 hours

Resolution: 854 x 480 pixel

Resolution supported: 1920 x 1080 pixel

Screen distance: 80cm-200cm

Aspect ratio: 16:9

Throw ratio: 1,2:1

Contrast ratio: 600:1

Focus adjustment: Manual

Keystone correction: Auto

Integrated media player

Operating system: Android TV

Internal battery: up to 4h

Recommended usage: 80" max in dark room

Sound

Internal speaker: 2x5W

Connection

Wi-Fi: Wireless screen mirroring,
802.11a/b/g/n/ac 2,4+5GHz

Audio out: 3.5 mm jack

USB: USB Type-C, USB 2.0

Bluetooth: Pair the remote, gamepads

HDMI: x1

Power source

Internal battery: 3,000mAh

USB powered

Power supply: 5V 2A

