

# PHILIPS

Home projector

NeoPix Prime 2

True HD 720p Resolution

Philips OS with pre-loaded app

Multiple images corrections

Wi-Fi, Bluetooth and HDMI



NPX542



## Smart HD experience in a super compact projector

Movie nights or gaming in your bedroom in HD 720p! Built-in Philips OS with pre-loaded apps, Dual Band Wi-Fi, Bluetooth and integrated multimedia player. Youtube, Netflix and more. Auto keystone, 4 corners correction and digital zoom.

### Watch in HD 720p

- Project images up to 80"
- True HD 720p resolution
- Customized projection
- Advanced LED Light Source

### Smart and Connected

- Smart Philips OS system
- Wi-Fi screen mirroring for smart sharing

### Connect, Watch and Play

- Built-in Media Player for unlimited binge watching
- Fully Connected (HDMI, USB, VGA or MicroSD)

### Sound Everywhere

- Stereo speakers for captivating sound
- Audio jack

# Highlights

## Fully Connected




Connect any multimedia devices such as set top boxes, PC, MAC, gaming consoles, and streaming devices like Fire Stick or Apple TV with the USB, HDMI or MicroSD ports.

## Advanced LED Light Source



The powerful LED light source displays rich, vivid colors and will last up to 30,000 hours. You won't need to replace it, it lasts 20 years if used 4h per day! In addition, the power consumption is far lower than a regular lamp based projector: a bigger screen, an immersive experience with an eco friendly device!

## Audio jack

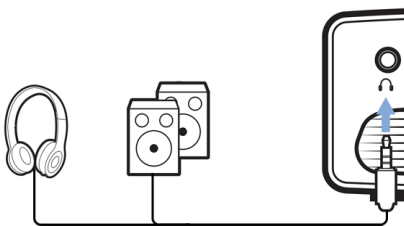

Connect any headphones or external powered speakers with the built-in 3.5 jack.

## Built-in Media Player



Pop your essentials in your hand with the integrated Media Player: Browse, watch all your videos, listen to your music or share your latest holidays pictures.

## Project images up to 80"




Project images and videos up to 80" (200cm) from less than 2 meters from the wall.

## Customized projection



Place the product wherever you want! The keystone correction combined with the focus technology and the 4 corners correction allow you to fine-tune images to your needs and place your projector at any distance.

## Smart Philips OS system

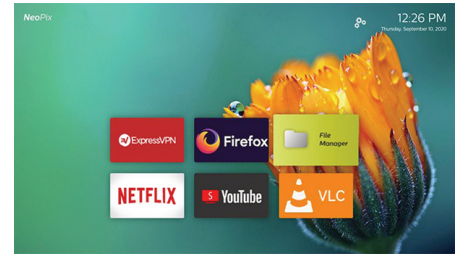

Integrated smart Philips OS with pre-loaded apps like YouTube, Netflix, Firefox and more! (more apps will be pushed via FOTA). The Dual Band Wi-Fi connectivity brings you the speed you need to stream all your content.

## Stereo speakers



Integrated stereo speakers with equalization and surround sound.

## True HD 720p resolution



True HD 720p resolution projection delivering clear text and sharp image quality.

# Specifications

## Technology

Display technology: LCD

Light source: LED

LED lifetime: Up to 30.000h

Resolution: 1280 x 720 pixel

Resolution supported: 1920 x 1080 pixel

Projection distance: 80 cm - 200 cm / 24"-60"

Aspect ratio: 16:9

Throw ratio: 1,31:1

Contrast ratio: 3000:1

Focus adjustment: Manual

Keystone correction: Digital

Integrated media player

Recommended usage: 80" max in dark room

## Sound

Stereo Speaker: 2x5W

## Connection

Wi-Fi: Wireless screen mirroring

Bluetooth: Connect external speaker

USB: x1

HDMI: x2

Micro SD: x1

VGA: x1

Audio out: 3.5 mm jack

AV in: 3,5mm jack

DC-IN: DC jack

## Power source

DC-in: 24V, 4A (AC 100-240V)

Power consumption: Operation: 100W, Stand by <0.5W

## Dimensions

unpacked (WxDxH): 220x170x90 mm /

8.6x6.6x3.5 inch

Weight: 2.69lbs / 1.2 kg

