

# PHILIPS

Home projector

Screeneo S4

Full HD Resolution

Up to 160"

LED DLP

SCN450



## Project big. Really big with smart short throw technology

Watch, play, listen, browse! Smart and intuitive, the Screeneo S4 is the best compromise. Supported by an immersive Full HD widescreen, and hanced HDR, the Screeneo S4 throws amazing and super-bright images.

### Incredible images

- Project images up to 160"
- HDR for advanced contrast and colour
- Perfect image with bespoke adjustments

### Play, connect, repeat

- Built-in Media Player for unlimited binge watching
- Fully Connected for endless possibilities
- Wi-Fi screen mirroring for smart sharing

### So smart


- Smart Android OS for apps and more!
- AirMote for a comfortable control

### Bespoke sound

- Superior Stereo Speakers
- Bluetooth BoomBoxes
- Low fan noise

# Highlights

## AirMote

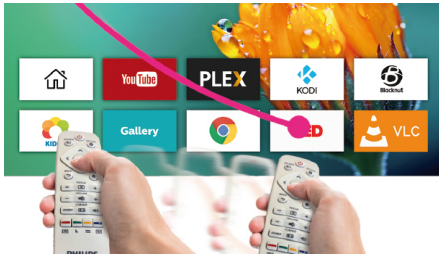

Easily navigate thanks to the intuitive AirMote control by pointing or using gestures to pick and choose what you want to watch.

## Bluetooth BoomBoxes




Play your music directly on the projector. Use your Screeneo as a Boombox by connecting your smartphones or any other Bluetooth device to enjoy big sound.

## Built-in Media Player




Pop your essentials in your hand with the integrated Media Player: Browse, watch all your videos, listen to your music or share your latest holidays pictures.

## Fully Connected

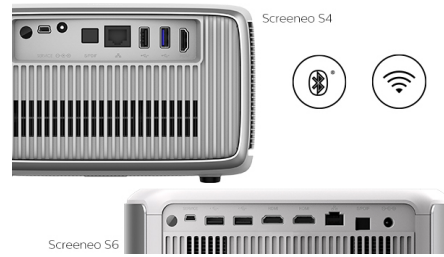


The Screeneo S Collection comes with all the connectivity you need. Wi-Fi, Bluetooth, USB, HDMI, SPDIF, Connect your game consoles, Blu-ray player, smart boxes or set top boxes to enjoy all your contents.

## HDR for advanced contrast

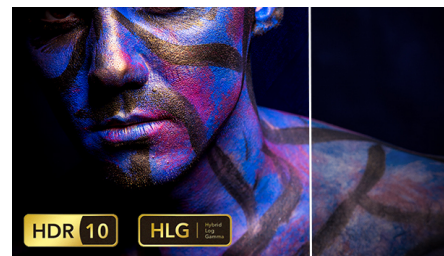

High Dynamic Range is the new video standard that redefines in-home entertainment through advances in contrast and colour. With HDR 10, enjoy a sensory experience that captures the original richness and liveliness, yet accurately reflects the content creator's intent.

## Low fan noise

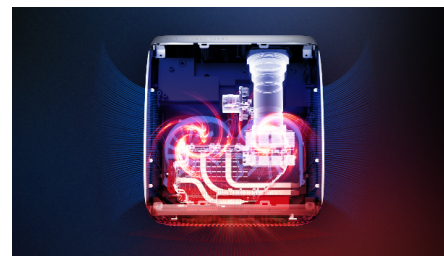


Our all-in-one Screeneo S Collection projectors are designed to dissipate heat through the aluminum side grids along with a state-of-the-art ultra low noise fan.

## Perfect image




Get a perfect picture, automatically and straight out of the box with the Auto Keystone, Auto focus. The Digital Zoom will help you to adjust the image size without moving the projector and because you don't always place your projector in front of the wall, we added a 4 corners correction to fine tune your image and get a perfect fit even if your device is up to 45 degrees on your right or left side.

## Smart Android OS for apps

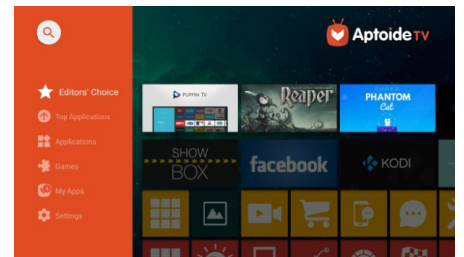

Take full advantage of an endless entertainment with Android OS. All your favorite apps are pre-installed, out of the box. Enjoy Youtube, Netflix and more!

## Superior Stereo Speakers

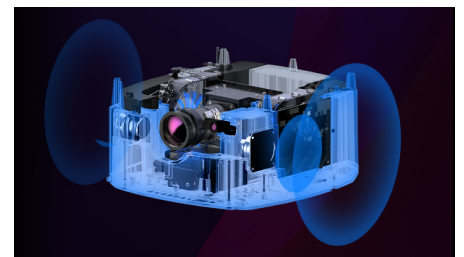

No need extra sound bar or home-cinema! The Screeneo S Collection provides endless vibrant, clear, and powerful sound with deep bass.

# Specifications

## Technology

**Display technology:** DLP

**Light source:** LED

**LED lifetime:** Up to 30.000h

**Resolution:** 1920 x 1080 pixel

**Projection image size:** up to 160" (400cm)

**Projection distance:** 26 cm - 457 cm / 10"-180"

**Aspect ratio:** 4:3 and 16:9

**Throw ratio:** 1,2:1

**Contrast ratio:** 100.000:1

**Focus adjustment:** Auto

**Keystone correction:** Auto

**4 corners correction**

**Integrated media player**

**Projection modes:** front, rear, ceiling

**Operating system:** Android

**Internal memory:** 16 GB

## Sound

**Stereo Speaker:** 2x5W

**Bluetooth speaker connection**

## Connection

**Wi-Fi:** 802.11a/b/g/n/ac 2,4+5GHz, Wireless screen mirroring

**Bluetooth:** Bluetooth 4.0, Boombox feature,

Connect external speaker

**Connectivity:** USB x2 (3.0)(2.0), HDMI x1, RJ45, S/PDIF

## Power source

**Power consumption:** Operation: 150W, Stand by <0.5W

**Power supply:** AC100-240V, DC 19.5V / 7.8A

## Logistic data

**Dimensions (wxDxH):** 192x192x110mm / 7.5x7.5x4.3inch

**Weight:** 1.84kg / 4.06 lb

**Standard package includes:** Projector, Remote control, 2xAAA battery, Power cable, Quick start guide, Warranty card

