

PHILIPS

Mini projector

NeoPix Start+

LED LCD

Up to 60"

Integrated battery

Built in speaker

NPX245



Don't be afraid of the dark with the ultra accessible projector

Get a super easy experience and project pictures up to 60", enjoy a comfortable image and all the connectivity you need for streaming your favorite contents with this mini projector that includes an integrated battery.

Radiant pictures

- Project images up to 60"
- Focus adjustment for clear images
- Advanced LED Light Source

Play, connect, repeat

- Built-in Media Player for unlimited binge watching
- Fully Connected (HDMI, USB or MicroSD)
- Make It smart!

Portable


- Entertainment on the go
- Built-in battery for cable-free projection

Sound everywhere

- Built-in speaker for captivating sound
- Audio jack

Highlights

Advanced LED Light Source

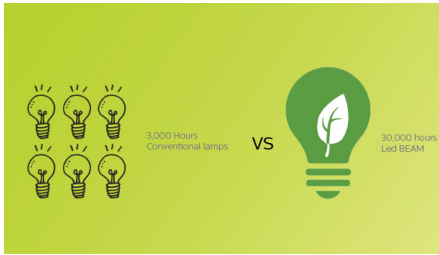

The powerful LED light source displays rich, vivid colors and will last up to 30,000 hours. You won't need to replace it since it lasts 20 years with an average usage of 4 hours per day! Additionally, the power consumption is far lower than a regular lamp based projector, which means you benefit from a bigger screen and fully immersive experience, all through an eco friendly device!

Focus adjustment



Place your projector at any distance and adjust the focus to fine-tune images to your needs.

Project images up to 60"



Project images and videos up to 60" (150cm) from less than 2 meters from the wall.

Built-in Media Player



Pop your essentials in your hand with the integrated Media Player: Browse, watch all your videos, listen to your music or share your latest holidays pictures.

Fully Connected



Connect any multimedia devices such as set top boxes, gaming consoles, and streaming devices like Fire Stick or Apple TV with the USB, HDMI or MicroSD ports.

Make It smart!



Access to unlimited content by connecting to any smart gaming console or TV boxes like Fire Stick or Apple TV.

Built-in battery




Get entertainment on the go with the built-in battery providing up to 60mins of power so you can watch movies and share videos without the hassle of wires or cables.

Entertainment on the go



Bring it from room to room or to your friends.

Audio jack

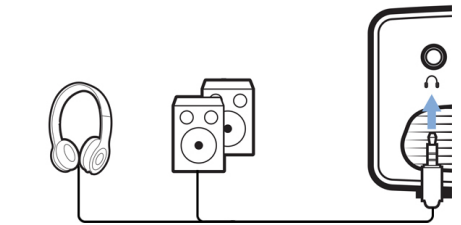

Connect any headphones or external powered speakers with the built-in 3.5 jack.

Built-in speaker



No need for extra sound system, the built-in speaker enables the performance you need in a small package.

Specifications

Technology

Display technology: LCD

Light source: LED

LED lifetime: Up to 20.000h

Resolution: 240 x 320 pixel

Resolution supported: 1920 x 1080 pixel

Projection image size: up to 60" (150cm)

Projection distance: 80 cm - 200 cm / 24" - 60"

Aspect ratio: 4:3

Throw ratio: 1,4:1

Contrast ratio: 800:1

Focus adjustment: Manual

Integrated media player

Sound

Internal speaker: 1W

Connection

USB: x1

HDMI: x1

Micro SD: x1

micro-USB: for battery charging

AV in: 3,5mm jack

Audio out: 3.5 mm jack

DC-IN: DC jack

Power source

Power consumption: Operation: 24W, Stand by <0,5W

DC-in: 12V, 2A (AC 100-240V)

Dimensions

unpacked (WxDxH): 129x81.5x55mm / 5.09x3.2x2.16 inch

Weight: 0.66lbs / 0.3 kg

