

PHILIPS

Home projector

NeoPix 520

100" in True FULL HD 1080p

Android TV experience

Powerful 2.1 Sound System

Super Silent

NPX520



Pay Less, Watch More.

NeoPix 520 displays great 100" 1080p True Full HD pictures! Android TV gives access to all of your favorite applications. Auto-keystone and 4 corner correction along with digital zoom. Stunning 2.1 speakers, Dual band Wi-Fi and Bluetooth.

Amazing Images

- NeoPix 520 in True Full HD 1080p
- Multiple Picture Correction
- Advanced LED Light Source

Android TV 11 Experience

- Android TV 11 Experience
- OK Google Ready
- ChromeCast Built-in

Ultra connected

- NeoPix 520 connection
- Wireless Sound

Deep silence and punchy sound

- 2.1 Powerful sound system
- Super silent

Highlights

Advanced LED Light Source



The powerful LED light source displays rich, vivid colors and will last up to 30,000 hours. You won't need to replace it since it lasts 20 years with an average usage of 4 hours per day! Additionally, the power consumption is far lower than a regular lamp based projector, which means you benefit from a bigger screen and fully immersive experience, all through an eco friendly device!

Multiple Picture Correction



Place the projector wherever you wish! Auto keystone and 4 corner correction help eliminate crooked, distorted images for a perfectly proportioned picture even if the device is not straight in front of the wall. It also gives users an optimal image from virtually any angle and eliminates many of the hassles of an optimal set-up. Big space, small wall? Easy! The digital zoom maximizes the image size even if your projector is far away from a wall.

NeoPix 520 in True Full HD 108




Watch movies and more in True Full HD 1080p high-definition sharpness, full of the fine detail that can be lost at lower resolutions. The picture remains lifelike and text is crystal-clear when displayed.

2.1 Powerful sound system



Thanks to its 2.1 audio system (two speakers and a subwoofer), immerse yourself in an exceptional sound sensation. Thanks to its 3.5mm jack output, connect your earphones or even bigger sound with speakers.

Android TV 11 Experience

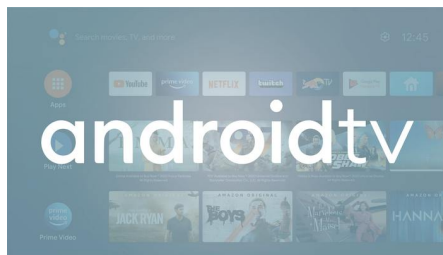

Android TV 11 is integrated to deliver the movie experience you deserve. Enjoy thousands of movies and shows from your favorite apps. Launch the latest episode, pick up where you left off, or switch to a new show. Even find music, games, and videos music, games, and YouTube videos right from your customizable home screen. NeoPix delivers a flawless, industry-leading Android TV experience.

ChromeCast Built-in



Chromecast built-in is a technology that allows you to stream your favorite entertainment and apps from your phone, tablet, or laptop right to your TV or speakers. Your phone acts as a simple, powerful remote. Just open the mobile apps you already know and love to quickly access your TV shows and playlists. No new log-ins or downloads required. You can use your phone to search, browse, queue and control the projector from anywhere in the home, and keep using it without disrupting what's playing or draining your battery.

OK Google Ready



Want to play a game, watch Netflix or find content and apps in the Google Play store? Just tell your projector. You can even command all Google Assistant-compatible smart home devices, like dimming the lights and setting the thermostat on movie night.

Super silent



Fully engineered to improve airflow and heat dissipation while maintaining a compact design. Enhanced by the use of high-performance fans, it offers an unprecedented silence.

Specifications

Technology

Display technology: LCD

Light source: LED

LED lifetime: Up to 30.000h

Resolution: 1920 x 1080 pixel

Projection image size: up to 100" (255cm)

Recommended usage: 100" max in dark room

Projection distance: 100" @120" distance
(306cm)

Brightness: up to 350 lumens*

Aspect ratio: 16:9

Throw ratio: 1,43:1

Contrast ratio: 3000:1

Focus adjustment: Manual

Keystone correction: Digital

Integrated media player

Sound

2.1

Internal speaker: 2x7 Watts with bass boost

Surround mode, Equalization

Connection

Wi-Fi: Wireless screen mirroring

Bluetooth: Connect external speaker

USB: USB 2.0, USB Type-C

HDMI: x2

Audio out: 3.5 mm jack

DC-IN: DC jack

Power source

DC-in: 24V, 4A (AC 100-240V)

Power consumption: Operation: 100W, Stand
by <0.5W

Dimensions

unpacked (WxDxH): 274x294x107 mm /

10.79x11.57x4.21 inch

Weight: 5.9lbs / 2.7 kg

