

# PHILIPS

Screeneo Smart LED  
Projector

Screeneo

HDP1590



## Get the big picture

Enjoy big entertainment — an image from 50" up to a 100" with Screeneo placed just a few centimetres from the wall. Easy to move around the house or simply set up your outdoor cinema in the garden! Also features great sound and Wi-Fi!

### **From small to big with excellent image quality**

- Flexible screen size — from 50 to 100"
- LED technology for brilliant colours and long life

### **Enrich your sound experience**

- Integrated speakers and subwoofer
- Stream your music via Bluetooth or Wi-Fi/DLNA

### **Content from anywhere**

- Connect wired or wireless — it's up to you!
- Miracast — share your content instantly



product  
design award


2014

# Highlights

## Connect wired or wireless

With the built-in Wi-Fi you can easily connect to the world online or to your network at home via DLNA or Bluetooth and project your content from these devices. If you prefer physical media, you can connect the Screeneo via HDMI, insert an SD card into the card reader, connect a USB flash or connect the antenna to an antenna jack.


## Flexible screen size

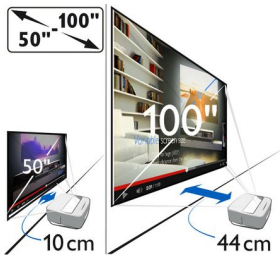

Experience your films, sport events or gaming like you have never done before, from 50" up to 100". Sit back and enjoy in the comfort of any room in your home. Screeneo can easily

be placed close to any smooth wall. You just need to grab the stylish leather handle at the back of the product. For viewing a cartoon film for kids on a 50", place it 10 cm from the wall. For your favourite football match on 100", place Screeneo 44 cm away from the wall.

## Integrated speakers

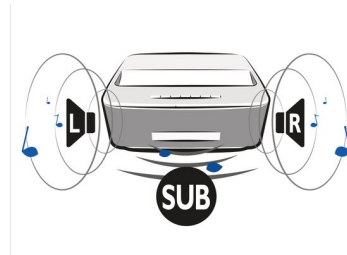

There is no need to connect to any sound system thanks to the integrated subwoofer and loudspeakers, with an output power of 26 W RMS. Your perfect sound experience will be completed with Dolby Digital 2.1 sound system.

## LED technology

Screeneo uses high-quality LED technology to project your photos, films and more in brilliant colour and for a duration of 30,000 hours. Combined with the innovative ultra short throw technology, it guarantees a big wow anytime you switch it on.

## Miracast

It sounds elaborate, but it's so simple: While browsing photos on your smartphone or tablet, connect wirelessly with Screeneo, which mirrors your screen instantly. Whatever you do on your handheld device is projected wirelessly using Miracast.

## Stream your music

Use Screeneo as a Music station! Conveniently Stream music from your smartphone or tablet to Screeneo via Bluetooth or DLNA (Digital Living Network Alliance) functionality.

# Specifications

## Technology/optical

**Aspect ratio:** 4:3 and 16:9  
**Contrast ratio:** 100,000:1  
**Display technology:** DLP  
**Focus adjustment:** manual  
**Internal memory:** 4 GB  
**Keystone correction**  
**LED light source lasts over:** 30,000 hours  
**Light source:** RGB LED  
**MP4 player**  
**Noise level:** < 25 dB(A)  
**Operating system:** Android 4.2  
**Resolution:** 1280 x 800 pixel  
**Screen distance:** 10–44 cm  
**Screen sizes:** 50"–100"  
**Throw ratio:** 0.321  
**Wall colour correction**  
**3D technology:** converts 2D into 3D, supports all 3D modes  
**Projection modes:** front, rear, front ceiling, rear ceiling

## Connection

**Connectivity:** 1 x front standard USB, 2 x back HDMI, 1 front HDMI, 2 x back Standard USB, Audio out (analogue, digital), Headphone out front, Standard SD card, VGA, Composite  
**Wi-Fi:** DLNA, Dualband 2.4 GHz and 5 GHz,

Miracast, WLAN IEEE 802.11 b/g/n  
**Bluetooth:** Stream music from smartphone or tablet to Screeneo via Bluetooth

## Sound

**Internal stereo speaker:** 2 + subwoofer  
**RMS:** Output power 26 Watt  
**Sound system:** Dolby Digital 2.1  
**Supported audio formats:** mp3, wav

## Supported video standards

1080i/p  
480i/p  
576i/p  
720i/p  
NTSC  
PAL  
SECAM

## Internal media player

**Supported audio formats:** MP3, WAV  
**Supported photo formats:** JPEG, BMP, PNG, GIF  
**Supported video formats:** AVI, MOV, MP4, MKV, FLV, TS, M2TS, 3GP

## Packaging dimensions

**Packed (W x D x H):** 490 x 392 x 317 mm  
**Unpacked (W x D x H):** 339 x 287 x 148 mm

## Power Supply

**Power adapter:** 90–264V, 47–63Hz for EU and UK

## Relative humidity

**Operation:** 15–85% RH  
**Storage packed:** 5–93% RH  
**Storage unpacked:** 15–85% RH

## Standard package includes

2 x AAA battery  
Carrying bag  
DLP Link 3D Glasses  
HDMI cable  
Power cable  
Quick start guide  
Remote control  
User guide: on internal memory, Internet  
HDP 1590

## Temperature range

**Operation:** 5–35°C  
**Storage packed:** –25–60°C  
**Storage unpacked:** 0–45°C

