


EN User Manual FR Manuel utilisateur **DE** Bedienungsanleitung ES Manual de usuario IT Manuale d'uso **NL** Gebruiksaanwijzing **RU** Руководство пользователя

TR Kullanım Kılavuzu



Register your product and get support at www.philips.com/support

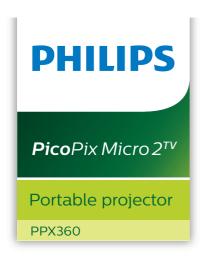

User Manual



Register your product and get support at www.philips.com/support

Table of contents

Int	roduction	3	
Dea	ar customer	3	
Ab	out this user manual	3	
Wh	What's in the box3		
Cus	stomer service centre	3	
1	General safety information	4	
Set	tting up the product	4	
	pairs		
Pov	wer supply	5	
2	Overview	5	
Rea	ar view	5	
Fro	ont view	6	
Sid	le view	6	
Rei	mote control	6	
3	Initial setup	7	
Pla	ace the projector	7	
Coi	nnect power supply	7	
Pre	epare the remote control	8	
Pov	wer on	8	
Firs	st time setup	8	
4	Operation	9	
Ima	age setup	9	
Usi	ng tripod	10	
Pla	acement	10	
5	Use home screen	11	
Use	e of Android TV	11	
Set	ttings of Android TV	11	
	e wired keyboard/mouse		
Use Bluetooth Keyboard/mouse/gamepad12			
6	Chromecast streaming	.12	
No	tice	12	
7	Connect to playback devices	.13	
Col	nnect to devices through HDMI		

8 Other features	13
Listen through external speakers or	
neadphones	13
Charge a USB device	14
Use HDMI ARC function	14
9 Change settings	14
Android TV system settings	14
Projector system settings	16
10 Service	17
Cleaning	17
Jpdate software	17
Troubleshooting	18
II Appendix	20
Technical data	20
CE statement	21
FCC statement	21
Canada Regulatory Compliance	21
Other notice	22

Introduction

Dear customer

Thank you for purchasing this projector.

We hope you enjoy this product and the many functions it offers!

About this user manual

The quick start guide supplied with this product allows you to start using this product quickly and easily. Detailed descriptions can be found in the following sections of this user manual.

Read the entire user manual carefully. Follow all safety instructions in order to ensure proper operation of this product (see General safety information, page 4). The manufacturer accepts no liability if these instructions are not followed.

Symbols used

Notice



Troubleshooting

This symbol indicates tips that will help you in using this product more effectively and easily.

DANGER!



Danger of personal injury!

This symbol gives warning of danger of personal injury. Physical injury or damage can result from improper handling.

CAUTION!




Damage to the product or loss of data!

This symbol gives warning of damage to the product and possible loss of data. Damage can result from improper handling.

What's in the box

- (1) Quick Start Guide
- (2) PicoPix Micro 2^{TV} projector (PPX360)
- (3) Tripod
- (4) Transport bag
- (5) 3x power plug adapter (EU, UK, US)
- (6) 2x AAA batteries
- (7) 1x power adapter
- Remote control

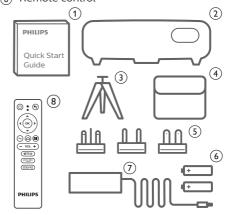

Customer service centre

You can find the support hotline in the warranty card or online:

Web: www.philips.com/support

 $\textbf{Mail:} \ philips.projector.eu@screeneo.com$

International Phone: +41 215 391 665

Please ask your provider for international call costs!

Access the electronic user manual at https://support.philipsprojection.com

Access the community forum at https://community.philipsprojection.com

Introduction 3

1 General safety information

Take note of all warning and safety notes indicated. Do not make any changes or settings that are not described in this user manual. Incorrect operation, and improper handling can lead to physical injury, damage to the product or loss of data.

Setting up the product

This product is for indoor use only. Place the product securely on a stable, flat surface. To help avoid possible injuries to persons or damage to the product itself, position all cables in such a way that no one will trip over them.

Do not operate the product in damp rooms. Never touch the mains cable or the mains connection with wet hands.

Never operate the product immediately after moving it from a cold location to a hot location. When the product is exposed to such a change in temperature, moisture may condense on the crucial internal parts.

The product must have sufficient ventilation and must not be covered. Do not put the product in closed cabinets, boxes, or other enclosures when in use.

Protect the product from direct sunlight, heat, intense temperature fluctuations and moisture. Do not place the product in the vicinity of heaters or air conditioners. Observe the information on temperature listed in the technical data (see Technical data, page 20).

Prolonged operation of the product causes the surface to become hot. In case of overheating, the product automatically switches to standby mode.

Do not allow liquids to leak into the product. Turn off the product and disconnect it from the mains supply if liquids or foreign substances leaked into the product. Have the product inspected by an authorised service centre.

Always handle the product with care. Avoid touching the lens. Never place heavy or sharp objects on the product or on the power cable.

If the product gets too hot or emits smoke, shut it down immediately and unplug the power cable. Have your product checked by an authorised service centre. Keep the product away from open flames (e.g. candles).

The product has built-in battery. Do not dissemble and modify. The built-in battery should be replaced by qualified service staff only.

Do not try to replace the built-in battery yourself. Incorrect handling of the battery or using the wrong type of battery can cause damage to the product or cause injury.

DANGER!



Risk of explosion with incorrect type of batteries!

There is a risk of explosion if the wrong battery type is used.

Do not expose the batteries (battery pack or embedded batteries) to excessive heat such as sunshine, or open fire.

Under the following conditions, a layer of moisture can appear inside the product which can lead to malfunctions:

- if the product is moved from a cold to a warm area;
- after a cold room is heated;
- when the product is placed in a damp room.

Proceed as follows to avoid any moisture buildup:

- 1 Seal the product in a plastic bag before moving it to another room, in order for it to adapt to room conditions.
- 2 Wait one to two hours before you take the product out of the plastic bag.

The product should not be used in a very dusty environment. Dust particles and other foreign objects may damage the product.

Do not expose the product to extreme vibrations. This may damage the internal components.

Do not allow children to handle the product without supervision. The packing materials should be kept out of the hands of children.

For your own safety, do not use the product during thunderstorms with lightning.

Repairs

Do not repair the product yourself. Improper maintenance can result in injuries or damage to the product. The product must be repaired by an authorised service centre.

Please find the details of authorised service centres on the warranty card supplied with this product.

Do not remove the type label from this product, as this will void the warranty.

Power supply

Use only a power adapter which is certified for this product (see Technical data, page 20). Check whether the mains voltage of the power supply matches the mains voltage available at the setup location. This product complies with the voltage type specified on the product.

The power outlet shall be installed near the product and shall be easily accessible.

The capacity of the built-in battery diminishes with time. If the product functions only with AC power supply, the built-in battery is defective. Contact an authorised service centre to replace the built-in battery.

CAUTION!



Always use the () button to turn the projector off.

Turn off the product and unplug from the power outlet before cleaning the surface (see Cleaning, page 17). Use a soft, lint-free cloth. Never use liquid, gaseous or easily flammable cleaners (sprays, abrasives, polishes, alcohol). Do not allow any moisture to reach the interior of the product.

DANGER!




Risk of eve irritation!

This product is equipped with a high power LED (Light Emitting Diode), which emits very bright light. Do not look directly into the projector lens during operation. This could cause eye irritation or damage.

2 Overview

Rear view

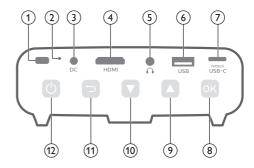

- (1) IR sensor
- Reset key

Reset the projector to the factory default settings (use a small pin to press the reset key).

(3) DC socket

Connect to the power supply.

(4) HDMI port

Connect to the HDMI output on a playback device.

(5) **(**1)

3.5 mm audio output; connect to external speakers or headphones.

(6) USB port

Connect to power USB devices like Amazon Fire TV stick®, Roku® streaming stick (not for mass storage or media player).

7) USB-C (VIDEO) port

Connect to the USB-C video output on a playback device.


- (8) OK
 - Access the settings menu.
 - Confirm a selection or entry.
- (9)
 - Navigate menu options.
 - Increase volume.
- (10)
 - · Navigate menu options.
 - Decrease volume.
- (11) ←

Return to a previous menu screen.

Overview 5

- ① (J)
 - Press and hold for one second to switch the projector on.
 - · Press twice to switch the projector off.
 - When the projector is switched on, the LED turns white. When the projector is switched off, the LED turns off.
 - When charging the projector, the LED turns red regardless of the projector switching on or off.

Front view

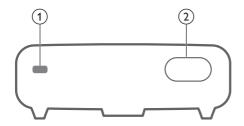


- IR sensor
- 2 Projection lens

Side view



Focus adjustment knob
 Adjust image sharpness.

Remote control

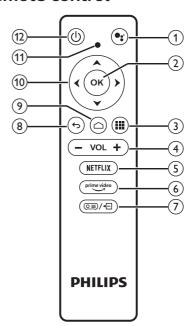

1

Access voice search function (Google Assistant).

(2) OK

Confirm a selection or entry.

3

Display installed apps and access the app store.

(4) VOL +/-

Increase or decrease volume.

Note:

When the projector is connected to an HDMI device and switched to HDMI input, volume adjustment is not possible through the remote control. Press (○三)/←□ to access the settings options and go to *Volume* for volume adjustment.

(5) **NETFLIX**

Ouick access to Netflix service.

(6) prime video

Quick access to Prime Video service.

(7) (□□)/←□

Access or exit projector system settings options.

(8) ←

Return to a previous menu screen.

9 🛆

Access the Android TV home screen.

(10) Navigation buttons

Navigate menu options.

- (1) LED indicator
 - Each time you press a button on the remote control, the LED lights up briefly then off.
 - Blue light indicates the remote control is in Android TV mode and navigation of Android TV interface is possible.
 - Red light indicates the remote control is accessing the projector system settings and navigation of Android TV interface is not possible.
- 12 (1)

Switch the projector on or to standby.

3 Initial setup

Notice



Make sure all devices are disconnected from the power outlet before establishing or changing any connections.

Place the projector

Place the projector on a flat surface in front of the projection surface.

You can also install the projector in different configurations (see Placement, page 10).

Connect power supply

The projector can be operated by either external power or built-in battery.


CAUTION!



Always use the () button to turn the projector on and off.

Operation by external power

- 1 Fix an appropriate plug (EU, UK, US) onto the round base of the power adapter by aligning the pins and holes.
 - To detach the plug from the power adapter, hold down the tab at the edge of the round base, and simultaneously turn and unlock the plug from the round base of the power adapter.

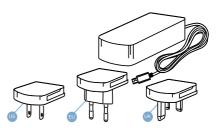

2 Connect the power adapter to the DC socket on the projector, and then to the wall outlet.



Initial setup 7

Operation by built-in battery

The projector can be also operated on built-in battery for portability.

Charge the projector

Charge the projector for 1.5 hours before first use.

Charge the projector when the low battery icon appears in the projection screen.

- To charge the projector, connect the projector to an external power supply as described in the section of "Operation by external power".
- When charging, the LED on the projector turns red. When fully charged, the red LED turns off.
- When powered on, the external power will be used first to run the projector and unused power will charge the battery.
- For faster charging, charge while the projector is powered off.

Notice



The capacity of the built-in battery diminishes with time. If the projector functions only with external power supply, the built-in battery is defective. Contact an authorised service centre to replace the built-in battery.

Prepare the remote control

CAUTION!



The improper use of batteries can lead to overheating, explosion, risk of fire and injury. Leaking batteries can possibly damage the remote control.


Never expose the remote control to direct sunlight.

Avoid deforming, dismantling or charging the batteries.

Avoid exposure to open fire and water. Replace empty batteries immediately. Remove the batteries from the remote control if not in use for long periods of

- Open the battery compartment.
- 2 Insert the supplied batteries (type AAA) with correct polarity (+/-) indicated.

3 Close the battery compartment.

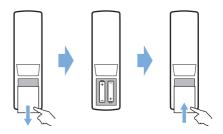

 When using the remote control with infrared signals, point the remote control at the IR sensor on the projector, and make sure there is no obstacle between the remote control and the IR sensor.

Power on

- 1 Press () to turn on the projector. The LED on the projector turns from red to white.
- To turn off the projector, press () and then press it again when the power-off confirmation message pops up.
 The LED on the projector turns from white to red.
- The distance between the projector and the screen determines the actual size of the image.

First time setup

When you turn on the projector for the first time or the projector is reset to the factory default settings, you are prompted to make the Android TV setup.

After setup, the projector will sign in to your Google account and connect to the same WiFi network as your phone.

What you need

- · A WiFi internet connection
- A Google account

Step 1: Pair the remote control with the projector

In the remote control pairing interface, you are prompted to pair the remote control with the projector through Bluetooth. Pairing can enable the remote control to work in Android TV mode.

1 When prompted for pairing, hold down OK and VOL - on the remote control for about 10 seconds until the interface shows successful connection

Make sure the projector is turned on and as close as possible to the remote control.

Step 2: Select language

When prompted for language section, use the **navigation buttons** on the remote control to select an on-screen language.

Step 3: Set up the projector with your Android phone

Set up the projector so that the projector will sign in to your Google account and connect to the same WiFi network as your phone.

- 1 When prompted for Android TV setup, select "Continue" to initialize setup.
- 2 On your Android phone, launch the pre-installed "Google" app. Follow on-screen instructions to complete setup. After successful setup, the projector signs in to your Google account and connects to the same WiFi network as your phone.

4 Operation

Image setup

Screen size adjustment

The projection screen size (or size of images) is determined by the distance between the lens of the projector and the projection surface.

- The projection distance needs to be 1.2 times the width of your desired screen size.
- The projection image size is to up to 80".
- The projection distance is 80 cm to 200 cm.

Image sharpness adjustment

To adjust image focus, turn the focus adjustment knob on the side of the projector.

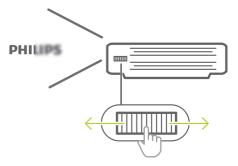


Image shape correction

Auto correction (vertical keystone)

The projector can automatically correct the image to be rectangular when you tilt the projector upwards or downwards.

To enable auto vertical keystone correction, press o≡)/← to access the settings options and go to Auto Keystone - On.



Operation 9

Manual vertical correction

You can manually correct keystone or distorted images in the vertical orientation.

Make sure you have selected Auto Keystone

 Off to enable this function. Press (○三)/←
 to access the settings options and select
 Manual Keystone.



2 Press the **Navigation button** to adjust the image shape.

Using tripod

The projector comes with a tripod which allows more choices for placing the projector.

Locate the tripod socket on the bottom of the projector, then mount and secure the projector on the tripod.

Placement

You can install the projector in four different configuration. Follow the guidelines below for different projector placement.

Notice



10


For overhead mounting on ceiling, purchase a projector mount recommended by an installation professional and follow the instructions that come with the mount.

Before mounting on the ceiling, make sure the ceiling can support the weight of the projector and mounting kit.

For ceiling installation, this product must be securely attached to the ceiling in accordance with the installation instructions. An improper ceiling installation may result in accident, injury or damage.

Front table

Place the projector on a table in front of the projection screen. This is the most common way to position the projector for quick setup and portability.




2 The projector automatically adjusts for the correct projection orientation.

If not in the correct projection orientation, press ⑤ → to access the settings options and go to *Projection Mode - Rotate Front*.

Brightness	Eco
Projection Mode	Rotate Front
Auto Rotate	Off
Auto Keystone	On
Manual Keystone	50
Display Duration	15
	Projection Mode Auto Rotate Auto Keystone Manual Keystone

Front ceiling

1 Mount the projector on the ceiling with upside up in front of the projection screen. A projector mount is required to mount the projector on ceiling.

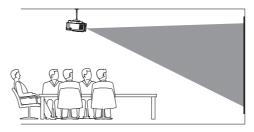


2 The projector automatically adjusts for the correct projection orientation.

If not in the correct projection orientation, press ⑤≡)/← to access the settings options and go to *Projection Mode – Rotate Ceiling*.

Rear table

 Place the projector on a table behind the projection screen. A special rear projection screen is required.




2 The projector automatically adjusts for the correct projection orientation.

If not in the correct projection orientation, press ⑤ → to access the settings options and go to *Projection Mode – Rotate Rear.*

Rear ceiling

1 Mount the projector on ceiling with upside up behind the projection screen. To mount the projector on ceiling behind the screen, a projector mount and a special rear projection screen is required.



2 The projector automatically adjusts for the correct projection orientation.

If not in the correct projection orientation, press \bigcirc \bigcirc to access the settings options and go to Projection Mode - Rotate Rear Ceiling.

5 Use home screen

The home screen provides direct access to Android TV service and setup on the projector.



Use of Android TV

The projector is integrated with Android TV. Android TV offers you various features, such as:

- Watch a wide range of movies and shows from across your favourite apps.
- · Stream music from music apps.
- Get apps from Google Play.
- Play online games from Google Play Games.
- · Support voice input and search.

Navigation of Android TV

You can use the supplied remote control to navigate Android TV.

- Press (○国)/←□ on the remote control to switch to Android TV mode if the buttons on the remote control are invalid for Android TV navigation.
- Press on the remote control to access the Android TV home screen.
- Press on the remote control to display installed apps and access the app store.
- Press on the remote control to access voice search function.

Settings of Android TV

On the home screen (press \triangle), you can navigate to select the $\stackrel{\bullet}{\mathbf{x}}$ icon in the upper right corner of the screen and access various Android TV related setting options, e.g. apps/privacy/security management, picture and sound settings (see Android TV system settings, page 14).

Use home screen 11

Use wired keyboard/mouse

- Simply connect the USB-A plug of your wired mouse or keyboard to the USB port on the projector.
- Use the keys on the keyboard for screen navigation, selection and text input, just like the keyboard operation with a computer.
- Use the buttons on the mouse for navigation and selection.

Use Bluetooth Keyboard/ mouse/gamepad

- Pair your Bluetooth keyboard, mouse or gamepad with the projector as follows:
 - On the home screen (press △),
 navigate to select the ☼ icon in the
 upper right corner of the screen to
 access the settings options. Use the
 Navigation buttons on the remote
 control to select Remotes & Accessories
 and select your Bluetooth keyboard,
 mouse, or gamepad name from the
 Bluetooth device list.
- 2 After pairing, you can use the Bluetooth keyboard or mouse with the projector.

12

6 Chromecast streaming

This projector has Chromecast built-in. This allows you to stream content (e.g. videos, photos and music) from a Chromecast-enabled app on your mobile device (Android or iOS device) to the projection screen.

What you need

- Make sure the projector and your mobile device are connected to the same WiFi network.
- The app to be cast must be Chromecast enabled and must be the latest version.
 Visit Google Play Store or Apple App Store for any app updates.
- Launch the Chromecast-enabled app on your mobile device.
- 2 On the app screen, tap the Chromecast icon
- 3 Tap the name of this projector from the pop-up on your mobile phone.
 After successful connection, the app content is streamed to the projection surface.

Notice



For better streaming performance, use a 5 GHz WiFi network.

Only content from the app on the mobile device can be streamed to the projector.

Google, Google Play, YouTube, Android TV and other marks are trademarks of Google LLC. Google Assistant is not available in certain languages and countries.

Philips · PicoPix Micro 2^{TV}

7 Connect to playback devices

Notice




Make sure all devices are disconnected from the power outlet before establishing or changing any connections.

Connect to devices through HDMI

Connect a playback device (e.g. a Blu-ray player, gaming console, camcorder, digital camera or PC) to the projector through HDMI connection. With this connection, images are shown on the projection screen, and audio is played on the projector.

 Using an HDMI cable, connect the HDMI connector on the projector to the HDMI output on the playback device.

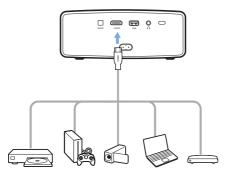

2 The projector automatically switches to HDMI input when HDMI connection is made. The projection screen shows images. If the projection screen does not show images, select HDMI input manually. Press (○■)/-□ to access the settings options and go to Input Source - HDMI.



8 Other features

Listen through external speakers or headphones

Connect external speakers or headphones to the projector. With this connection, audio from the projector is played through the external speakers or headphones.

DANGER!




Danger of hearing damage!

Before connecting the headphones, turn down the volume on the projector.

Do not use the projector over a longer time at high volume – especially when using headphones. This could lead to hearing damage.

- 1 Using a 3.5 mm audio cable, connect the ∩ connector on the projector to the analogue audio input (3.5 mm jack, or red and white jacks) on the external speakers. Or connect the ∩ connector on the projector to headphones.
 - The speakers of the projector are deactivated automatically when the external speakers or headphones are connected to the projector.

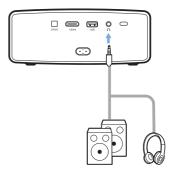

When connecting to the headphones, use the volume control on the remote control to adjust the volume to a comfortable level.

Charge a USB device

You can charge a USB device (e.g. smartphone, MP3 player or other mobile device).

- Using a USB-A cable, connect your USB device to the USB port on the projector.
- 2 Turn on the projector. The USB device starts to charge automatically.

Use HDMI ARC function

This projector supports HDMI with Audio Return Channel (ARC). With ARC feature, you can hear the audio from the projector on the connected HDMI ARC device.

- Make sure the projector is connected to an HDMI device through HDMI ARC connection (see Connect to devices through HDMI, page 13).
- 2 To activate HDMI ARC function on ths projector, press ②≣/+☐ to access the settings options and go to HDMI ARC - ON.



9 Change settings

This section helps you change the following two system settings:

- · Android TV system
- Projector system

Android TV system settings

- On the home screen (press △), use the Navigation buttons on the remote control to select the ☆ icon in the upper right corner of the home screen then press OK to access various setting options.
- 2 Use the **Navigation buttons** and **OK** to select and change settings.

WiFi settings

Go to *Network & Internet* to connect the projector to the WiFi network. Use the pop-up virtual keyboard or voice input to input letters and digits.

Google account settings

Go to Accounts & Sign In to sign in or add a Google account.

Language settings

Go to *Device Preferences - Language* to select a language for on-screen menus.

Date and time settings

Go to *Device Preferences - Date & time* to access the following settings.

 Automatically update date and time, or manually set date, time and time zone.

Keyboard settings

Go to *Device Preferences - Keyboard* to access various settings for keyboard.

Bluetooth settings

Go to *Remotes & Accessories* to pair the projector with the projector's remote control, or a Bluetooth keyboard/mouse/gamepad.

Apps settings

Go to Apps to access the following settings.

- List downloaded/system/running apps, and memory used by each app
- Set various permissions for the installed apps, e.g. location, contacts, camera, microphone, phone and SMS, etc.
- Set security and restrictions for apps installation
- Check an app version, app size and cache size
- · Clear cache size or uninstall an app.

Picture settings

Projection screen

Go to *TV settings - Display* to access the following settings.

- Screen resolution: Select a screen resolution to best support your video.
- Screen position: Scale down the projection image.

Projection image

Go to *TV settings - Picture* to access the following settings.

- Picture Mode: Select a predefined color brightness setting for picture and video display.
- Custom Settings: Customize color values in brightness, contrast, saturation and sharpness.
- DNR: Select high/medium/low level of DNR (Digital Noise Reduction) to remove image noise from a video signal to achieve image clearness.
- Backlight: Adjust the brightness of the backlight of the projector screen.

Sound options

Internal speaker

Go to *Device Preferences - Sound* to access the following settings.

- System Sound: Turn the system sound on or off.
- Surround Sound: Enable or disable surround sound effect; automatically select a sound format the projector best supports or manually select a sound format.

Display Netflix activation code

 Go to TV settings - Netflix ESN to display the Netflix activation code.

Restore default settings

- 1 Go to Device Preferences Reset.
- 2 Follow the on-screen instructions to start or cancel the reset.

Notice



After resetting to the default settings, all the files and apps you installed are completely erased.

Other system settings

Go to *Device Preferences* to access the following settings.

- About: View information about, update, or restart the device.
- Storage: Check the total and used space for internal storage.
- Home screen: Customize and organize the home screen
- Google assistant: Select the active Google account and customize Google Assistant behaviour.
- Chromecast built-in: View information about Chromecast.
- Screen saver: Select a timer to automatically turn the screen off when the projector is idle.
- Location: Check your location status and view all recent location requests.
- Usage and diagnostics: Choose if you wish for the device to automatically send diagnostic information to Google.
- Security and restrictions: Modify your security settings or create a restricted profile.
- Accessibility: Configure a variety of accessibility options, including captions and text-to-speech.


Change settings 15

Projector system settings

- Press (○三)/← on the remote control to access the projector system settings options.
- 2 Use the **Navigation buttons** and **OK** to select and change settings.

Input options

You can access the following input options.

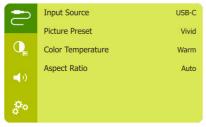

- · Input Source: Access the following settings.
 - Android TV: Select it when no HDMI device is connected.
 - USB-C: Select it when a USB-C device is connected.
 - HDMI: Select it when an HDMI device is connected.



- Picture Preset: Select a predefined color brightness setting for picture and video display, or select User to customize color values on brightness, contrast, saturation and sharpness.
- Color Temperature: Select Warm when the ambient lighting is yellowish. Select Cool when the ambient lighting lighting is bluish. Select User to customize color values in RGB mode.

 Aspect Ratio: Select the aspect ratio of the screen. If set to Auto, the projector will select the most suitable option.

Image options

You can access the following image setting options.



- Brightness: Access the following settings.
 - Eco: The screen is darker, but the projector uses less power.
 - Normal: The screen is at a normal brightness with standard power use.
 - *Bright*: The screen is brighter, but the projector uses more power.
- Projection Mode: Adjust the projection to the correct position based on different installation of the projector.
- Auto Rotate: Automatically rotates the screen for optimal display.
- Auto Keystone: Enable or disable auto correction of the image shape.
- Manual Keystone: Manually correct keystone or distorted images in the horizontal and vertical orientation.
- Display Duration: Select a timer to hide the OSD.

Sound options

You can access the following sound setting options.



· Volume: Adjust volume of the projector.

- Sound Presets: Select a preset sound effect or select User to manually adjust bass and treble.
- HDMI ARC: Switch the audio output between Internal Speaker and ARC. Select HDMI ARC if you want to output audio through HDMI connection to a digital device (e.g. home cinema system or AV receiver).

Other options

You can also access the following options.



- OSD Language: Select a language for onscreen menus.
- HDMI CEC: Enable to allow CEC control of the projector.
- Firmware Upgrade: Software update via a USB device (see Update SW through USB, page 18).
- · Factory Restore: Restore default settings.
- Software Version: Check software version of this product.

10 Service

Cleaning

Ŵ

Instructions for cleaning!

Use a soft, lint-free cloth. Never use liquid or easily flammable cleansers (sprays, abrasives, polishes, alcohol, etc.). Do not allow any moisture to reach the interior of the projector. Do not spray the projector with any cleaning fluids.

DANGER!

Wipe over the surfaces gently. Be careful that you do not scratch the surfaces.

Cleaning the lens

Use a soft brush or lens cleaning paper for cleaning the lens of the projector.

DANGER!



Do not use any liquid cleaning agents!

Do not use any liquid cleaning agents for cleaning the lens, to avoid damaging the coating film on the lens.

Update software

The latest software of the projector can be found on www.philips.com/support for you to get the best features and support from the projector.

Before you update the software of the projector, check the current software version:

Press (○≡)/← to access the settings options and go to Software Version.



Service 17

Update SW through USB

CAUTION!



Do not turn off the projector or remove the USB flash drive during the update.

- Check the latest software version on www.philips.com/support. Find your product (model number: PPX360/INT), and locate 'Software and drivers'.
- 2 Download the zipped software file, then unzip and save it in the root directory of the USB flash drive.
- 3 Connect the USB flash drive (FAT32 formatted) to the projector.
- 4 Press (o≡)/- to access the settings options and go to Firmware Upgrade.
- 5 Follow the on-screen instructions to complete the update.

Troubleshooting

Power cycling

If a problem occurs that cannot be corrected with the instructions in this user manual, follow the steps given here.

- 1 Turn the projector off by pressing ().
- 2 Wait at least ten seconds.
- 3 Turn the projector on by pressing (1) once.
- 4 If the problem persists, please contact our technical service centre or your dealer.

Problems	Solutions
The projector cannot be turned on.	Disconnect and reconnect the power cable, and try to turn the projector on again.
The projector cannot be turned off.	• Press and hold 0 longer than ten seconds. If this does not work, disconnect the power cable.
The remote control does not work.	The remote control is not paired with the projector. Pair the remote control with the projector (see First time setup, page 8).
	The remote control is not in Android TV mode for Android TV menu navigation. Press (□≡)/←□ on the remote control to switch the remote control to Android TV mode (if the remote control is paired with the projector).
	When the remote control is in Android TV mode, the LED on the remote control flashes blue once each time you press a button on the remote control.
	Check the batteries of the remote control.
No sound output to the connected digital	Check the cables to the external device.
device.	Check that the sound output is activated on the projector. Press ⑤■) ← on the remote control to access the settings options and go to Audio Output - ARC/Optical.
No image from the external HDMI device.	 Check if the correct HDMI input is selected. Disconnect the HDMI cable or switch off the HDMI device. Wait three seconds. Reconnect the HDMI cable or switch on the HDMI device again.

Problems	Solutions
No sound from external HDMI output device.	On the HDMI output device, set the audio setting to Multichannel (Raw data) & Stereo (PCM).
No sound when you connect your computer via HDMI cable.	Check that the sound is activated on the computer.
Cannot stream video from an app on my mobile phone.	Make sure the correct setup is made and the app is Chromecast-enable (see Chromecast streaming, page 12).
When I view videos, the sound or the picture is sometimes distorted or the sound is not synchronized to the picture.	The available WiFi bandwidth is insufficient for sending the video flawlessly from the smartphone to the projector. This can happen if one or more WiFi networks operate in the same frequency range nearby. Certain IoT devices (e.g. ZigBee enabled devices) also operate in this frequency range. Your smartphone is not fast enough to compress the data and send it simultaneously over WiFi.
The temperature of the projector's surface is warm.	For this projector it is normal to generate moderate heat during operation.
The projector turns itself off.	 When the projector is running for a long period of time, the surface becomes hot. Check that the power cable is connected correctly.
	' '
What to do if the projector does not work when connecting to a notebook PC?	 Check that the HDMI cable is plugged in correctly. Make sure that the notebook PC has been switched to projector display.

Service 19

11 Appendix

Technical data

•	CC		•	Co	LL	ua	LC
Te	chr	olo	٦ø١	//ni	oti	cal	

recrinology/optical	
Display technology	DLP
Light source	LED
Color space	100% REC 709
Resolution	854 × 480 pixel
LED lifetime	over 20,000 hours
Contrast ratio	600:1
Aspect ratio	16:9
Throw ratio	1.2:1
Screen size (diagonal)	10" - 80"
Screen distance 80 cm	n - 200 cm / 24"- 60"
Keystone correction Projection modes	,
Focus adjustment	
Auto rotate	
Internal memory	2 GB
Carrant	

Sound

Built-in speakers	2 x 3W
Built-in powerful DSP	yes

Connection

Wi-Fi	802.11a/b/g/n/ac, 2.4+5GHz,
	Chromecast built in
Bluetooth	connection for remote control,
	keyboard, mouse, or gamepad
USB 2.0	charging
USB-C	video
HDMI	x1 (CEC + ARC)
Audio output	HDMI
	3.5 mm headphone out (analog)

Power source

Power consumpti	onoperating: 100 W
	standby: 0.3 W
Power supply	100-240V~, 50/60Hz
Power adapter	DC 12V 3A
Battery	. 12,000mAh (4h in eco mode)

Apps

Pre loaded apps	Android TV TM /
	full catalogue of apps

Product details

Dimensions (W × D × H) Weight	
Operating temperature	5 °C - 35 °C
Storage temperature	< 60 °C

Package content

PicoPix Micro $2TV^{TV}$ projector, remote control with 2 AAA batteries, power cables (EU, UK, CH, US), warranty card, quick start guide

CE statement

- The product shall only be connected to a USB interface of version USB 2.0 or higher.
- Adapter shall be installed near the equipment and shall be easily accessible.
- The operating temperature of the EUT can't exceed 35°C and shouldn't be lower than 5°C.
- The plug is considered as disconnect device of adapter.
- The UNII Band 5150-5250 MHz is for indoor use only.
- The device complies with RF specifications when the device is used at 20 cm from your body.

Hereby, Screeneo Innovation SA declares that this product is in compliance with essential requirements and other relevant provisions of Directive 2014/53/EU.



The Declaration of Compliance can be consulted on the site www.philips.com.

Frequency range (MHz)	Limits dB (µV)	
	Quasi-peak	Average
0.15 to 0.50	66 to 56	56 to 46
0.50 to 5	56	46
5 to 30	60	50

FCC statement

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to the user.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to user.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

FCC RF Radiation Exposure Statement

During operation, the separation distance between the user and the antenna shall be at least 20 cm. This separation distance will ensure that there is sufficient distance from a properly installed externally-mounted antenna to satisfy the RF exposure requirements.

FCC ID: 2ASRT-PPX360/INT

Canada Regulatory Compliance

This device complies with Industry Canada CAN ICES-3 (B)/NMB-3(B)

RSS-Gen & RSS-247 statement: This device complies with Industry Canada RSS standard(s).

Operation is subject to the following two conditions:

- 1 This device may not cause interference, and
- 2 This device must accept any interference, including interference that may cause undesired operation of the device.

Appendix 21

RF Radiation Exposure statement

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS102 and users can obtain Canadian information on RF exposure and compliance.

This device should be installed and operated with a minimum distance of 7.8 inches (20 centimetres) between the device and your body.

Other notice

Preservation of the environment as part of a sustainable development plan is an essential concern of Screeneo Innovation SA. The desire of Screeneo Innovation SA is to operate systems respecting the environment and consequently it has decided to integrate environmental performances in the life cycle of these products, from manufacturing to commissioning use and elimination.



Packaging: The presence of the logo (green dot) means that a contribution is paid to an approved national organisation to improve package recovery and recycling infrastructures. Please respect the sorting rules set up locally for this kind of waste.

Batteries: If your product contains batteries, they must be disposed of at an appropriate collection point.



Product: The crossed-out waste bin symbol on the product means that the product belongs to the family of electrical and electronic equipment. In this respect, the European regulations ask you to dispose of it selectively:

- At sales points in the event of the purchase of similar equipment.
- At the collection points made available to you locally (drop-off centre, selective collection, etc.).

In this way you can participate in the reuse and upgrading of Electrical and Electronic Equipment Waste, which can have an effect on the environment and human health

The paper and cardboard packaging used can be disposed of as recyclable paper. Have the plastic wrapping recycled or dispose of it in the non-recyclable waste, depending on the requirements in your country.

Trademarks: The mentioned references in this manual are trademarks of the respective companies. The lack of the trademarks [®] and [™] does not justify the assumption that these dedicated terminologies are free trademarks. Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Screeneo Innovation SA disclaims any and all rights in those marks.

Neither Screeneo Innovation SA nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expense s incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorised modifications, repairs, or alterations to this product, or failure to strictly comply with Screeneo Innovation SA operating and maintenance instructions.

Screeneo Innovation SA shall not be liable for any damages or problems arising from the use of any options or any consumable materials other than those designated as original Screeneo Innovation SA/PHILIPS products or Screeneo Innovation SA/PHILIPS approved products.

Screeneo Innovation SA shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Screeneo Innovation SA/PHILIPS products.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Screeneo Innovation SA. The information contained herein is designed only for use with this product. Screeneo Innovation SA. is not responsible for any use of this information as applied to other devices.

This user manual is a document that does not represent a contract.

Errors, printing errors and changes are reserved. Copyright © 2021 Screeneo Innovation SA.



Screeneo Innovation SA

Route de Lully 5c - 1131 Tolochenaz - Switzerland

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. used under license. Screeneo Innovation SA is the warrantor in relation to the product with which this booklet was packaged.

PicoPix Micro 2^{TV}