




Philips Hairclipper series
3000
Hair clipper

Self-sharpening metal blades
13 length settings
45mins cordless use/8h charge

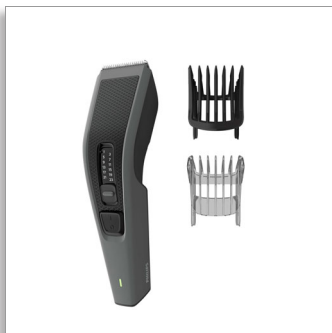

HC3525/15

Constant power, easy haircut

DuraPower technology: increase battery lifetime

With Hairclipper 3000 you achieve an easy, quick and even haircut, time after time. The DuraPower technology ensures a long-lasting battery performance, while the self-sharpening metal blades remain as sharp as day one without oiling

Easy to use

- Quick release blades for easy cleaning
- 45 minutes of cordless use after an 8-hour charge
- Ergonomic design for comfort and control

Performance

- DuraPower technology for a longer lasting battery life
- Self-sharpening metal blades

Precise length control

- Tames beards and stubble
- Adjusts to different length settings

Built to last

- The blades never need oiling
- Warranty for purchase protection

PHILIPS

Hair clipper
Self-sharpening metal blades 13 length settings, 45mins cordless use/8h charge

HC3525/15

Highlights

DuraPower technology




The DuraPower technology lowers the friction on the blades, which protects the motor and the battery from being overloaded. This way, the battery life time of your clipper is increased.

Self-sharpening metal blades



Self-sharpening metal blades are incredibly long-lasting. Even after 5 years, they cut just like they did on day one.

13 lock-in length settings

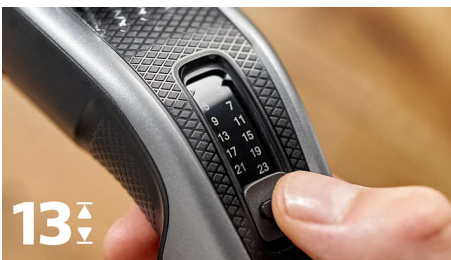

Cut your hair to the exact length you want. Just select one of 12 length settings between 1mm to 23mm at 2mm increments, or remove the comb for a close 0.5mm trim.

Extra adjustable beard comb



Electric hair clippers to easily trim your beard or stubble, the adjustable beard comb has 12 length settings between 1mm to 23mm at 2mm increments, or you can remove the comb entirely for a close 0.5mm trim.

Cordless & corded use



Use the clipper cordless for maximum power and freedom. Its powerful NiMH battery which provides up to 45 minutes of cordless power after 8 hour of charging.

Comfortable grip



Philips clippers have a textured grip designed for easy handling, so you can cut your hair with control and in comfort.

Easy to clean



Clean your electric hair clippers with ease. Simply click open the head to release and clean the blades.

Zero maintenance



Clipping power that's easy to maintain—our blades never need oiling.

2-year worldwide guarantee



All of our grooming products are built to last. They come with a 2 year warranty, never need to be oiled and are compatible with any voltage worldwide.

Hair clipper

Self-sharpening metal blades 13 length settings, 45mins cordless use/8h charge

HC3525/15

Specifications

Accessories

- Maintenance: Cleaning brush
- Comb: Adjustable hair comb, Extra adjustable beard comb

Power

- Automatic voltage: 100-240 V
- Battery type: Ni-MH
- Run time: 45 minutes
- Charging: 8 hours full charge

Design

- Handle: Ergonomic grip & handling

Consumer Trade Item

- Height: 22.7
- Width: 14.4
- Length: 7
- Net Weight: 0.281
- Gross Weight: 0.415
- GTIN: 8710103996910
- Country of origin: ID
- Harmonized system code: 85102000

Outer Carton

- Height: 24.2
- Width: 15
- Length: 29.3
- Net Weight: 1.124
- Gross Weight: 1.832
- GTIN: 18710103996917

Service

- 2-year worldwide guarantee

Cutting system

- Cutter width: 41mm
- Cutting element: Self-sharpening metal blades
- Range of length settings: From 0.5 to 23 mm
- Number of length settings: 13
- Precision (size of steps): By 2mm

Ease of use

- Maintenance free: No oil needed
- Cleaning: Removable cutter, Washable blades
- Operation: Corded & Cordless use



Issue date 2023-10-25

Version: 1.0.1

EAN: 87 10103 99691 0

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com