

PHILIPS

Grooming kit

Multigroom series
3000

QG3270/32



For all styles, no compromise

Shaver with Lithium Ion battery power

Grooming kit for all styles, no compromise with Lithium ion battery power, superior performance and skin friendly trimmer, designed to create any style you want with excellent precision, giving you that sense of pride of a perfect result.

Easy to use

- 2- year guarantee, worldwide voltage, no oil needed
- Charging stand and pouch: stay charged and ready to go
- Cordless and corded use
- 50 minutes cordless power after 1 hour quick charge.
- Simply rinses clean

Skin friendly performance


- Skin-friendly, high-performance trimmer blades

All styles (no compromise)

- Mini shaver for a close finish on the edges of your beard
- Extra-wide hair clipper for efficient hair clipping.
- Beard & moustache comb with 9 length settings
- Hair-trimming comb with 9 length settings
- Full-sized trimmer for neck line, sideburns and chin.
- Precision nose trimmer for your nose, ears, and eyebrows

Highlights

1 hour charge

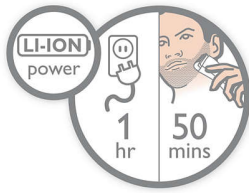

The powerful lithium ion battery lasts for 50 minutes after a 1 hour charge. A quick 10 minute charge gives you 10 minutes of grooming time, so it's always ready when you are.

Beard & moustache comb

The beard & moustache comb fits over the full-sized trimmer, and has 9 different length settings – so you can keep your beard at the length you prefer.

Built to last



All of our grooming products are built to last. They come with a 2 year worldwide guarantee, worldwide voltage compatibility, and they never need to be oiled.

Cordless and corded use

Use it cordless or plugged in.

Extra-wide clipper

Use the extra-wide clipper for hair cuts, or to efficiently remove large areas of hair.

Full-sized trimmer

Use the full-sized trimmer for touch-ups, and to create clean lines at the edge of your beard. You can also use it without a comb for a 3-day beard look.

Hair-trimming comb

The hair-trimming comb fits over the extra-wide clipper and has 9 different length settings you can use to keep your hair neat and styled between haircuts.

Mini shaver

Use the mini shaver after trimming the edges of your beard for a close, clean, finished look.

Nose trimmer

Use the nose trimmer on nose, ears and eyebrows to remove unwanted hairs.

Precision trimmer

Use the precision trimmer to create the fine lines and details that define your style.

Washable attachments



Simply remove the attachments, and you can thoroughly rinse them under the tap.

Charging stand and pouch



The foldable charging stand is designed to fit into even the smallest spaces, so you can charge it wherever you want and easily take it with you when you travel. The pouch protects your shaver during travel and gives you a convenient place to store it when not in use.

Skin-friendly high-performance



The steel blades of the electric shaver lightly brush against each other, so they sharpen themselves as you trim! The blades stay extra-sharp to always cut hairs neatly and effectively, but have rounded blade tips and combs to prevent skin irritation.

Specifications

Create the look you want

Number of length settings: 9 secured length settings

Styling tools: 9 position hair clipper comb, Beard and moustache comb

Ease of use

Wet & Dry: Washable attachments

Accessories

Charging stand
Storage pouch

Power system

Battery type: Li-ion
Running time: 50 minutes
Worldwide voltage: 100–240 V
Charging time: 1 hour
Usage: Cordless & mains

Attachments

Mini shaver
Precision trimmer: 21 mm
Full size trimmer blade
Hair clipper: 41 mm
Nose, ear and eyebrow trimmer

Maintenance

Lubrication: Blades need no oiling
Guarantee: 2-year worldwide guarantee

