

Philips Screeneo  
Screeneo Smart LED  
Projector

HDP1550



## Get the big picture

Enjoy big entertainment - an image from 50" up to 100" with Screeneo placed just a few centimetres from the wall. Easy to move it around in the house, or simply set up your outdoor cinema in the garden! Also features great sound!

### **From small to big with excellent image quality**

- Flexible screen size — from 50 to 100"
- LED technology for brilliant colours and long life

### **Enrich your sound experience**

- Integrated speakers and subwoofer

**PHILIPS**

# Specifications

## Technology/optical

- Display technology: DLP
- Light source: RGB LED
- LED light source lasts over: 30.000 hours
- Contrast ratio: 100,000:1
- Screen distance: 10–44 cm
- Throw ratio: 0.321
- Internal memory: 4 GB
- Operating system: Android 4.2
- Resolution: 1280 x 800 pixels
- Screen sizes: 50"-100"
- Keystone correction
- Aspect ratio: 4:3 and 16:9
- Wall colour correction
- Focus adjustment: manual
- 3D technology: converts 2D into 3D, supports all 3D modes
- MP4 player
- Noise level: < 25 dB(A)
- Projection modes: front, rear, front ceiling, rear ceiling

## Connection

- Connectivity: 1 x front standard USB, 2 x back HDMI, 1 front HDMI, 2 x back Standard USB, Audio out (analogue, digital), Headphone out front, Standard SD card, VGA, Composite
- DLNA
- LAN (Ethernet)

## Sound

- Internal stereo speaker: 2 + subwoofer
- Sound system: Dolby Digital 2.1
- Supported audio formats: mp3, wav
- RMS: Output power 26 Watt

## Standard package includes

- User guide: on internal memory, Internet
- Remote control

- Quick start guide
- HDMI cable
- Power cable
- Carrying bag
- 2 x AAA battery
- HDP 1550

## Power Supply

- Power adapter: 90-264V, 47-63Hz for EU and UK

## Packaging dimensions

- Packed (W x D x H): 490 x 392 x 317 mm
- Unpacked (W x D x H): 339 x 287 x 148 mm

## Temperature range

- Operation: 5-35°C
- Storage packed: -25-60°C
- Storage unpacked: 0-45°C

## Relative humidity

- Operation: 15-85% RH
- Storage packed: 5-93% RH
- Storage unpacked: 15-85% RH

## Supported video standards


- PAL
- SECAM
- NTSC
- 576i/p
- 480i/p
- 720i/p
- 1080i/p

## Internal media player

- Supported video formats: AVI, MOV, MP4, MKV, FLV, TS, M2TS, 3GP
- Supported audio formats: MP3, WAV
- Supported photo formats: JPEG, BMP, PNG, GIF


# Highlights

## Flexible screen size

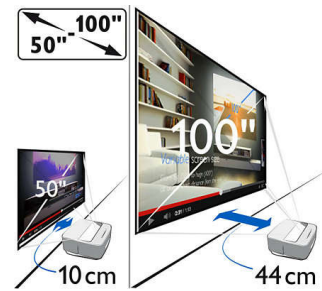

Experience your films, sport events or gaming like you have never done before, from 50" up to 100". Sit back and enjoy in the comfort of any room in your home. Screeneo can easily be placed close to any smooth wall. You just need to grab the stylish leather handle at the back of the product. For viewing a cartoon film for kids on a 50", place it 10 cm from the wall. For your favourite football match on 100", place Screeneo 44 cm away from the wall.

## Integrated speakers

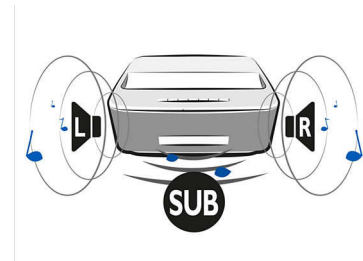

There is no need to connect to any sound system thanks to the integrated subwoofer and loudspeakers, with an output power of 26 W RMS. Your perfect sound experience will be completed with Dolby Digital 2.1 sound system.

## LED technology

Screeneo uses high-quality LED technology to project your photos, films and more in brilliant colour and for a duration of 30,000 hours. Combined with the innovative ultra short throw technology, it guarantees a big wow anytime you switch it on.

