

PHILIPS

Car air purifier

GoPure Compact
100 Airmax

Compact

Fine particles CADR*: 14m³/hour

Toxic gases CADR*: 11.5m³/hour

Air cleaning efficiency: 13min



GPC10MXX1



Healthy air in your car

Efficiently removes fine particles and toxic gases

Philips unique high-efficiency filtration technology removes fine particles like PM_{2.5} with a Clean Air Delivery Rate (CADR) of 14m³/hour, and toxic gases with a CADR of 11.5m³/hour, to keep you and your family in good health.

Powerful air filtration

- Cleans your car air in just 13 min
- Fast removal of fine particles with CADR at 14m³/hour
- Filter toxic gases and TVOC with CADR at 11m³/hour

Simplicity

- Easy installation
- Filter replacement indication
- Automatic switch on/off

Highlights

Particles filtration



Philips SelectFilter high efficiency particulate filtration removes fine particles found in car indoor environment with a Clean Air Delivery Rate (CADR) of 14m³/hour (50% of 0,3µm particles filtration; 3m³ chamber). This includes cigarette smoke, pollens, dust, PM2.5 particles, and airborne virus or bacteria superior to 0,3 micron.

Toxic gases elimination



Selective additives embedded in Philips SelectFilter, neutralize and eliminate toxic gaseous chemicals from the air through a powerful adsorption and oxidation process, with a Clean Air Delivery Rate of 11.5m³/hour (60 min; 1m³ chamber). This


includes car exhaust fumes, chemicals emitted by plastic materials and finishes used in car interiors, and odor emitting substances e.g. volatile organic compounds (VOCs), toluene, formaldehyde.

Clean air efficiency



Your Philips GoPure car air purifier will clean 50% of all fine particles inside your car in just 13 min. This has been tested in a 3m³ chamber, a volume similar to the interior of an average sedan car.

Filter replacement indication

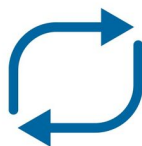

Filter replacement indication when filter needs to be changed

Easy operation



Automatic switch on when you start your car, 2 speeds to adjust filtration power

Easy installation



Including 4m 12V power cable and mounting accessories for safe installation on dashboard, headrest, under seats and rear deck

Specifications

Product description

Air flow: 12 m³/h
Air particle sensor: No
Air quality indicator (AQI): No
Automatic On/Off
Filter replacement indicator
Fragrance dispenser: No
Frequency: 50 Hz
Speed settings: 2 speeds
Power: 3 W
Voltage: 12 V
Filter Lifetime: 350 hr
Technology: Car air purifier
Color: Black
Designation: GP Compact 100 Airmax
App enabled: No
Noise level (High): 50 dB(A)
Noise level (Low): 40 dB(A)

Performance

Air Cleaning Efficiency: 13 min healthy air min
Filtration bacteria/virus: 70 %
Boost mode: No
Toxic gases & TVOC filtration: CADR of 11.5m³/hour
Filtration of fine particles: CADR of 14m³/hour

Replacement

Filter type: GSF120X110X1
GoPure clean air system type: GPSA30GPX1, GPSA33GPX1, GPSL23GPX1

Weight and dimensions

Box dimensions (L x W x H): 225 x 180 x 79 mm
Product dimensions (L x W x H): 176 x 176 x 73 mm

73 mm

Product weight: 610 g
Box weight (incl. product): 840 g

Marketing specifications

Expected benefits: Healthy air in your car
Product highlight: Compact

Accessories in the box

Mounting accessories: Attachment belt
power cable length: 4 m

Logistic data

EAN (China): 6923410798357
Ordering code (China): 79835728
Quantity in box: 1
Reference (Order entry): GPC10GPX1
EAN (APR): 8719018010063

