

PHILIPS




Xenon warranty

Xenon LongerLife

Type of lamp: D1S

85 V, 35 W

Number of bulbs: 1

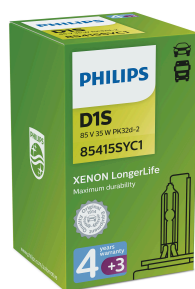

85415SYC1

We care about your safety — guaranteed

Extend your 4-year warranty to 7 years, in 3 easy steps

Philips LongerLife Xenon lamps automatically come with a 4-year warranty. Simply register your purchase online to extend your warranty by an extra 3 years for free. So you can feel safe for the next 7 years.

4-year warranty + 3 extra

- Xenon LongerLife lamps come with a 4-year warranty for free.
- Simply register online to extend your warranty
- Warranty terms and conditions
- How to claim on your warranty

The perfect, long-lasting Xenon lamp for your car

- The perfect, long-lasting Xenon lamp for your car

Original equipment from the inventor of Xenon

- Philips is the inventor of Xenon HID technology
- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant to humidity

Highlights

Buy and get 4 years' warranty



Philips LongerLife Xenon lamps offer high levels of quality and safety. From the date of purchase, you will automatically receive a 4-year warranty for free.

Extra 3-year warranty — free



Xenon LongerLife lamps have a longer lifetime than any Philips Xenon lamp. To give you total peace of mind, you can get an extra 3-year warranty for free. Simply register at <https://www.philips.com/c-cs/xenonwarranty> and follow 3 simple steps: 1. First, check that you have bought a genuine Philips product by using the certificate of authenticity sticker located on the product packaging. 2. Once checked, complete your details online and provide proof of purchase. 3. Finally, print and keep your 7-year warranty certificate.

High-quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion.

Philips quartz-glass lamps are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light.

How to claim on your warranty



Go back to your reseller or contact the Philips Consumer Care team on 0800-7445 4775. If your claim is in line with the terms and conditions, you will be provided with a new lamp that is technically equivalent to a Xenon LongerLife lamp. If you go through the Philips Consumer Care service to receive a replacement, please send the defective Philips bulb in a protective package. Don't forget to include your receipt and pay the correct postage for the contact address in your country.

Long-lasting replacement



Philips Xenon LongerLife replaces a single burned-out lamp. We highly recommend that you change your lamps in pairs to ensure greater and more homogeneous visibility for maximum safety. Long-lasting and economical, you will get perfect satisfaction driving in darkness.

Original Xenon technology



Xenon HID (High Intensity Discharge) lamps offer twice as much light for safer driving in all conditions. As a matter of fact, the intense white light produced by the Xenon HID lamps is comparable to daylight. Studies have demonstrated that xenon automotive lighting helps drivers to concentrate on the road and to distinguish obstacles and road signs much faster than traditional lamps.

Resistance to humidity

Only a burning bulb made of quartz glass can resist thermal shocks, such as a drop of cold water touching the hot bulb, which can happen when you drive through water with a broken headlight unit.

Warranty terms and conditions



Register your lamp within 30 days from the date of purchase. The warranty is valid for up to 7 years or a maximum of 150 000 km, whichever comes first. The warranty is valid for non-commercial use only. This warranty is applicable to genuine Philips LongerLife Xenon lamps only. Philips is not responsible for the mounting, nor the postage — even if the failure happens during the warranty period. To claim your warranty, keep your warranty certificate and proof of purchase for the entire duration of the warranty. The general Philips warranty conditions also applies: www.philips.com/warranty

Specifications

Marketing specifications

Expected benefits: Long lasting

Product highlight: 4-year warranty + 3 extra

Product description

Application: High beam, Low beam

Base: PK32d-2

Designation: D1S LongerLife

ECE certification

Range: Xenon LongerLife

Technology: Xenon

Type: D1S

Light characteristics

Lumens: 3350 \pm 300 lm

Colour temperature: Up to 4300 K

Electrical characteristics

Wattage: 35 W

Voltage: 85 V

Ordering information

Order entry: 85415SYC1

Ordering code: 37250233

Packaging Data

Packaging type: C1

EAN1: 8727900372502

EAN3: 8727900372519

Packed product information

Width: 5.4 cm

Height: 9.3 cm

Net weight per piece: 73.2 g

Length: 5.4 cm

Gross weight per piece: 102 g

Pack Quantity: 1

MOQ (for professionals): 2

Outer pack information

Length: 11,1 cm

Width: 9,6 cm

Height: 5,7 cm

Gross weight per piece: 0,204 kg

