

PHILIPS



Longer Lifetime


LongLife EcoVision

Type of lamp: H19

12V, 60/55W

Long lasting, less replacement

Ultra-resistant bulb

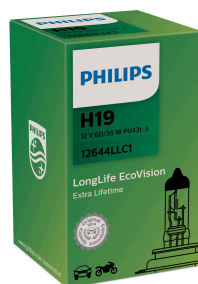

12644LLC1

Drive with care

Longer lifetime, less replacement

Philips LongLife EcoVision headlight bulbs last much longer than standard lamps. This makes them the natural choice for drivers seeking to minimise maintenance on their vehicles.

Lasts significantly longer than a standard lamp

- No replacement necessary for up to 1500 hours

The top-quality, ultra-durable car lamp

- Philips car lamps are made of high-quality quartz-glass
- Change both headlight bulbs at once for greater safety.

Original Equipment Manufacturer quality

- Philips is the choice of major car manufacturers

Highlights

Lamps that last longer

It's the high-quality materials and robust filament design that let Philips LongLife EcoVision lamps last up to 1500 hours. That means less time replacing spent bulbs, minimising maintenance. Their durability makes Philips LongLife EcoVision lamps ideal for high-voltage cars, too.

Top-quality car lighting

Technologically advanced Philips lighting is renowned in the automotive industry, and has been for over 100 years. Philips Original Equipment Quality products are designed and developed following strict quality control processes (including applicable ISO norms), leading to consistently high production standards. LongLife EcoVision is compatible with car models from major brands, such as Audi, BMW, Ford, GM, Toyota and Volkswagen. See the product selector guide for more information.

High-quality quartz-glass

UV quartz-glass is stronger than hard glass and highly resistant to temperature extremes, humidity and vibration, eliminating the risk of explosion. Philips quartz-glass lamps (filament 2650°C and glass 800°C) can withstand severe thermal shock. With higher pressure inside the lamp, UV quartz-glass is able to produce a more powerful light.

Change headlight bulbs in pairs

There are good reasons to change headlight bulbs in pairs. The filament in older headlamps will break sooner. At the end of their life, lamps project less light, thereby reducing visibility. It's faster, easier and cheaper to change both headlamps rather than just one. Choosing Original Equipment bulbs reduces the chance of early failure thanks to their higher quality standards and raw materials.

Specifications

Marketing specifications

Expected benefits: Long lasting
Product highlight: Longer lifetime

Product description

Application: High beam, Low beam
Base: PU43t-3
Designation: H19 LongLife EcoVision
ECE certification
Range: LongLife EcoVision
Technology: Halogen
Type: H19

Lifetime

Life time: 1500h

Light characteristics

Lumens: 1200/1750 +/-10%
Color temperature: N.A.

Electrical characteristics

Wattage: 60/55 W
Voltage: 12 V

Ordering information

Order entry: 12644LLC1
Ordering code: 35605230

Packaging Data

Packaging type: C1
EAN1: 8727900356052
EAN3: 8727900356069

Packed product information

Gross weight per piece: 29.7 g
Length: 4.55 cm
Width: 4.55 cm
Height: 7.6 cm
Net weight per piece: 23 g
Pack Quantity: 1
MOQ (for professionals): 10

Outerpack information

Length: 23.8 cm
Width: 9.3 cm
Height: 7.8 cm
Gross weight per piece: 0.327 kg

