

# PHILIPS

Car air purifier

GoPure Compact  
100 Airmax

Compact

Fine particles CADR\*: 14m<sup>3</sup>/hour

Toxic gases CADR\*: 11.5m<sup>3</sup>/hour

Air cleaning efficiency: 13min



GPC10MXX1



## Healthy air in your car

Efficiently removes fine particles and toxic gases

Philips unique high-efficiency filtration technology removes fine particles like PM<sub>2,5</sub> with a Clean Air Delivery Rate (CADR) of 14m<sup>3</sup>/hour, and toxic gases with a CADR of 11.5m<sup>3</sup>/hour, to keep you and your family in good health.

### Powerful air filtration

- Cleans your car air in just 13 min
- Fast removal of fine particles with CADR at 14m<sup>3</sup>/hour
- Filter toxic gases and TVOC with CADR at 11m<sup>3</sup>/hour

### Simplicity

- Easy installation
- Filter replacement indication
- Automatic switch on/off

# Highlights

## Particles filtration



Philips SelectFilter high efficiency particulate filtration removes fine particles found in car indoor environment with a Clean Air Delivery Rate (CADR) of 14m<sup>3</sup>/hour (50% of 0,3µm particles filtration; 3m<sup>3</sup> chamber). This includes cigarette smoke, pollens, dust, PM2.5 particles, and airborne virus or bacteria superior to 0,3 micron.

## Toxic gases elimination



Selective additives embedded in Philips SelectFilter, neutralize and eliminate toxic gaseous chemicals from the air through a powerful adsorption and oxidation process, with a Clean Air Delivery Rate of 11.5m<sup>3</sup>/hour (60 min; 1m<sup>3</sup> chamber). This


includes car exhaust fumes, chemicals emitted by plastic materials and finishes used in car interiors, and odor emitting substances e.g. volatile organic compounds (VOCs), toluene, formaldehyde.

## Clean air efficiency



Your Philips GoPure car air purifier will clean 50% of all fine particles inside your car in just 13 min. This has been tested in a 3m<sup>3</sup> chamber, a volume similar to the interior of an average sedan car.

## Filter replacement indication

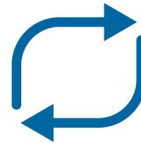

Filter replacement indication when filter needs to be changed

## Easy operation



Automatic switch on when you start your car, 2 speeds to adjust filtration power

## Easy installation



Including 4m 12V power cable and mounting accessories for safe installation on dashboard, headrest, under seats and rear deck

# Specifications

## Product description

Air flow: 12 m<sup>3</sup>/h  
Air particle sensor: No  
Air quality indicator (AQI): No  
Automatic On/Off  
Filter replacement indicator  
Fragrance dispenser: No  
Frequency: 50 Hz  
Speed settings: 2 speeds  
Power: 3 W  
Voltage: 12 V  
Filter Lifetime: 350 hr  
Technology: Car air purifier  
Color: Black  
Designation: GP Compact 100 Airmax  
App enabled: No  
Noise level (High): 50 dB(A)  
Noise level (Low): 40 dB(A)

## Performance

Air Cleaning Efficiency: 13 min healthy air min  
Filtration bacteria/virus: 70 %  
Boost mode: No  
Fine particles filtration: CADR of 14m<sup>3</sup>/hour  
Toxic gases & TVOC filtration: CADR of 11.5m<sup>3</sup>/hour

## Replacement

Filter type: GSF120X110X1  
GoPure clean air system type: GPSA30GPX1, GPSA33GPX1, GPSL23GPX1

## Weight and dimensions

Box dimensions (L x W x H): 225 x 180 x 79 mm  
Product dimensions (L x W x H): 176 x 176 x

73 mm

Product weight: 610 g

Box weight (incl. product): 840 g

## Marketing specifications

Expected benefits: Healthy air in your car

Product highlight: Compact

## Accessories in the box

Mounting accessories: Attachment belt

power cable length: 4 m

## Logistic data

EAN (China): 6923410798357

Ordering code (China): 79835728

Quantity in box: 1

Reference (Order entry): GPC10GPX1

EAN (APR): 8719018010063

