




Philips Xenon WhiteVision  
gen2  
Xenon car headlight bulb

**Type of lamp: D2S**

Pack of: 1  
85 V, 35 W

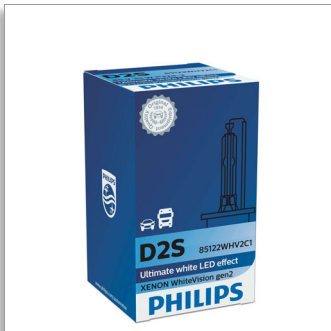

**85122WHV2C1**

## Pure and bright white light defeats darkness

Intense whiter light improves driver concentration

Philips Xenon WhiteVision gen2 lamps create an intense white look for your car and produce brighter, more uniform white light on the road. The perfect choice for xenon headlights to match the look of LED lights.

### 100% more vision on the road

- Available in most popular bulb types: D1S, D2S, D2R and D3S
- Philips is a favoured choice of all major car manufacturers
- Philips car lamps are highly resistant
- Intense white light, 100% road legal

### Up to 120% more vision

- More powerful light beam for enhanced vision

### Very intense homogenous bright white

- Greater contrast for improved visibility and safer driving

### Up to 5000-Kelvin white light on the road

- Crisp, pure white beam cuts through darkness

### Perfect match with other LEDs on your car

- Ultimate white effect to match other LEDs on your car

# PHILIPS

Xenon car headlight bulb  
Type of lamp: D2S Pack of: 1, 85 V, 35 W

# Specifications

## Marketing specifications

- Expected benefits: Style
- Product highlight: Enjoy your passion

## Product description

- Application: High beam, Low beam
- Designation: D2S WhiteVision
- ECE certification
- Range: Xenon WhiteVision gen2
- Technology: Xenon
- Type: D2S

## Lifetime

- Life time: 2500h

## Light characteristics

- Lumens: 3000 ±250
- Colour temperature: Up to 5000 K

## Electrical characteristics

- Wattage: 35 W
- Voltage: 85 V

## Ordering information

- Order entry: 85122WHV2C1
- Ordering code: 37729333

## Packaging Data

- EAN1: 8727900377293
- EAN3: 8727900377309
- Packaging type: C1

## Packed product information

- Gross weight per piece: 47.5 g
- Length: 5.4 cm
- Width: 5.4 cm
- Height: 9.3 cm
- Pack Quantity: 1
- MOQ (for professionals): 2

## Outer pack information

- Length: 11.1 cm
- Width: 9.6 cm
- Height: 5.7 cm
- Gross weight per piece: 0.095 kg

85122WHV2C1

# Highlights

## Ultimate white LED effect

Philips Xenon WhiteVision gen2 headlight lamps are the perfect choice for drivers who want a crisp white look for their headlights - similar to that of LEDs. With the same colour temperature as LED lights, Xenon WhiteVision gen2 is the ultimate upgrade for your xenon headlights.

## Crisp, pure white beam

With a colour temperature of up to 5000 Kelvin, Philips Xenon WhiteVision lamps illuminate the road ahead with a crisp, pure white beam that cuts through the darkness. Instead of straining to see the road ahead, you'll enjoy a safer, more exciting drive. With Philips automotive lighting, driving at night shall no longer limit you.

## Greater contrast, safer drive

It is vital to be able to quickly spot and identify road markings and signs when driving in the dark. With the Xenon WhiteVision bulbs you get an intense, uniform white light. With a high colour temperature, the headlights provide stronger contrast and better reflections from objects and signs. And you'll enjoy a more comfortable and safer driving experience. The fact is many road traffic accidents are caused by overtired drivers losing concentration. This whiter light helps you maintain concentration and stay alert when driving at night.

## Up to 120% more vision

This powerful white headlamp provides you with more intense light. Philips WhiteVision gen2 features a high-performing light, providing up to 120% more vision compared with the legal minimum standard. The enhanced light improves your vision for greater control of your vehicle.

## Intense and legal light

Although brighter lights help you see better, if they dazzle oncoming drivers it makes the road less safe for you. The ECE-certified Xenon WhiteVision gen2 provides road-legal intense white light, with a headlight bulb colour that's harmonised with LED lights. The resulting light offers excellent visibility for safer driving, without irritating other drivers.

## Chosen by car manufacturers

Philips is renowned for technologically advanced automotive lighting, introducing innovations that have become standard in modern vehicles. One in every two cars in Europe, and one in every three worldwide, is equipped with Philips lights, making it a favoured choice for all major car manufacturers.

## High quality, high resistance

UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of early failure. Able to withstand severe thermal shock, Philips UV-Quartz glass car bulbs allow more pressure inside the bulb, which can then produce a more powerful light to improve driving visibility. This, combined with a special anti-UV coating technology to protect the headlights from harmful ultraviolet radiation, means you can be sure these bulbs are built to last.

## Available in various types

To find out which Xenon WhiteVision gen2 car lights fit your car, please go to [www.philips.com/automotive](http://www.philips.com/automotive)



Issue date 2024-01-18

Version: 10.10.1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)