

PHILIPS

HPLAMP-22001

LED Inspection lamps

High-power LED

Pack of: 1

220 V

Extreme Robustness
IK09&IP66



923795617116



See better, work better

Cordless professional lighting tool

The latest upgrade of the Philips rechargeable LED inspection lamp with docking station is ready for every maintenance job. Thanks to the high power Philips Luxeon LEDs, strong light performance is delivered under all circumstances.

High-Power Philips Luxeon white LED light

- Soft natural light that is comfortable to the eyes
- Light output: 220 lumens
- Wide beam angle: up to 70°

See what remains hidden for others

- Eliminates all shadows

High resistance

- Resistant to chemicals and workshop solvents
- Strong impact resistance -IK09
- Water & dust protected -IP66

Leak detection indicator

- Easily spot leaks in air conditioning systems

Highlights

Easily spot leaks



Not only does this LED inspection lamp have a very strong main beam, it is also equipped with an UV-A leak detector. This will help you to easily spot leaks in air conditioning systems without any additional tools required. Simply add leak detection fluid to the A/C system and any leak will show up.

Light output: 220 lumens



The high power white LED's provide 220 lumens of light output to ensure that you are not left in the dark when trying to spot even the smallest details. The colour of the light is soft natural white with a colour temperature of 6500 K, the best solution for long-time repair jobs because it does not strain the eyes.

Resistant to chemicals

As well as resisting knocks, the inspection lamp cases are resistant to water, chemicals and workshop solvents.

Soft natural light



Soft natural light that is comfortable to the eyes during longer periods of time. Light with a colour temperature between 6000 and 7000 K. Brighter light might be extremely clear but is unnatural to the eye and will lead to fatigue.

Strong impact resistance -IK09




The robust case is designed for a very tough working environment and conforms to IK09.

Water & dust protected -IP66



The LED inspection lamp is water resistant, and conforms to IP66.

Wide beam angle

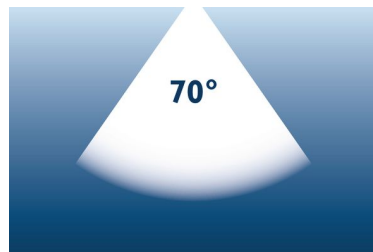

The wide beam angle of 70° will enable you to focus on specific part and to deliver the right amount of light you need.

Eliminates all shadows

Eliminates all shadows

Specifications

Maximum visibility

Beam angle: 70°
Light intensity: 1200 lux at 0.5 m
Light output: 220 lumens
Pointing light
Number of LED: 15

Robust

Impact protection rating (IK): IK09
Ingress protection rating (IP): IP66
Materials & finishing: robust rubber & polycarbonate
Resistant to: grease, oil, workshop solvents

Ordering information

Order entry: 22001UVX1
Ordering code: 38662233
Packaging type: X1L

Hands-free

Hook: Versatile clip hook
Magnet

Power

Battery run time: up to 6 hours
Battery Type: Lithium-ion
Operating line voltage: 100-240V
Power consumption: 2.5 W
Power source: Rechargeable
Battery charging time: 3 hours, 5 hours

Product weight

Gross weight per piece: 975 g
Net weight per piece: 550 g

Product Dimensions

Lamp dimension (L x W x H): 14 x 12.5 x 33.2

