

PHILIPS

Purple car headlight bulb

ColorVision

Type of lamp: H4

Pack of: 2

12 V,60/55 W



12342CVPPS2



Restyle with light

Add a touch of color

ColorVision adds a touch of color to your car optics in blue, green, yellow or purple. These innovative colored car bulbs are certified road legal, so you can customize your ride while still projecting safe white light.

Color customization for your car

- Color your lights in blue, green, yellow or purple
- Available in most popular automotive lamp types: H4 and H7
- A new coating technology turns light into a touch of color
- Designed for reflector optics for color customization

Designed to see

- Colored car lamps that are certified road legal
- React faster with more vision
- Light up the road with 60% more white light

Original Equipment manufacturer

- Philips is the choice of major car manufacturers
- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant against humidity
- Philips car lamps are highly UV resistant

Highlights

Available in H4 and H7



To find out which Philips ColorVision lamp fits your car, go to www.philips.com/automotive

Color your lights



Philips ColorVision allows to add a personalized touch of color to your car optics. Choose from blue, green, yellow or purple and customize your ride.

Road legal colored car lamps




ColorVision lamps comply with all ECE regulations and come with a certification card to prove they are road legal. Keep it with you in your car at all times.

React faster with more light

Increased visibility is proven to help you react faster while driving. With whiter light and up to 60% more vision, ColorVision increases your visibility compared to standard lamps. Anticipate easier to any obstacles that might come your way.

A new coating technology

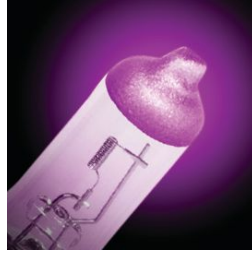

Thanks to a special coating on the lamps, Philips ColorVision adds a touch of color which is in line with European regulation. So you can customize your ride while still projecting safe white light

Designed for reflector optics



Philips ColorVision creates colored effects by reflecting light into the lamp optics. Switch on your headlamps and light up with a touch of color

60% more white light

Thanks to its technology, Philips ColorVision lights up the road with up to 60% more vision than any other standard lamp. So you see the road ahead more clearly, while your optics add a touch of colour.

Car manufacturer choice




For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting

High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

Resistance against humidity

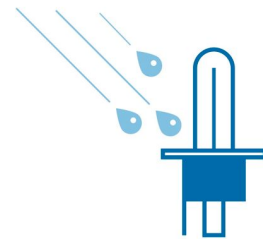

Only a burning bulb made of quartz glass (filament 2650°c, glass 800°c) can resist thermal shocks : if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass perfect for all driving conditions and ensures their longevity

Specifications

Product description

Technology: Halogen
Type: H4
Range: ColorVision
Application: High beam, Low beam
Designation: H4 ColorVision
Homologation ECE
Base: P43t-38

Electrical characteristics

Voltage: 12 V
Wattage: 60/55 W

Light characteristics

Lumens: 1650/1000 +-15% lm
Color temperature: 3350 K

Lifetime

Life time: Up to 400h

Ordering information

Order entry: 12342CVPPS2
Ordering code: 36791128

Packaging Data

EAN3: 8727900367928
EAN1: 8727900367911
Packaging type: S2

Packed product information

Pack Quantity: 2
MOQ (for professionals): 10
Height: 12.8 cm
Width: 4.7 cm
Length: 11 cm

Outerpack information

Gross weight per piece: 0.66 kg
Height: 13.6 cm
Length: 29 cm
Width: 12 cm

Marketing specifications

Expected benefits: Style
Product highlight: Add a touch of colour

