

PHILIPS

Halogen


DiamondVision

Type of lamp: H1

Pack of: 1

12 V,55 W

Style

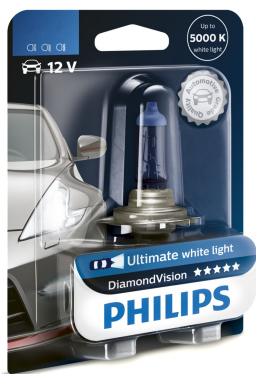

12258DVB1



Drive with style

Up to 5000K ultimate white light

Philips DiamondVision halogen headlamp is the ultimate style upgrade for your car with up to 5000K white light. With the specially designed blue coating, DiamondVision makes you stand out from the crowd.

Stylish white light stands out

- Cool elegance for your headlights

High quality and ultra resistant headlamp

- Philips car lamps are made of high-quality quartz glass^
- Philips car lamps are highly resistant against humidity^
- Philips car lamps are highly UV resistant
- Wide range of 12V lamps for all functions
- Philips is the choice of major car manufacturers.
- Change both your headlamps simultaneously for more safety

Highlights

Change by pairs



Highly recommended to change them by pairs for symmetric light performance

5000K white light for style

Philips DiamondVision Vision headlight lamps provide the perfect choice for drivers who want a crisp white look for their headlights. Thanks to the Philips patented coating technology, DiamondVision provide a truly white light for great visibility and style.

Car manufacturers' choice

For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standards on modern automobiles. Today, one in two cars in Europe and one in three worldwide, is equipped with Philips lighting.

Designed for multiple usage



Which 12V lamp for which function? Philips Automotive offers all car specific functions : high beam, Low beam, front fog, front indicator, side indicator, rear indicator, stop light, reversing light, rear fog light, license plate lights, rear position/parking light, interior lights

High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, eliminating the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability to withhold increased pressure inside the lamp, UV-quartz glass is able to produce more powerful lighting. ^Application varies per bulb type.

Resistance against humidity

Only a burning bulb made of quartz glass (filament 2650°c, glass 800°c) can resist thermal shocks : such as, if a drop of cold water touches the hot bulb, when you drive through water with a broken headlight unit. ^Application varies per bulb type

UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass perfect for all driving conditions and ensures their longevity

Specifications

Marketing specifications

Expected benefits: Style
Product highlight: 5000K

Product description

Technology: Halogen
Application: Additional high beam, High beam, Low beam
Base: P14.5s
Range: DiamondVision
Homologation ECE: NO
Marking ECE: N/A
Designation: H1
Type: H1

Electrical characteristics

Voltage: 12 V
Wattage: 65 W

Light characteristics

Lumens: 800 ±15% lm
Color temperature: up to 5000 K

Lifetime

Life time: B3/Tc = 150/300

Ordering information

Order entry: 12258DVB1
Ordering code: 36437830

Packaging Data

Packaging type: B1l
EAN1: 8727900364378
EAN3: 8727900364385

Packed product information

Gross weight per piece: 35 g
Height: 12,9 cm
Length: 9,5 cm
Net weight per piece: 5,95 g
Pack Quantity / MOQ: 10
Width: 2,7 cm

Outerpack information

Height: 14,6 cm
Length: 20,1 cm
Width: 14,4 cm
Gross weight per piece: 0,35 kg

