

PHILIPS

Halogen

CrystalVision

Type of lamp: H4

Pack of: 1

12 V,60/55 W

Style



12342CVB1



Drive with style

Up to 4300K bright white light

Philips CrystalVision halogen headlamp upgrades the style of your car with up to 4300K bright white light. With the blue coating and the silver top finishing, your car will look more stylish

Bright white light up to 4300K


- CrystalVision 4300K bright white light for style upgrade

High quality and ultra resistant headlamp

- Philips is the choice of major car manufacturers.
- Change both your headlamps simultaneously for more safety
- Wide range of 12V lamps for all functions
- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant against humidity^
- Philips car lamps are highly UV resistant

Highlights

4300K bright white light

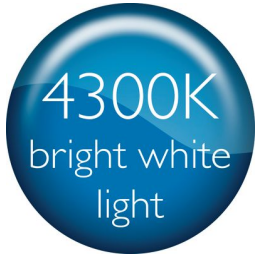

With the blue coating and silver top design, CrystalVision is offering bright white headlight of 4300K to see and to be seen, for both city and country driving

High quality quartz glass

UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability to withhold increased pressure inside the lamp, UV-quartz glass is able to produce more powerful light. ^Application varies per bulb type

Resistance against humidity


Only a burning bulb made of quartz glass (filament 2650°C, glass 800°C) can resist thermal shocks : such as, if a drop of cold water touches the hot bulb, when you drive through water with a broken headlight unit. ^Application varies per bulb type

UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass perfect for all driving conditions and ensures their longevity

Designed for multiple usage

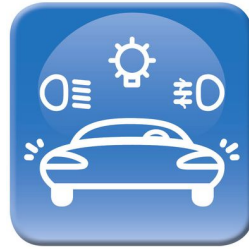

Which 12V lamp for which function? Philips Automotive offers all car specific functions : high beam, Low beam, front fog , front indicator, side indicator, rear indicator, stop light, reversing light, rear fog light, license plate lights, rear position/parking light, interior lights

Change by pairs



Highly recommended to change them by pairs for symmetric light performance

Car manufacturers' choice

For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standards on modern automobiles. Today, one in two cars in Europe and one in three worldwide, is equipped with Philips lighting.

Specifications

Product description

Technology: Halogen
Application: Additional high beam, High beam, Low beam
Designation: H4
Homologation ECE: NO
Marking ECE: N/A
Range: CrystalVision
Base: P43t-38
Type: H4

Electrical characteristics

Voltage: 12 V
Wattage: 60/55 W

Lifetime

Life time: B3/Tc = 300/500

Light characteristics

Lumens: 1100 ±15%
Color temperature: up to 4300 K

Packaging Data

EAN1: 8727900532876
EAN3: 8727900532883
Packaging type: B1A

Ordering information

Order entry: 12342CVB1
Ordering code: 53287630

Marketing specifications

Expected benefits: Style
Product highlight: 4300K

Outerpack information

Gross weight per piece: 0.596 kg
Height: 13 cm
Length: 25.5 cm
Width: 19 cm

Packed product information

Gross weight per piece: 33.9 g
Height: 12.9 cm
Length: 9.5 cm
Net weight per piece: 21.5 g
Width: 4.9 cm
MOQ (for professionals): 10
Pack Quantity: 1

