

PHILIPS

car headlight bulb

WhiteVision

Type of lamp: HB4

Pack of: 1

12.8 V, 55 W



9006WHVB1



Safety has never been so attractive

Intense white Xenon effect

Philips WhiteVision lights add an intense white Xenon look to your car headlights for a premium driving experience at night. The increased brightness with 60% whiter light makes WhiteVision the perfect combination of style and safety.

Maximum visibility, premium look

- A premium driving experience with intense white Xenon effect
- Crisp beam with intense white light

Maximum white light for greater contrast

- Up to 60% more vision on the road to maximise clarity
- Best-in-class lifetime for extended driving pleasure
- Greater contrast for improved visibility and safer driving
- White Xenon effect for a high-end look

100% more vision on the road

- Philips is the choice of major car manufacturers
- Philips car lamps are highly resistant

Highlights

A premium driving experience

Outperforming any blue car bulbs on the market, Philips WhiteVision headlights are the right choice for drivers who want to drive with style without compromising on safety. With a high colour temperature and a stylish white cap, WhiteVision is the ultimate upgrade for your headlamps. The Philips-patented third generation coating technology is an evolutionary masterpiece making WhiteVision the first headlamp with a truly white light.

White Xenon effect


WhiteVision gives your car lights the premium look of high-end cars.

Crisp white beam



With up to 3700 Kelvin and an intense white light, Philips WhiteVision headlights illuminate the road ahead with a crisp white beam that eliminates darkness instantly. The premium beam for a premium driving experience.

Up to 60% more vision on the road

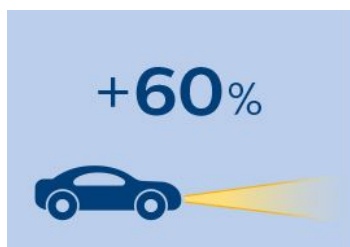

A longer beam pattern with up to 60% more vision enables you to see other road users more clearly. It improves safety, giving you more time to react to potential hazards on the road ahead.

Greater contrast, safer drive

Maximum white light with a colour temperature of 3700 Kelvin means your headlights give better reflections from road markings and signs. Whiter light keeps you alert at night, so you can enjoy a more comfortable driving experience at night.

Best-in-class lifetime



Philips WhiteVision headlights (available in H1, H3, H4, H7, T4W and W5W) are designed to last. They offer you a long and reliable lifetime of 450 hours*. That's significantly higher than competitive offerings. This results in fewer replacements and more value for money. (*H4 and H7 tested at 13.2V standard voltage)

The car manufacturers' choice

For 100 years, Philips has been at the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting.

High quality, high resistance

UV-Quartz glass is stronger than hard glass and highly resistant to extreme temperatures and vibrations, which eliminates the risk of early failure. Philips UV-Quartz glass car lamps allow more pressure inside the lamp to produce a more powerful light and extended lifetime.

Specifications

Product description

Technology: Halogen

Type: HB4

Range: WhiteVision

Application: High beam, Low beam

Homologation ECE

Base: P22d

Designation: HB4 9006 WHV 12.8 V 55 W P22d

Voltage: 12.8 V

Wattage: 55 W

Light characteristics

Colour temperature: 3700

Lumens: 1095+/-15%

Lifetime

Life time: 240h

Ordering information

Order entry: 9006WHVB1

Ordering code: 37473530

Packaging Data

EAN1: 8727900374735

EAN3: 8727900374742

Packaging type: B1

Packed product information

Pack Quantity: 1

MOQ (for professionals): 10

Gross weight per piece: 1 g

Height: 12.9 cm

Length: 9.5 cm

Width: 3.6 cm

Net weight: 43 g

Outer pack information

Net weight per piece: 0.197 g

Height: 13 cm

Length: 19 cm

Width: 19 cm

Gross weight per piece: 0.43 kg

Marketing specifications

Expected benefits: Style

Product highlight: Intense white Xenon effect

