

PHILIPS

Motorcycle
headlights

Vision Moto

Type of lamp: HS1

Pack of: 1

12 V, 35/35 W

12636BW



Feel safe, ride safe

Up to 30% more vision

Producing 30% more vision than a standard lamp, Vision Moto headlamps allow motorcycle riders to see farther with improved light beam performance at a very competitive price. For greater safety, choose Vision Moto bulbs!

The most economical choice

- The best value choice
- 30% more vision

30% more vision than a standard lamp

- Philips moto lamps are made of high-quality quartz glass

State-of-the-art technology

- Philips is the choice of major motorbike manufacturers.
- Respecting the high quality standards of ECE homologation

Highlights

Best value




The Philips Vision Moto lamps are the best choice for drivers looking for economical lamp solutions and not willing to compromise on security. The motorcycle bulbs offer 30% more vision on the road than a standard lamp.

ECE homologation

Philips Automotive is dedicated to producing best-in-class products and services in the Original Equipment Manufacturer market as well as in the aftermarket. Our products are manufactured from high-quality materials and tested to the highest specifications to maximise the safety and driving comfort of our customers. Our entire production is meticulously tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements.

Greater light-beam projection

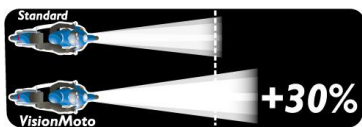

Offering up to 30% more vision on the road, Philips VisionMoto headlamps are the perfect choice for motorcycle riders seeking light

performance and safety. With better light output, riders can react faster to obstacles and avoid accidents.

High-quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2650^o C and glass 800^o C) are able to withstand severe thermal shock. With the capability for increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light.

Manufacturers' choice

For 100 years, Philips has been at the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting.

Specifications

Packaging Data

Packaging type: Blister
 EAN1: 8727900530353
 EAN3: 8727900530360

Light characteristics

Colour temperature: Up to 3200 K

Marketing specifications

Expected benefits: More light
 Product highlight: Up to 30% more vision

Product description

Designation: HS1 Vision Moto
 Range: Vision Moto
 Technology: Halogen
 Base: PX43t
 Application: High beam, Low beam
 Type: HS1

Electrical characteristics

Voltage: 12 V
 Wattage: 35/35 W

Ordering information

Ordering code: 53035330
 Order entry: 12636BW

Packed product information

Gross weight per piece: 49.7 g
 Height: 12.900 cm
 Length: 9.500 cm
 Net weight per piece: 25.5 g
 Pack Quantity / MOQ: 10
 Width: 4.860 cm

Outer pack information

Gross weight per piece: 497 g
 Height: 13 cm
 Length: 25.500 cm
 Width: 19 cm

