

PHILIPS


Halogen

X-tremeVision Plus

Type of lamp: H1

Pack of: 1

12 V,55 W

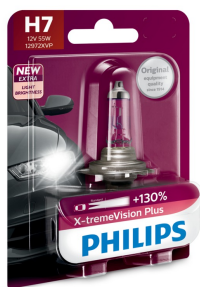

12972XVPB1



Feel safe, drive safe

See further, react faster Upto 130% brighter light

Philips X-tremeVision Plus car bulbs are the brightest legal light you can buy. They outshine all other car lamps with up to 130% more light and a superior beam of up to 130 meters. So you see further, react faster and drive safer.

High amount of light, high performance

- See further and react faster with up to 130% more brightness
- One of the brightest bulbs: ultimate light performance
- The safest, road-legal headlights

Increased brightness

- Significantly whiter light to improve comfort and safety
- Great contrast for a comfortable drive
- Exceptional beam quality and performance

Best-in-class lifetime

- Performance means more light and longer lifetime
- A lifetime of safety so you can see and be seen

Highlights

The safest legal car lights



Philips X-tremeVision Plus is by far the safest, easiest and most efficient way to upgrade your car headlights within legal parameters. They are fully ECE certified.

A lifetime of safety

Every potential failure of a spare part is a risk for you and your vehicle. This is especially true for headlights. Every broken headlight lamp reduces visibility and safety for you and the oncoming traffic. Philips X-tremeVision plus is optimized for a long and reliable lifetime. So you can see and be seen for longer than with any other high performance lamp.

Exceptional beam quality

With a combination of more light and increased color temperature, Philips X-tremeVision plus qualifies as one of the best performance beams in the halogen segment.

Extra light, extra lifetime

Philips X-tremeVision plus headlights are made for outstanding performance, producing up to 130% brighter light, without compromising on the lifetime. With up to 450 hours*, Philips X-tremeVision's lifetime is

significantly higher than competitor solutions in the more light category. (*H4 and H7 tested at 13.2V standard voltage)

Great contrast drives comfort

The increased color temperature in Philips X-tremeVision plus headlights (available in H1, H4 and H7) allows your eyes to focus better and perceive contrasts in the far distance. This makes driving after dark a far more comfortable and safe experience.

One of the brightest bulbs

With its optimized high-precision filament geometry, up to 13 bar high pressure gas filling, high precision coating and high quality UV-Quartz glass, Philips X-tremeVision plus headlights set a new milestone in automotive lighting. They are engineered for the ultimate performance and uncompromising visibility.

See further, react faster

Perfect illumination is especially important in the distance – usually between 75-100 meters in front of your vehicle. Philips X-tremeVision plus boosts your visibility with up to 130% more brightness. This helps you recognize obstacles and any potential dangers earlier than with most other halogen headlight lamps.

Significantly whiter light

The bright white light (3.500 K) is significantly whiter than standard headlamps. The Philips patented gradient coating technologyTM produces a more powerful light. So you can enjoy one of the brightest lighting performances and a highly comfortable night driving experience.

Specifications

Packaging Data

EAN1: 8727900373820

EAN3: 8727900373837

Packaging type: B1I

Product description

Technology: Halogen

Application: Additional high beam, High beam, Low beam

Range: X-tremeVision Plus

Type: H7

Homologation ECE

Designation: H7 X-tremeVision Plus

Base: PX26d

Marking ECE: E1 22Z

Electrical characteristics

Wattage: 55 W

Voltage: 12 V

Marketing specifications

Expected benefits: More light

Product highlight: Up to 130% brighter light

Light characteristics

Color temperature: 3500 K

Lumens: 1500 ±10%

Ordering information

Order entry: 12972XVPB1

Ordering code: 22124730

Outerpack information

Gross weight per piece: 460 g

Height: 14.6 cm

Length: 20.1 cm

Width: 19.4 cm

Packed product information

Gross weight per piece: 46 g

Height: 12.9 cm

Length: 9.5 cm

Net weight per piece: 12 g

Width: 3.7 cm

Pack Quantity / MOQ: 10

Lifetime

Life time: B3/Tc = 200/300

