

PHILIPS

car headlight bulb


DiamondVision

Type of lamp: HB4

Pack of: 1

12.8 V, 55 W

9006DVB1

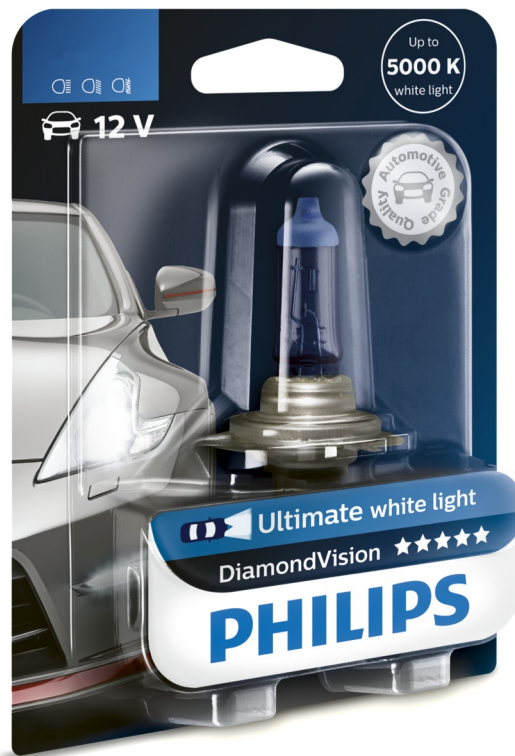

Drive with style

Ultimate white light

Philips DiamondVision produces a dazzling white light at up to 5000K, offering more light output than standard headlight lamps, its styling effect is ideal for city driving. For drivers seeking more style and greater visibility.

Ultimate white light up to 5000K

- Up to 5000K for great visibility and style

Blue-coated, high-quality quartz glass

- Cool elegance for your headlights
- Better visibility at same power consumption
- Philips car lamps are made of high-quality quartz glass

Non-ECE homologated, for off-road only

- Non-ECE homologated, driving great visibility

Highlights

Blue coating for whiter light

Philips DiamondVision headlight lamps provide the perfect choice for drivers who want a crisp white look for their headlights. Thanks to the Philips patented coating technology, DiamondVision provide a truly white light for great visibility and style.

High-quality quartz glass

UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to give a more powerful light.

Increased beam performance

Featuring 10% greater beam performance*, this blue-coated, high-quality quartz-glass lamp has the same power consumption as a standard halogen lamp. *Compared to a standard lamp

Quality off-road lights

We are dedicated to producing best-in-class Philips automotive products and services in the aftermarket. Our products are manufactured from high-quality materials and tested to the highest specifications to maximize the safety and driving comfort of our customers. Our entire production is meticulously tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000). Designed for off-road purposes, these lights are non-ECE homologated.

Stylish white for the city

Philips DiamondVision headlight lamps are the perfect choice for drivers who want a crisp white look for their headlights. Thanks to the Philips patented coating technology, DiamondVision provide a truly white light for great visibility and style.

Specifications

Product description

Technology: Halogen
Type: HB4
Range: DiamondVision
Application: High beam, Low beam
Designation: HB4 DiamondVision
Homologation ECE: NO
Base: P22d

Electrical characteristics

Voltage: 12,8 V
Wattage: 55 W

Ordering information

Order entry: 9006DVB1
Ordering code: 53297530

Packaging Data

Packaging type: B1
EAN1: 8727900532975
EAN3: 8727900532982

Packed product information

Gross weight per piece: 32.8 g
Height: 12.9 cm
Length: 9.5 cm
Net weight per piece: 20.4 g
Width: 3.6 cm
MOQ (for professionals): 10
Pack Quantity: 1

Outerpack information

Height: 13 cm
Length: 19 cm
Width: 19 cm
Gross weight per piece: 0.430 kg

Marketing specifications

Expected benefits: Style
Product highlight: Drive with style

