

# PHILIPS

car headlight bulb

DiamondVision

Type of lamp: HB4

12 V

51 W, Pack of: 2

P22d



923088317910



## Drive with style

Unique style with bluish white light of 5000K.

Very high quality and ultra resistant car lamp

### **Very high quality and ultra resistant car lamp**

- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant against humidity
- Philips car lamps are highly UV resistant

### **Original Equipment manufacturer**

- Change both your headlamps at once for more safety
- Philips is the choice of major car manufacturers

### **Bluish white light with 5.000K**

- Bluish white light with 5.000K
- Wide range of 12V lamps to meet all functions
- Installed without electric adjustments.

# Highlights

## Bluish white light

Bluish white light with temperature color 5.000K and optimum performance in the light emission.

## Car manufacturer choice



For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting

## Change by pairs



Highly recommended to change them by pairs for symmetric light performance

## Designed for multiple usage

Which 12V lamp for which function ? Philips Automotive offering includes all car specific functions : high beam, Low beam, front fog , front indicator, side indicator, rear indicator, stop light, reversing light, rear fog light, license plate lights, rear position/parking light, interior lights

## Easy to install


Easy to install, because it is not required any modification to the car's electrical system.

## High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

## Resistance against humidity

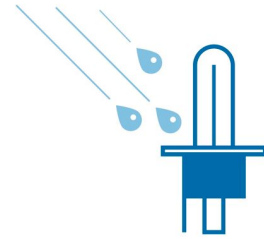

Only a burning bulb made of quartz glass (filament 2650°C, glass 800°C) can resist thermal shocks : if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

## UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass perfect for all driving conditions and ensures their longevity

# Specifications

## Packaging Data

EAN1: 8727900532487  
EAN3: 8727900532494  
Packaging type: S2

## Product description

Technology: Halogen  
Application: High beam, Low beam, fog beam  
Range: DiamondVision  
Type: HB4  
Homologation ECE  
Designation: KIT-9006DV-DI  
Base: P22d  
Marking ECE: E1 22T

## Electrical characteristics

Wattage: 55 W  
Voltage: 12.8 V

## Marketing specifications

Expected benefits: Style  
Product highlight: Drive with style

## Light characteristics

Color temperature: 5000 K  
Lumens: 950 ±15% lm

## Ordering information

Order entry: 9006DVS2  
Ordering code: 53248728

## Outerpack information

Gross weight per piece: 589 g  
Height: 12 cm  
Length: 28.6 cm  
Net weight per piece: 204 g  
Width: 14.1 cm

## Packed product information

Gross weight per piece: 102.7 g  
Height: 13.3 cm  
Length: 11 cm  
Net weight per piece: 20.4 g  
Width: 5.3 cm  
Pack Quantity / MOQ: 2

## Lifetime

Life time: B3/Tc(14V) = 105/160 h

