

# PHILIPS




Xenon car headlight  
bulb

Xenon X-  
tremeVision gen2

Type of lamp: D2R

85 V, 35 W

Number of bulbs: 1

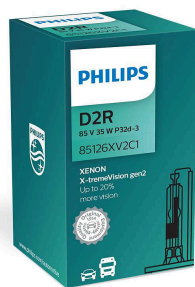

85126XV2C1

## Feel safe and drive safely with brighter lights

See every bump, curve and obstacle in the road

With a powerful beam that pushes light emission to the limit, X-tremeVision gen2 is the latest development in xenon technology. This outstanding light performance extends your driving limits, so you enjoy a safer, more comfortable drive.

### Light spectrum: a comfortable driving experience

- Better visibility for safer, more comfortable driving

### Optimal light performance

- Directing the light to the right spot in front of your car
- Philips car bulbs are award-winning
- Respecting the high quality standards of ECE homologation

### Xenon quality and ultra-resistant car bulb

- Philips invented innovative Xenon HID technology

### Original equipment, 100% road legal

- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are protected from UV damage
- Philips is the choice of major car manufacturers.

### Brighter for maximum visibility and safety

- Xenon X-tremeVision plus: for superior visual performance

## Highlights

### Maximum safety and visibility

Light is a fundamental part of the driving experience. Simply by improving the quality of light you can help prevent accidents. The Xenon X-tremeVision gen2 improves visibility, so you're able to recognise obstacles and traffic signs earlier, improving your reaction times. The spectral composition of this light is adapted to the natural colour sensitivity of your eye. And with a colour temperature of 4800 K, this headlamp produces light that's gentle on your eyes, making the night-time driving experience safer and more comfortable.

### Original Xenon technology

Xenon HID (High Intensity Discharge) bulbs offer twice as much light for safer driving in all conditions. Studies have shown that xenon automotive lighting helps drivers to concentrate on the road and to distinguish obstacles and road signs much faster than with traditional bulbs. And what better way to defeat darkness than with an intense white light comparable to daylight?

### ECE homologation

Philips automotive products and services are considered best in class in the Original Equipment Manufacturer market and the aftermarket. Manufactured from high-quality products and tested to the highest specifications, our products are designed to maximise the safety and comfort of our customers' driving experience. Our entire product range is thoroughly tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements. Put simply, this is quality you can trust.

### Award-winning car bulbs

Our high-quality and innovative vehicle lights are award-winning, being consistently recognised by automotive experts.

### Car manufacturers' choice

For 100 years, Philips has been at the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting.

### High-quality quartz glass



UV-quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. So Philips quartz-glass lamps are able to withstand severe thermal shock. With the capability for increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light. And more powerful light means an enhanced driving experience, however dark the road in front of you.

### Optimal light performance

It isn't enough to just have powerful headlights; optical precision matters, too. The Xenon X-tremeVision plus lamps have the most precise arc bending technology aligned at 150-350 µm. This means that they illuminate the road just where you need it, without dazzling oncoming drivers.

### Up to 150% more vision

Xenon X-tremeVision plus lamps are engineered with Philips Xenon technology for ultimate performance. Producing a longer beam and up to 150% more vision, X-tremeVision plus lamps help you spot obstacles earlier, allowing you to react in time. And with improved peripheral vision, you'll have greater awareness of any dangers at the side of the road, such as pedestrians or upcoming junctions. Brightly illuminating every bump, curve and hazard in the road, these are headlamps to satisfy the most demanding drivers and the most demanding driving conditions.

### UV-resistant glass

Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass perfect for all driving conditions. This additional protective layer ensures that your headlamps are built to last.

## Specifications

### Marketing specifications

**Expected benefits:** More light

**Product highlight:** Experience more light

### Product description

**Application:** High beam, Low beam

**Base:** P32d-3

**Designation:** D2R X-tremeVision

**ECE certification**

**Range:** Xenon X-tremeVision gen2

**Technology:** Xenon

**Type:** D2R

### Lifetime

**Life time:** 2500h

### Light characteristics

**Lumens:** 3200 ±450 lm

**Colour temperature:** Up to 4800 K

### Electrical characteristics

**Wattage:** 35 W

**Voltage:** 85 V

### Ordering information

**Order entry:** 85126XV2C1

**Ordering code:** 37711833

### Packaging Data

**Packaging type:** C1

**EAN1:** 8727900377118

**EAN3:** 8727900377125

### Packed product information

**Gross weight per piece:** 28 g

**Length:** 5 cm

**Width:** 5 cm

**Height:** 9 cm

**Pack Quantity:** 1

**MOQ (for professionals):** 2

### Outer pack information

**Length:** 11 cm

**Width:** 10 cm

**Height:** 6 cm

