


car headlight bulb

- Type of lamp: H7
- Pack of: 1
- 12V, 55W

12972XVPB1

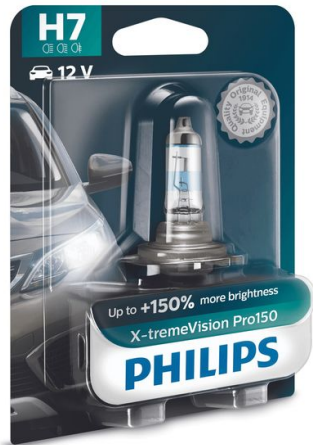

Striking brightness for extra safety

The best blend of high performance and lifetime

Combining striking brightness with the kind of lifespan previously unavailable in such a high-performance bulb, Philips X-tremeVision Pro150 provides the visibility to keep you and your loved ones even safer on the road.

Benefits

See the road better with up to 150% brighter light

- See more to drive safely

Longer lasting for a lifetime of safety

- Up to 450 hours' use from a high-performance bulb(3)
- Don't compromise on safety, change in pairs

High-performance beam throws light 70 m further(2)

- Give yourself more time to spot and avoid hazards

More contrast and visibility with cool light

- Cool light gives a clearer view and more comfort

The reassurance of Philips quality

- Philips is the choice of major car manufacturers

Features

Brighter light for more safety

With Philips X-tremeVision Pro150, you enjoy up to 150% brighter light(1). Drive home to your loved ones knowing you can see clearly even in darkness and adverse weather conditions. Advanced filament design provides greater

precision and luminance for better illumination of the road, while new Diamond Precision quartz-glass technology ensures more brightness.

PHILIPS

X-tremeVision Pro150

A lifetime of safety

The new production technique for Philips Diamond Precision quartz glass increases light throughput as well as providing greater resistance to thermal shock and pressure. A tailor-made composition of precious gases further protects the filament from ageing. That means more brightness and a longer lifespan of up to 450 hours, probably the longest from such a powerful bulb.

See up to 70 meters further(2)

Because it can throw light up to 70 meters further(2) ahead on the road, Philips X-tremeVision Pro150 increases your ability to react to potential hazards. Extending your safety distance means you and your passengers can enjoy a safer drive.

Stay alert for longer

Driving in dark conditions can be tiring to the eyes, leading to strained sight and a greater risk of fatigue. Projecting a whiter light of up to 3,400K, Philips X-tremeVision Pro150 gives your view ahead greater contrast, which helps you identify and interpret approaching objects with increased confidence.

Seeing more clearly keeps you alert for longer, making your drive safer and more enjoyable.

Change both bulbs at once

It simply makes more sense to change headlamp bulbs in pairs, rather than only replacing the failed one. Modern bulbs provide increased light output and superior performance, offering a safer driving experience. By replacing bulbs in pairs, you save time and cost, avoid the risk of headlight failure, benefit from a brighter and better balanced beam, but above all, you make driving safer for yourself and your loved ones.

Highest quality car lighting

Technologically advanced Philips lighting is renowned in the automotive industry, and has been for over 100 years. The Philips Original Equipment Quality products are designed and developed following strict quality control processes (including applicable ISO norms), leading to consistently high production standards. Philips X-tremeVision Pro150 is compatible with car models of major brands, such as Audi, BMW, Ford, GM, Toyota and Volkswagen. See the product selector guide for more information.

Specifications

[field not found 'disclaimer_text']

Product description

Technology	Halogen
Type	H7
Range	X-tremeVision Pro150
Application	High beam Low beam Front fog light
Homologation ECE	YES
Designation	H7 12972 XVP 12V 55W PX26d B1
Base	PX26d

Electrical characteristics

Voltage	12 V
Wattage	55 W

Light characteristics

Color temperature	3,400 K
Lumens [lm]	1,500 ±10%

Lifetime

Life time	450 h
-----------	-------

Ordering information

Order entry	12972XVPB1
Ordering code	00555730

Packaging Data

Packaging type	B1
EAN1	8719018005557
EAN3	8719018005564

Packed product information

Height	12.9 cm
Length	9.5 cm
Width	3.6 cm
MOQ (for professionals)	10
Pack Quantity	1

Outerpack information

Height	13.0 cm
Length	19.0 cm
Width	19.0 cm
Gross weight per piece	0.346 kg

Marketing specifications

Expected benefits	More light
Product highlight	Up to 150% brighter light

* 1 Brightness compared to legal minimum standard.

* 2 Additional safety distance compared beam length to derived minimum after ECE regulation, based on 1 Lux. Farthest distance from the car.

* 3 Applies to low beam application, differs for fog applications



data subject to change
2022, March 1

Version: 1.1.1
EAN:

© 2022 Koninklijke Philips N.V.
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com