

# PHILIPS


Motorcycle  
headlights

BlueVision Moto

Type of lamp: H3

Pack of: 1

12 V, 55 W

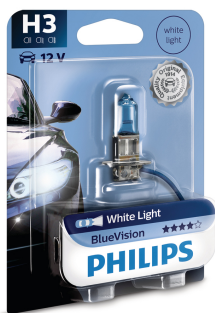

69530730



## White light for style

Up to 3700K white light

Philips BlueVision moto halogen signaling lamp enhances the style of your motorcycle with up to 3700K white light.

### **Stylish white light to be seen**

- BlueVision Moto up to 3700K white light to style up the bike

### **High quality and ultra-resistant headlamp**

- Philips moto lamps are made of high-quality quartz glass
- Respecting high quality standards of the ECE homologation
- Philips is the choice of major motorbike manufacturers.
- Safety and Style solutions are available for all your needs.

# Highlights

## High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. So Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light. And more powerful light means an enhanced driving experience, however dark the road in front of you.

## ECE homologation

Philips automotive products and services are considered best-in-class in the Original Equipment Manufacturer market and the aftermarket. Manufactured from high quality products and tested to the highest specifications, our products are designed to

maximize the safety and comfort of our customers' driving experience. Our entire product range is thoroughly tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements. Put simply, this is quality you can trust.

## Manufacturers' choice

For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting.

## Solutions for all needs

Riders' lighting needs are different depending on the time of day, road conditions and personal preferences. Philips motorcycle lighting offers a wide range to choose from. All can have optimal lights for their road ahead.

## up to 3700K white light

With the blue coating, BlueVision Moto is offering white headlight of up to 3700K to be seen.

# Specifications

## Packaging Data

EAN1: 8711500695307

EAN3: 8718291993124

Packaging type: B1L

## Light characteristics

Color temperature: 3700 K

## Marketing specifications

Expected benefits: Style

Product highlight: White light for style

## Product description

Designation: H3-12336BV-BI

Range: BlueVision Moto

Technology: Halogen

Application: High beam, Low beam

Type: H3

Homologation ECE

Base: PK22s

## Electrical characteristics

Voltage: 12 V

Wattage: 55 W

## Ordering information

Ordering code: 69530730

Order entry: 12336BV+B1

## Packed product information

Gross weight per piece: 20.7 g

Height: 13.5 cm

Length: 2.348 cm

Net weight per piece: 7 g

Width: 9.5 cm

MOQ (for professionals): 10

Pack Quantity: 1

## Outerpack information

Gross weight per piece: 0.318 g

Height: 11 cm

Length: 19.5 cm

Net weight per piece: 70 g

Width: 15.3 cm

