

Philips CrystalVision Moto
Headlight bulb

Type of lamp: HS1

Pack of: 1
12 V,35/35 W
Style



12636CVB1

Ride with style

4300K bright white light

Philips CrystalVision halogen headlamp upgrades the style of your motorcycle with 4300K bright white light.

Bright white light to see and to be seen

- Philips car lamps are made of high-quality quartz glass
- CrystalVision 4300K bright white light for style upgrade

High quality and ultra resistant headlamp


- Philips is the choice of major car manufacturers
- Philips car lamps are highly resistant against humidity*
- Philips car lamps are highly UV resistant

PHILIPS

Headlight bulb
Type of lamp: HS1 Pack of: 1, 12 V,35/35 W, Style

Highlights

4300K bright white light

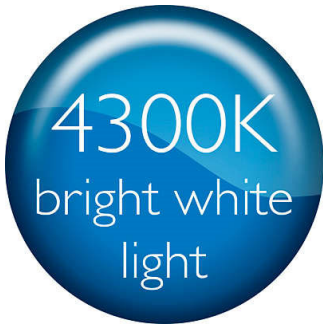


With the blue coating and silver top design, CrystalVision is offering bright white headlight of 4300K to see and to be seen, for both city and country driving

High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

Resistance against humidity

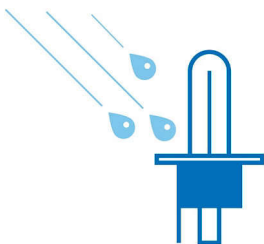

Only a burning bulb made of quartz glass (filament 2650°c, glass 800°c) can resist thermal shocks : such

as, if a drop of cold water touches the hot bulb, when you drive through water with a broken headlight unit.

UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass perfect for all driving conditions and ensures their longevity

Car manufacturers' choice



For 100 years, Philips has been at the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting.

12636CVB1

Specifications

Marketing specifications

- Expected benefits: 4300K white light
- Product highlight: 4300K

Product description

- Application: High beam, Low beam, Additional high beam
- Base: PX43t-38
- Designation: HS1 CrystalVision Moto
- Homologation ECE: NO
- Marking ECE: N/A
- Range: CrystalVision Moto
- Technology: Halogen
- Type: HS1

Lifetime

- Life time: 100/200h

Light characteristics

- Color temperature: 4300 K
- Lumens: 825 ±15% lm

Electrical characteristics

- Wattage: 35/35 W
- Voltage: 12 V

Ordering information

- Order entry: 12636CVB1
- Ordering code: 36694530

Packaging Data

- Packaging type: B1
- EAN1: 8727900366945
- EAN3: 8727900366952

Packed product information

- Gross weight per piece: 77.5 g
- Length: 9.5 cm
- Width: 5 cm
- Height: 12.9 cm
- Net weight per piece: 21 g
- Pack Quantity / MOQ: 10

Outerpack information

- Length: 25.9 cm
- Width: 20.1 cm
- Height: 14.6 cm
- Net weight per piece: 210 g
- Gross weight per piece: 0.775 g



Issue date 2023-12-29

Version: 7.1.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com