

PHILIPS

car headlight bulb

X-tremeVision

Type of lamp: H7

Pack of: 2

12 V, 55 W

More light



12972XV+S2



Take performance to the extreme

Up to 130% brighter light

Philips X-tremeVision car bulbs are among the brightest you can buy. They outshine most other car lamps with up to 130% more brightness and a superior beam length. So you see further, react faster and drive safer.

High light output, high performance

- See further and react faster with up to 130% more brightness
- One of the brightest bulbs: ultimate light performance
- The safest road-legal headlights

Increased brightness

- Brighter light to improve comfort and safety
- Exceptional beam quality and performance
- Great contrast for a comfortable drive

Best-in-class lifetime

- A lifetime of safety so you can see and be seen
- Performance means more light and longer lifetime

Highlights

Significantly whiter light

The bright white light is whiter than standard headlights. The Philips patented Gradient Coating technology produces a more powerful light, so you can enjoy one of the brightest lighting performances and a highly comfortable night driving experience.

A lifetime of safety



Every potential failure of a spare part is a risk for you and your vehicle. This is especially true for headlights. Every broken headlight lamp reduces visibility and safety for you and the oncoming traffic. Philips X-tremeVision is optimised for a long and reliable lifetime. So you can see and be seen for longer than with any other high-performance lamp.

Exceptional beam quality

With a combination of more light and increased colour temperature, Philips X-tremeVision qualifies as one of the best performance beams in the halogen segment.

Extra light, extra lifetime




Philips X-tremeVision headlights are made for outstanding performance, producing up to 130% brighter light, without compromising on the lifetime. With up to 450 hours*, Philips X-tremeVision's lifetime is significantly higher than competitor solutions in the more light category. (*H4 and H7 tested at 13.2V standard voltage)

Great contrast drives comfort


The increased colour temperature in Philips X-tremeVision headlights (available in H1, H4 and H7) allows your eyes to focus better and perceive contrasts in the far distance. This makes driving after dark a far more comfortable and safe experience.

See further, react faster

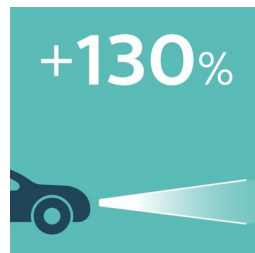

Philips X-tremeVision boosts your visibility with up to 130% more brightness. This helps you recognise obstacles and any potential dangers earlier than with most other halogen headlight lamps.

One of the brightest bulbs

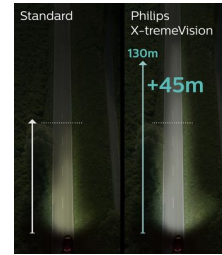

With its optimised high-precision filament geometry, up to 13 bar high-pressure gas filling, high-precision coating and high-quality UV-Quartz glass, Philips X-tremeVision headlights set a new milestone in automotive lighting. They are engineered for the ultimate performance and uncompromising visibility.

The safest legal car lights



Philips X-tremeVision is by far the safest, easiest and most efficient way to upgrade your car headlights within legal parameters. The lights are fully ECE certified.

Specifications

Product description

Technology: Halogen

Type: H7

Range: X-tremeVision

Application: High beam, Low beam

Homologation ECE

Base: PX26d

Electrical characteristics

Voltage: 12 V

Wattage: 55 W

Light characteristics

Lumens: 1500 ±10% lm

Colour temperature: Up to 3500 K

Lifetime

Life time: Up to 450 h

Ordering information

Order entry: 12972XV+S2

Ordering code: 37170328

Packaging Data

Packaging type: S2

EAN1: 8727900371703

EAN3: 8727900371710

Packed product information

Pack Quantity: 2

MOQ (for professionals): 10

Height: 13.3 cm

Length: 11.0 cm

Net weight per piece: 50.9 g

Width: 5.3 cm

Outer pack information

Gross weight per piece: 509 g

Height: 12.0 cm

Length: 28.6 cm

Width: 14.1 cm

Marketing specifications

Expected benefits: More light

Product highlight: Up to 130% more brightness

