

PHILIPS

Performance and
lifetime

X-tremeVision Pro150


Type of lamp: H4

12 V, 60/55 W

Up to 150% brighter light

Up to 540 h

12342XVPB1

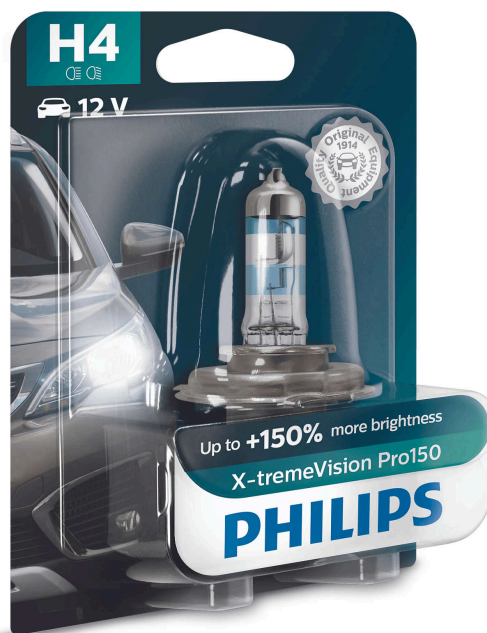

Striking brightness for extra safety

The best blend of high performance and lifetime

Combining striking brightness with the kind of lifespan previously unavailable in such a high-performance bulb, Philips X-tremeVision Pro150 provides the visibility to keep you and your loved ones even safer on the road.

The reassurance of Philips quality

- Philips is the choice of major car manufacturers

See the road better with up to 150% brighter light

- See more to drive safely

Longer lasting for a lifetime of safety

- Don't compromise on safety, change in pairs
- Up to 450 hours' use from a high-performance bulb(3)

More contrast and visibility with cool light

- Cool light gives a clearer view and more comfort

High-performance beam throws light 70 m further(2)

- Give yourself more time to spot and avoid hazards

X-tremeVision Pro150

Performance and lifetime

Highlights

Brighter light for more safety

With Philips X-tremeVision Pro150, you enjoy up to 150% brighter light¹. Drive home to your loved ones knowing that you can see clearly even in the dark and adverse weather conditions. Advanced filament design provides greater precision and luminance for better illumination of the road, while new Diamond Precision quartz-glass technology ensures more brightness.

A lifetime of safety

The new production technique for Philips Diamond Precision quartz glass increases light throughput as well as providing greater resistance to thermal shock and pressure. A tailor-made composition of precious gases further protects the filament from wear. That means more brightness and a longer lifespan of up to 450 hours (refers to H7; H4: 540 h), probably the longest from such a powerful bulb.

See up to 70 metres farther⁽²⁾

Because it can throw light up to 70 metres farther⁽²⁾ ahead on the road, Philips X-tremeVision Pro150 increases your ability to react to potential hazards. Extending your safety distance means you and your passengers can enjoy a safer drive.

Stay alert for longer

Driving in dark conditions can be tiring for the eyes, leading to strained sight and a greater risk of fatigue. Projecting a whiter light of up to

3,400 K (refers to H7; H4: 3,600 K), Philips X-tremeVision Pro150 gives your view ahead greater contrast, which helps you identify and interpret approaching objects with increased confidence. Seeing more clearly keeps you alert for longer, making your drive safer and more enjoyable.

Change both bulbs at once

It simply makes more sense to change headlamp bulbs in pairs, rather than only replacing the failed one. Modern bulbs provide increased light output and superior performance, offering a safer driving experience. By replacing bulbs in pairs, you save time and cost, avoid the risk of headlight failure, benefit from a brighter and better balanced beam but above all, you make driving safer for yourself and your loved ones.

Highest quality car lighting

Technologically advanced Philips lighting is renowned in the automotive industry and has been for over 100 years. The Philips Original Equipment Quality products are designed and developed following strict quality control processes (including applicable ISO norms), leading to consistently high production standards. Philips X-tremeVision Pro150 is compatible with car models of major brands, such as Audi, BMW, Ford, GM, Toyota and Volkswagen. See the product selector guide for more information.

00553330

Specifications

Marketing specifications

Expected benefits: More light

Product highlight: Up to 150% brighter light

Product description

Application: High beam, Low beam

Base: P43t-38

Designation: H4 12342 12 V 60/55 W P43t-38 B1

ECE certification

Range: X-tremeVision Pro150

Technology: Halogen

Type: H4

Lifetime

Life time: 540 h

Light characteristics

Colour temperature: 3,600 K

Lumens [lm]: 1,650 ±15% / 1,000 ±15%

Electrical characteristics

Wattage: 60/55 W

Voltage: 12 V

Ordering information

Order entry: 12342XVPB1

Ordering code: 00553330

Packaging Data

Packaging type: B1

EAN1: 8719018005533

EAN3: 8719018005540

Packed product information

Length: 9.5 cm

Width: 3.6 cm cm

Height: 12.9 cm

Pack Quantity: 1

MOQ (for professionals): 10

Outer pack information

Length: 19.0 cm

Width: 19.0 cm

Height: 13.0 cm

Gross weight per piece: 0.468 kg



* 1 Brightness compared to legal minimum standard.

* 2 Additional safety distance compared beam length to derived minimum after ECE regulation, based on 1 Lux. Farthest distance from the car.

* 3 Applies to low beam application, differs for fog applications