

PHILIPS



Car air purifier

GoPure Style

0.004µm particle filtration

UV-C LED light

HESAMax technology

24/7 air refresh action



GP561EX1

Goodbye airborne microbes. Breathe healthy air

Eliminates microbes by filtration and UV-C light

The GP5611 with its advanced SaniFilter Plus and UV-C light, removes and deactivates viruses and bacteria, in just 5 mins it safely eliminates 99.9% of microbes through UVC light*1+2 The HESAMax technology removes chemicals and odors 24/7.

Powerful UV filtration that's safe for families

- LED technology means no toxic ozone and mercury
- Advanced design makes UVC technology safe to use
- SaniFilter Plus captures > 99% of 0.004µm particles*3

Easy to use and install, with stylish design

- Longer-lasting filter requires fewer changes
- Easily install in a cup holder in just 10 seconds

Neutralizes gases and odors 24/7

- Absorbs 30x more formaldehyde compared with carbon bags
- Bionic enzyme technology neutralizes chemicals 24/7
- HESAMax technology neutralizes targeted chemicals*4

Captures and eliminates viruses and bacteria

- UV-C light eliminates 99.9% of viruses and bacteria*1+2

Highlights

Captures tiny particles



The SaniFilter Plus captures an astonishing 99% of ultra fine particles floating in the air inside your car as small as $0.004\mu\text{m}^3$, 40x smaller than SARS-causing Coronavirus and 100x smaller than bacteria. Effectively captures microbes from the air passing through the filter.

UV-C eliminates 99.9% viruses



Harmful microbes are eliminated by intense UV-C LED light. Focused on the 270-280nm ultraviolet wavelength, the UV-C beams penetrate and disrupt the DNA and RNA of viruses and bacteria. Tested in independant laboratory the UV-C light beam eliminates 99.9% of viruses and bacteria.*1+2

UV light is safe for families

The GoPure GP5611 kills microbes with UV light. It does this safely and effectively because the microbes are destroyed inside the device (laboratory tests prove zero leakage of UV light).

With no risk of exposure to UV light, the device is safe for all passengers in your car, whether they're one month or 100 years old.

Toxin-free LED technology

Ionizers and traditional UVC mercury lamps emit harmful ozone as a by-product of the light generating process. The GoPure GP5611 uses modern LED technology so emits zero ozone, making it safe to use inside a car. And because of the complete absence of mercury to generate UV light, it is a toxin-free air purification system.

HESAMax neutralizes chemicals




The HESAMax technology is designed to specifically target harmful gases and odors in your car. The unique materials used in the HESAMax cartridge neutralize even small molecule chemicals at a very high efficiency. Tested against industry standards,*4 this advanced HESAMax cartridge is proven to be superior at removing formaldehyde, toluene, and TVOCs. So you and your family breathe healthier air when you drive.

Bionics chemical removal 24/7

Containing 2 types of HESA material, the dual-power HESAMax cartridge removes chemicals and odors 24 hours a day, even when the device is switched off. The bionic white beads contain an active protein enzyme, a bionic technology that simulates the human body's reaction to

formaldehyde. This draws formaldehyde from the air, breaking it down and safely locking it up in the cartridge. Black de-odor beads also actively absorb unpleasant smells from smoking or pet hair at a high efficiency. So the cartridge neutralizes formaldehyde and odors (toluene, TVOCs and ammonia), 24/7*3

Absorbs 30x more formaldehyde

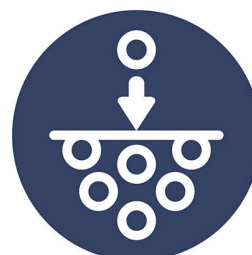

Compared to the carbon bags commonly used in other purification devices, the dual-power HESAMax has a much larger capacity, able to absorb 30 times*4 more formaldehyde. This means the cartridge lasts much longer than standard carbon bags.

Easy to use and install

Simply slide the GoPure Style GP5611 into a cup holder and connect the USB-C power cable. Once connected with this 5V cable, the device works automatically, turning on and off with your ignition. The stylish, contemporary and compact design will also look great in your car.

Easy to maintain filter

You should replace the filter approximately every 12 months, to make sure the device continues to efficiently clean the air you breathe. The UVC LED lasts so long that you don't even need to worry about changing it.

Specifications

Marketing specifications

Expected benefits: Eliminate airborne viruses*1+2

Product highlight: UV-C light

Product description

Automatic On/Off

Certification: CE, RoHS, EMC

Color: Black

Designation: GP5611

Filter Lifetime: Recommended 12 months

Filter replacement indicator: Blue light blinking

Noise level (CA test, Silent): 32.2 dBA

Noise level (CA test, Turbo): 41.8 dBA

Power [W]: <=5.5

Speed settings: 2, Silent & Turbo

Technology: Car air purifier

Voltage [V]: 5V DC

Performance

Captures 0.004um fine particle: 99%*3

Bacteria elimination rate: 99.9%*1+2

Virus elimination rate: 99.9%*1+2

Logistic data

Quantity in box: 1

EAN1 (EMEA): 8719018013682

EAN3 (EMEA): 8719018013699

Reference (Order entry): GP561EX1

Ordering code GOC: 01368233

Replacement

Filter name: SaniFilter Plus

Filter type: SNF100

Filter dimension: 100x60x12mm

HESA box name: HESAMax cartridge

HESA box type: HESA60

HESA box dimension: 63x55x51mm

Accessories in the box

Power cable length: 1m m

Weight and dimensions

Product dimensions (LxWxH)(mm):

206x90x76mm

Product weight (g): 450

Box dimensions (LxWxH)(mm): 211x109x109mm

Box weight (incl. product) (g): 745

