

# PHILIPS

car headlight bulb

VisionPlus

Type of lamp: H4

Pack of: 2

12 V,60/55 W

safety



12342VPS2



## Feel safe, drive safe

Up to 60% more vision: fast reactions save lives

Philips VisionPlus headlight bulbs produce 60% more vision, which allows drivers to see farther for greater safety and comfort. Offering high performance and excellent value, VisionPlus is the right choice for today's demanding drivers.

### **Superior quality with enhanced visibility**

- VisionPlus projects 25 m light extra than a standard lamp
- Greater driving comfort and safety
- Wide range of 12V lamps to meet all functions
- Change both your headlamps at once for more safety

### **Original Equipment manufacturer**

- Philips is the choice of major car manufacturers
- Award winning car lamp manufacturer
- Respecting high quality standards of the ECE homologation

### **Very high quality and ultra resistant car lamp**

- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant against humidity
- Philips car lamps are highly UV resistant

# Highlights

## Car manufacturer choice



For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting

## Change by pairs



Highly recommended to change them by pairs for symmetric light performance

## Designed for multiple usage



Which 12V lamp for which function ? Philips Automotive offering includes all car specific functions : high beam, Low beam, front fog , front indicator, side indicator, rear indicator, stop light, reversing light, rear fog light, license plate lights, rear position/parking light, interior lights.

## ECE homologation

Philips automotive products and services are considered best-in-class in the Original Equipment Manufacturer market and the aftermarket. Manufactured from high quality products and tested to the highest specifications, our products are designed to maximize the safety and comfort of our customers' driving experience. Our entire product range is thoroughly tested, controlled and certified (ISO 9001, ISO 14001 and QSO 9000) to the highest ECE requirements. Put simply, this is quality you can trust.

## High quality and visibility



VisionPlus provides you with a better reactivity thanks to an earlier recognition of obstacles and traffic signs. Brake lighting is also visible earlier, thanks to a more powerful light output. Drivers can reduce their braking distance by up to 3 meters at 100 km/h. Light is a fundamental part of the driving experience and light is the first and only part of the safety circle that actually helps prevent accidents.


## High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able

to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

## Resistance against humidity

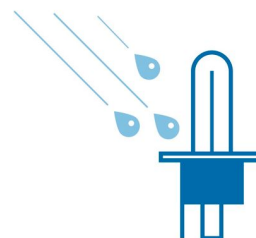

Only a burning bulb made of quartz glass (filament 2650°C, glass 800°C) can resist thermal shocks : if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

## Rewarded Car lamps



Our lamps are often rewarded by automotive experts

## UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass perfect for all driving conditions and ensures their longevity

# Specifications

## Packaging Data

EAN3: 8727900350937  
EAN1: 8727900399257  
Packaging type: S2

## Electrical characteristics

Voltage: 12 V  
Wattage: 60/55 W

## Lifetime

Life time: Up to 400h

## Light characteristics

Lumens: 1650 lm  
Color temperature: Up to 3250 K

## Ordering information

Order entry: 12342VPS2  
Ordering code: 39925728

## Outerpack information

Gross weight per piece: 0.55 kg  
Height: 12 cm  
Length: 28.6 cm  
Width: 14.1 cm  
Net weight per piece: 430 g

## Product description

Type: H4  
Application: High beam, Front fog light, Low beam  
Designation: H4 VisionPlus  
Homologation ECE

Range: VisionPlus  
Technology: Halogen  
Base: P43t-38

## Packed product information

Pack Quantity: 2  
MOQ (for professionals): 10  
Gross weight per piece: 55 g  
Height: 13.3 cm  
Length: 5.3 cm  
Net weight per piece: 21.5 g  
Width: 11 cm

## Marketing specifications

Expected benefits: More light  
Product highlight: Up to 60% more vision

