


PHILIPS

3-stage Filtration technology by Philips

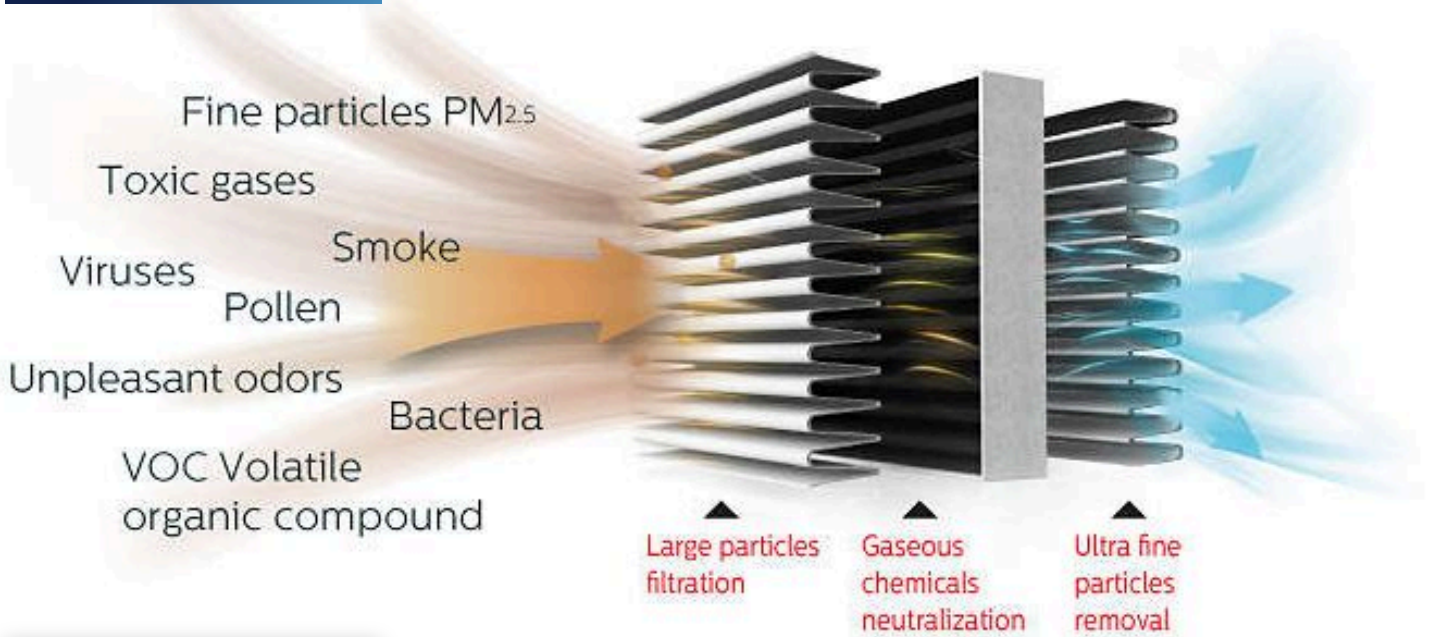

Replacement filter
for car air purifier

GoPure Select Filter

Multifunctional filtration



GSF80X80X1

For fresh and healthy air in your car

SelectFilter multifunctional filtration technology

Replacement filter for GoPure car air purifier system, Philips SelectFilter multifunctional filtration technology removes in-car air pollutants, to keep you and your family in good health.

Neutralizes & eliminates toxic gases

- Neutralizes and eliminates toxic gases chemicals

Removes PM_{2.5} fine particles

- Eliminates harmful ultra fine particles

GoPure Select Filter

Replacement filter for car air purifier

Highlights

Particles filtration

Philips SelectFilter high efficiency particulate filtration removes fine particles found in car indoor environment. This includes cigarette smoke, pollens, dust, PM2.5, and airborne virus or bacteria superior to 0,3 micron

Gases filtration

Selective additives embedded in Philips SelectFilter, neutralize and eliminate toxic gaseous chemicals from the air through a powerful adsorption and oxidation process. This includes car exhaust fumes, industry pollution, chemicals emitted by plastic materials and finishes used in car interiors, and odor emitting substances.

GSF80X80X1

Specifications

Marketing specifications

Expected benefits: Healthy air in your car
Product highlight: SelectFilter

Product description

Color: White
Designation: GSF80X80
Technology: Replacement filter

Performance

Filtration bacteria/virus: 70 %

Logistic data

Quantity in box: 1
Reference (Order entry): GSF80X80X1
Ordering code (China): 17214628
EAN (China): 6947939172146
EAN (APR): 8718696270042
Ordering code (APR): 27004228

Replacement

Filter type: HEPA, HESA
GoPure clean air system type: GPLSL23GPX1

Weight and dimensions

Product weight: 20 g
Product dimensions (L x W x H): 80 x 80 x 17 mm
Box dimensions (L x W x H): 85 x 82 x 20 mm
Box weight (incl. product): 80 g

