


Philips Ultinon Drive
Accessory
Wiring harness kit for
1 LED lamp

Position light function wire
4 pin female DT connector plug
Reliable Philips quality

LUMUD1003WX1

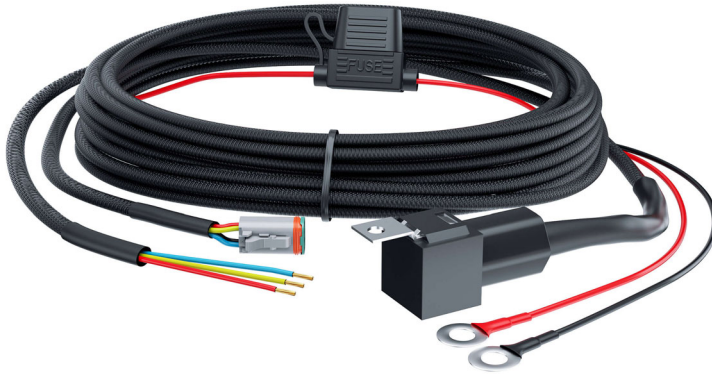

Enhanced durability and reliability

Reliable installation for long-lasting performance

Ensure smooth installation of a single Philips LED driving light, with automotive-grade cables and waterproof sealed components, for long-lasting LED light performance. Being PVC/BFR-free**, this kit is gentler on the environment.

Optimal fit

- Easy to install
- For a single LED lamp with position light function

Reliable Philips automotive quality

- Durable material for long-lasting performance

PHILIPS

Wiring harness kit for 1 LED lamp
Position light function wire 4 pin female DT connector plug, Reliable Philips quality

LUMUD1003WX1/10

Specifications

Product description

- Technology: LED wiring harness kit
- Compatible with: Philips Ultinon Drive UD5101L, UD5102L, UD5103L, UD5104L, UD7050L, UD5001R, UD5101R
- Plug type: 4 pin DT connector female plug
- Cable length: 3 m cable
- Fuse: 5 A, 10 A, 15 A
- Parking position light wired
- Relay: Yes, 12 V
- Switch functions
- Switch On/Off
- Number of connector plugs: 1

Electrical characteristics

- Voltage: 12 V

Ordering information

- Order entry: UD1003WX1
- GOC: 01854032

Packaging Data

- EAN1: 8719018018540
- EAN3: 8719018018557

Packed product information

- MOQ (for professionals): 12
- Box dimensions-L (mm): 610
- Box dimensions-W (mm): 105
- Box dimensions-H (mm): 90

Highlights

Easy to install

When installing a Philips LED auxiliary light* on your vehicle, you may need an additional wire harness to securely connect and control the extra LED driving lights. This Philips LED wiring kit makes it easy to connect your Philips LED driving light to your vehicle's electrical system, giving you complete control over your new light.

Single light wiring harness kit

Includes 4 pin waterproof female DT connector plug, 3 m cable, on/off switch, function switch, 12 V relay, 5 A, 10 A and 15 A fuses.

Long-lasting performance

This Philips LED wiring kit uses durable automotive-grade cables with a waterproof-sealed relay, switch and connectors. It has been tested in the toughest conditions so that you can enjoy long-lasting performance.



Issue date 2024-04-04

Version: 4.4.1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Compatible with: Philips Ultinon Drive UD5101L, UD5102L, UD5103L, UD7050L, UD5001R *Restriction of Hazardous Substances regulation, in electrical and electronic equipment.
**Free from Polyvinyl Chloride (PVC) and Brominated Flame Retardants (BFRs)