

PHILIPS



LED Daytime
running lights

DayLight 9

Daylight 9

12 V

16 W



12831WLEDX1

High visibility for maximum safety

Bright and attractive from every angle

The 3rd gen. of Philips DRL, combines superior style and increased visibility. With its renewed optical design, the Philips Daylight9 offers increased mounting flexibility: a road legal solution for any car that wants to stand out from the crowd.

Original Equipment Quality

- Water and gravel-impact resistant
- High-quality aluminium housing

Stylish, uniform illumination

- New optical design with 9 LED dots

Bright from all angles

- Multiple-angle mounting for wide view light effect

Fits most car models

- Legally mounted on bumper angles up to +/-40°

Easy installation for all cars

- Smart clip-on system
- Hybrid, electric and start & stop compatible

Highlights

Multiple-angle mounting



Multiple-angle mounting for wide view light effect.

New optical design with 9 dots



Due to renewed lens optics, better illumination is offered. The angle under which the legal amount of light is projected on to the road has been increased thanks to the new design.

Mounting in angles up to 40°



The mounting range of the modules has increased to +/- 40 degrees horizontally, +/- 2 degrees vertically and +/- 32 degrees diagonally.

Clip-on system




Simple installation with smart clip-on system. Install the brackets in any cavity and simply click the modules into place. The modules will lock tightly and are protected from theft.

Start & stop compatible



With the intelligent electronics of the control box, the modules are compatible with the latest types of vehicles: hybrid, electric and start & stop cars are all supported. Please refer to the application guide section for an overview of all makes and models.

Gravel-impact resistant

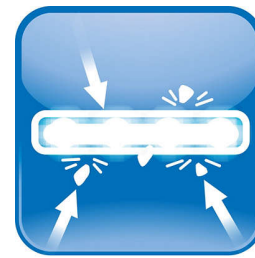

The high-quality aluminium housing and lens are water and gravel-impact resistant. After mounting, the system does not require any maintenance.

Aluminium housing



The robust high-quality aluminium housing prevents corrosion and is weatherproof: water, salt, sand and dust stand no chance. The result is long life and no maintenance work.

DayLight 9

LED Daytime running lights

12831WLEDX1

Specifications

Product description

Homologation ECE

Technology: LED

Voltage [V]: 12

Universal mounting

Horizontal axis: Up to +/-40°

Vertical axis: Up to +/- 2°

Transverse axis: Up to +/- 25°

Product dimensions (L x W x H): 125 x 23.1 x 31 mm

Technical specifications

Application: Daylight

Homologation: ECE R87

Consumption (DRL): 2 x 7.9 W

Maximum visibility

Beam angle: 150% wider than standard

Colour temperature: 5700 K

LED lifetime: Up to 5000 hours

Intensity (DRL): 400 cd/m²

Robustness

Premium finishing: High-quality aluminium housing

Gravel-impact resistant: Automotive test PSA B21 7090

DRL set resistant to: water, salt, dust & sand

Easy to install

Clip-on system

Start & stop compatible: with ACC control

Ordering information

Order entry: 12831WLEDX1

Ordering code: 39170145

Packaging Data

EAN1: 8727900391701

EAN3: 8727900391718

