



Philips DayLight 9  
LED Daytime running lights

**Daylight 9**  
12 V  
16 W



**12831WLEDX1**

## High visibility for maximum safety

Bright and attractive from every angle

The 3rd gen. of Philips DRL, combines superior style and increased visibility. With its renewed optical design, the Philips Daylight9 offers increased mounting flexibility: a road legal solution for any car that wants to stand out from the crowd.

### Original Equipment Quality

- Water and gravel-impact resistant
- High-quality aluminium housing

### Stylish, uniform illumination

- New optical design with 9 LED dots

### Bright from all angles

- Multiple-angle mounting for wide view light effect

### Fits most car models

- Legally mounted on bumper angles up to +/-40°

### Easy installation for all cars

- Smart clip-on system
- Hybrid, electric and start & stop compatible

# PHILIPS

# Highlights

## Multiple-angle mounting



Multiple-angle mounting for wide view light effect.

## New optical design with 9 dots



Due to renewed lens optics, better illumination is offered. The angle under which the legal amount of light is projected on to the road has been increased thanks to the new design.

## Mounting in angles up to 40°



The mounting range of the modules has increased to +/- 40 degrees horizontally, +/- 2

degrees vertically and +/- 32 degrees diagonally.

## Clip-on system




Simple installation with smart clip-on system. Install the brackets in any cavity and simply click the modules into place. The modules will lock tightly and are protected from theft.

## Start & stop compatible



With the intelligent electronics of the control box, the modules are compatible with the latest types of vehicles: hybrid, electric and start & stop cars are all supported. Please refer to the application guide section for an overview of all makes and models.

## Gravel-impact resistant

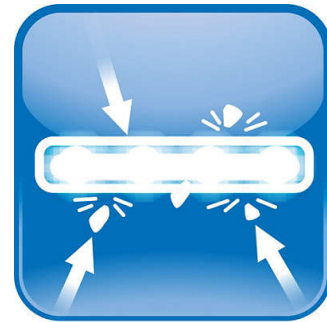

The high-quality aluminium housing and lens are water and gravel-impact resistant. After mounting, the system does not require any maintenance.

## Aluminium housing



The robust high-quality aluminium housing prevents corrosion and is weatherproof: water, salt, sand and dust stand no chance. The result is long life and no maintenance work.

# Specifications

## Product description

- ECE certification
- Technology: LED
- Voltage [V]: 12

## Universal mounting

- Horizontal axis: Up to +/-40°
- Vertical axis: Up to +/- 2°
- Transverse axis: Up to +/- 25°
- Product dimensions (L x W x H): 125 x 23.1 x 31 mm

## Technical specifications

- Application: Daylight
- Homologation: ECE R87
- Consumption (DRL): 2 x 7.9 W

## Maximum visibility

- Beam angle: 150% wider than standard
- Colour temperature: 5700 K

- LED lifetime: Up to 5000 hours
- Intensity (DRL): 400 cd/m<sup>2</sup>

## Robustness

- Premium finishing: High-quality aluminium housing
- Gravel-impact resistant: Automotive test PSA B21 7090
- DRL set resistant to: water, salt, dust & sand

## Easy to install

- Clip-on system
- Start & stop compatible: with ACC control

## Ordering information

- Order entry: 12831WLEDX1
- Ordering code: 39170145

## Packaging Data

- EAN1: 8727900391701
- EAN3: 8727900391718



Issue date 2024-01-23

Version: 7.7.1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)