

PHILIPS

Car air purifier

GoPure 3211

CADR for PM2.5: 15 m³/hour

CADR for TVOC 7 m³/hour



GP321X1

As essential as fresh air

Hassle-free automatic filtration

The GoPure 3211 decontaminates your car from gaseous chemicals and provides the essential filtration technology to remove PM2.5 fine particles with a Clean Air Delivery Rate (CADR) of 15 m³/hour. Enjoy your journey breathing clean air.

Powerful and effective air filtration

- Filters harmful PM2.5 fine particles
- Quickly remove toxic gases like exhaust fumes from your car

Simple to install and easy to use

- Device works automatically so you can focus on driving
- Easy to install anywhere in your vehicle

Highlights

Filters fine PM2.5 particles

Philips unique SelectFilter filtration technology, quickly and effectively removes particles detected in the car cabin, such as PM2.5. With a Clean Air Delivery Rate (CADR) of 15 m³/hour for PM2.5. It removes harmful particles including cigarette smoke and dust, so you breathe fresh and clean air.


Eliminate toxic gases quickly

Philips unique SelectFilter technology includes a HESA layer. This decontaminates your car of harmful gaseous chemicals. Through a powerful absorption and oxidation process, it removes harmful gaseous substances at a Clean Air Delivery Rate of 7 m³ per hour. So in just a few minutes it cleans the air of car exhaust fumes, chemicals emitted by plastic materials and other odor emitting substances.

Device works automatically

To ensure you focus on driving, the GoPure 3211 turns on and off automatically with your car engine ignition. You can just jump in your car, knowing it will always be an oasis of fresh and clean air.

Simple and easy to install

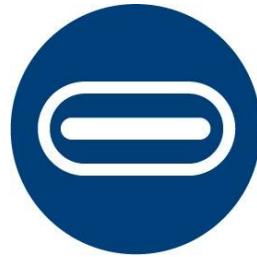

With a 2-meter 12V power cable, you can easily install the GoPure anywhere inside your vehicle. Plug the cable into the cigarette lighter port, and then use the mounting accessories to position the device where you prefer, such as the armrest, headrest or under the seats. Wherever you choose to position it, the stylish design will enhance your car's interior.

Specifications

Product description

Automatic On/Off

Filter replacement indicator: No

Fragrance dispenser: No

Speed settings: one speed only

Filter Lifetime: 350 hr

Technology: Car air purifier, SelectFilter, automatic filtration

Color: Black

Designation: GP3211

App enabled: No

Air quality indicator (AQI): No

Noise level (dBa)(Low): N/A

Placement: armrest/ central console

Voltage [V]: 12V DC

Air particle sensor: No

Noise level (dBa)(Boost/high): 52 dBA

Noise level (dBa)(Medium): N/A

Power [W]: 2.0

Pre-Cleaning function: No, N/A

Frequency: N/A

Performance

Filtration Toluene: No

Filtration TVOC: CADR of 7 m³/hour

Filtration Formaldehyde: No

Filtration bacteria/virus: 70 %

Boost mode: No

Filtration Car exhaust SO₂/NO₂: No

Filtration of fine particles: CADR of 15 m³/hour

Replacement

Fragrance cartridge: N/A

Filter type: GSF120P110x1

Filter name: SelectFilter Plus 120

Weight and dimensions

Box dimensions (LxWxH)(mm): 220x150x75

Box weight (incl. product) (g): 700

Product dimensions (LxWxH)(mm):

175x144x70

Product weight (g): 560

Marketing specifications

Expected benefits: Clean air in your car

Product highlight: Automatic filtration

Accessories in the box

Mounting accessories: Attachment belt
power cable length: Integrated with AAP body, 2 m

Logistic data

Quantity in box: 1

Reference (Order entry): GP321X1

EAN1 (APR): 8718696903643

Ordering code (China) GOC: 16933728

EAN1 (KR): 8718696903650

EAN1 (India): 8718696903667

