

PHILIPS

Green car headlight bulb

ColorVision

Type of lamp: H4

Pack of: 2

12 V, 60/55 W



12342CVPGS2



Restyle with light

Add a touch of colour

ColorVision adds a touch of colour to your car optics in blue, green, yellow or purple. These innovative coloured car bulbs are certified road-legal, so you can customise your ride while still projecting safe white light.

Colour customisation for your car

- Colour your lights blue, green, yellow or purple
- A new coating technology turns light into a touch of colour
- Available in most popular automotive lamp types: H4 and H7
- Designed for reflector optics for colour customisation

Designed to see


- Light up the road with up to 60% more white light
- Coloured car lamps that are certified road legal
- React faster with more vision

Original Equipment manufacturer

- Philips is the choice of major car manufacturers
- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant to humidity
- Philips car lamps are highly UV resistant

Highlights

A new coating technology

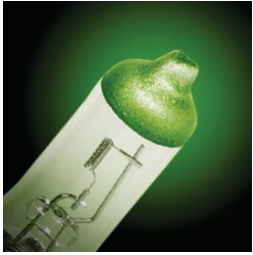

Thanks to a special coating on the lamps, Philips ColorVision adds a touch of colour which is in line with European regulations. So you can customise your ride while still projecting safe white light.

Available in H4 and H7



To find out which Philips ColorVision lamp fits your car, go to www.philips.com/automotive

Colour your lights



Philips ColorVision allows to add a personalised touch of colour to your car optics. Choose from blue, green, yellow or purple and customise your ride.

Road-legal coloured car lamps



ColorVision lamps comply with all ECE regulations and come with a certification card to prove they are road legal. Keep it with you in your car at all times.

Up to 60% more white light



Thanks to its technology, Philips ColorVision lights up the road with up to 60% more white light than any other standard lamp. So you see the road ahead more clearly, while your optics add a touch of colour.

React faster with more light

Increased visibility is proven to help you react faster while driving. With whiter light and up to 60% more vision, ColorVision increases your visibility compared to standard lamps. Anticipate any obstacles that might come your way more easily.

Designed for reflector optics



Philips ColorVision creates coloured effects by reflecting light into the lamp optics. Switch on your headlamps and light up with a touch of colour

Car manufacturers' choice




For 100 years, Philips has been at the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting

High-quality quartz glass



UV-quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650°C and glass 800°C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

Resistance to humidity

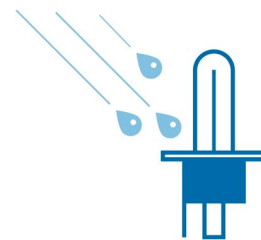

Only a burning bulb made of quartz glass (filament 2650°C, glass 800°C) can resist thermal shocks: if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

Specifications

Product description

Technology: Halogen
Type: H4
Range: ColorVision
Application: High beam, Low beam
Designation: H4 ColorVision
Homologation ECE
Base: P43t-38

Electrical characteristics

Voltage: 12 V
Wattage: 60/55 W

Light characteristics

Lumens: 1650/1000 +-15% lm
Colour temperature: 3350 K

Lifetime

Life time: Up to 400 h

Ordering information

Order entry: 12342CVPGS2
Ordering code: 36787428

Packaging Data

EAN3: 8727900367881
EAN1: 8727900367874
Packaging type: S2

Packed product information

Pack Quantity: 2
MOQ (for professionals): 10
Height: 12.8 cm
Width: 4.7 cm
Length: 11 cm

Outer pack information

Gross weight per piece: 0.66 kg
Height: 13.6 cm
Length: 29 cm
Width: 12 cm

Marketing specifications

Expected benefits: Style
Product highlight: Add a touch of colour

