

# PHILIPS

Yellow car headlight bulb

ColorVision

Type of lamp: H7

Pack of: 2

12 V,55 W



12972CVPYS2



## Restyle with light

Add a touch of color

ColorVision adds a touch of color to your car optics in blue, green, yellow or purple. These innovative colored car bulbs are certified road legal, so you can customize your ride while still projecting safe white light.

### Color customization for your car

- Color your lights in blue, green, yellow or purple
- Available in most popular automotive lamp types: H4 and H7
- Designed for reflector optics for color customization

### Designed to see

- Colored car lamps that are certified road legal
- Light up the road with 60% more white light
- React faster with more light

### Original Equipment manufacturer

- Philips is the choice of major car manufacturers
- Philips car lamps are made of high-quality quartz glass
- Philips car lamps are highly resistant against humidity
- Philips car lamps are highly UV resistant

# Highlights

## Available in H4 and H7



To find out which Philips ColorVision lamp fits your car, go to [www.philips.com/automotive](http://www.philips.com/automotive)

## Color your lights



Philips ColorVision allows to add a personalized touch of color to your car optics. Choose from blue, green, yellow or purple and customize your ride.

## Road legal colored car lamps



ColorVision lamps comply with all ECE regulations and come with a certification card to prove they are road legal. Keep it with you in your car at all times.

## React faster with more light

Increased visibility is proven to help you react faster while driving. With whiter light and up to 60% more vision, ColorVision increases your visibility compared to standard lamps. Anticipate easier to any obstacles that might come your way.

## Designed for reflector optics



Philips ColorVision creates colored effects by reflecting light into the lamp optics. Switch on your headlamps and light up with a touch of color

## 60% more white light



Thanks to its technology, Philips ColorVision lights up the road with 60% more white light than any other standard lamp. So you see the road ahead more clearly, while your optics add a touch of color

## Car manufacturer choice




For 100 years, Philips has been on the forefront of the automotive lighting industry, introducing technological innovations that have become standard on modern automobiles. Today, one in two cars in Europe and one in three worldwide is equipped with Philips lighting

## High quality quartz glass



UV-Quartz glass is stronger than hard glass and highly resistant to temperature extremes and vibrations, which eliminates the risk of explosion. Philips quartz-glass lamps (filament 2 650° C and glass 800° C) are able to withstand severe thermal shock. With the capability of increased pressure inside the lamp, UV-quartz glass is able to produce a more powerful light

## Resistance against humidity

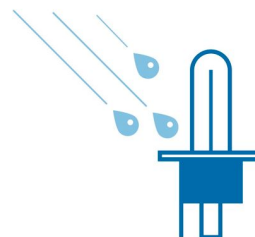

Only a burning bulb made of quartz glass (filament 2650°C, glass 800°C) can resist thermal shocks : if a drop of cold water touches the hot bulb, which can happen when you drive through water with a broken headlight unit.

## UV Resistant



Philips special anti-UV coating technology protects the headlights against harmful ultraviolet radiation, making Philips UV-coated quartz glass perfect for all driving conditions and ensures their longevity

# Specifications

## Product description

Technology: Halogen

Type: H7

Range: ColorVision

Application: High beam, Low beam

Designation: H7 ColorVision

Homologation ECE

Base: PX26d

## Electrical characteristics

Voltage: 12 V

Wattage: 55 W

## Light characteristics

Lumens: 1500 +-10% lm

Color temperature: 3350 K

## Lifetime

Life time: Up to 400h

## Ordering information

Order entry: 12972CVPYS2

Ordering code: 36802428

## Packaging Data

EAN3: 8727900368031

EAN1: 8727900368024

Packaging type: S2

## Packed product information

Pack Quantity: 2

MOQ (for professionals): 10

Height: 12.8 cm

Width: 4.7 cm

Length: 11 cm

## Outerpack information

Gross weight per piece: 0.427 kg

Height: 13.6 cm

Length: 29 cm

Width: 12 cm

## Marketing specifications

Expected benefits: Style

Product highlight: Add a touch of colour

