


Philips Ultinon Drive 2000  
10 inch LED light bar

Road-legal ECE R149-20  
3200 lm. +294 m beam length  
LED position-light function  
All terrain, all weather

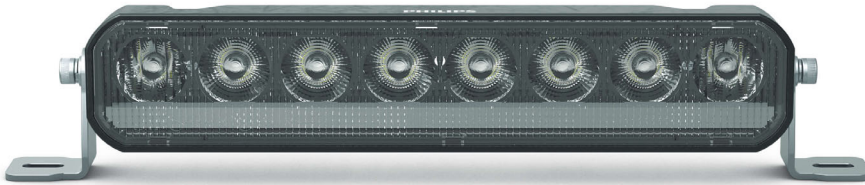

LUMUD2002LX1

## Boosted visibility brings safer driving

Extra brightness for everyday use

See far and wide with crisp, white light projected up to 294 metres. The Ultinon Drive 2002L LED light bar is 100% road-legal with a tough, one-piece design integrating advanced cooling tech. It shrugs off water, dust, rust and other types of physical impact.

### Road-legal auxiliary lights

- Powerful road-legal LED light bars

### Built to withstand difficult driving conditions

- Robust design for tough environments

### Boosted visibility makes you safer on the road

- Extra brightness for superior visibility

### Be noticed with additional position lights

- Extra position lights that get you noticed

### Robust design for challenging conditions

- Corrosion-free, stainless-steel mounting brackets

**PHILIPS**

10 inch LED light bar

Road-legal ECE R149-20 3200 lm. +294 m beam length, LED position-light function, All terrain, all weather

LUMUD2002LX1/10

# Specifications

## Product description

- Boost mode activation: No
- Break resistance
- ECE R10
- ECE R149
- ECE reference number: 20
- Impact protection rating (IK): IK07
- Ingress protection rating (IP): IP67
- Installation angle: 360°
- Material: Aluminium die-cast
- Number of LEDs: 8 x 5 W
- Off-road boost: No
- One-piece body design
- Operating temperature: -40°C to 65°C
- Range: Ultinon Drive 2000
- Scratch-resistant lens
- Technology: LED
- Width: 266 mm/10 inch
- Boost function installation: No
- corrosion-free brackets: Side mounting brackets
- ECE R148
- Parking position light
- Plug type: 3-pin DT Connector with 0.5 m cable
- Heat sink: Aluminium powder coated die-cast
- Corrosion protection: Yes, aluminium powder coated

## Light characteristics

- Colour temperature: 6000 K K
- Beam length 3 lux-m: 150
- Beam length 1 lux-m: 294
- Effective lumen output: 3200 lumens
- Raw lumen output: 4960 lumens
- Beam pattern: Combo beam

## Electrical characteristics

- Voltage: 9-30 Volt DC

## Ordering information

- Order entry: UD2002LX1
- GOC: 01834294

## Packaging Data

- EAN1: 8719018018342
- EAN3: 8719018018359

## Packed product information

- MOQ (for professionals): 4
- Box dimensions-L (mm): 280
- Box dimensions-W (mm): 80
- Box dimensions-H (mm): 80
- Net weight product-g: 600±30
- Gross weight box-g: 840±30
- Number of products in the box: 1 lamp

# Highlights

## Up to 294-metre visibility

The Philips Ultinon Drive 2002L LED light bar gives you extra high-beam brightness to illuminate the road ahead for up to 294 metres\*. Producing 3200 lumens (effective), our LED light bar complies with ECE-R149-12,5 and provides ample visibility ahead and at the road's edges for faster reactions. Its cool, 6000 Kelvin light colour creates better contrast and keeps drivers focused.

## Bright LED position lights

Try our Philips Ultinon Drive 2002L LED light bar with position lights, and you'll never go unnoticed on side roads or in parking areas.

## Built for tough environments

The Philips Ultinon Drive 2002L LED light bar is built to withstand tough conditions throughout your journey. It is shock-resistant (IK07-rated) to ensure faultless performance on and off the road, with an unbreakable polycarbonate lens. It can handle immersion in water (IP67-rated) to provide reliable illumination for your overland adventures, wherever your trail leads.

## Corrosion-free brackets

The mounting brackets for the Philips Ultinon Drive 2002L LED light bar are made of stainless steel, which is corrosion-free. They can withstand snow, ice and even salt. Built from durable, high-quality materials, your Philips auxiliary LED lights will provide years of reliable service.

## Road-legal LED lights

The Philips Ultinon Drive 2002L LED light bar meets ECE-R149 standards and is 100% road-legal for high-beam and position-light functions. For added safety, Philips LED light bars are tested to EMC R10 specification to ensure that they will function smoothly with your vehicle's electrical systems.



Issue date 2024-04-04

Version: 6.6.1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Beam length measured on 1 lux.